 


# OWNER'S MANUAL

---

Before operating, please read this manual completely.

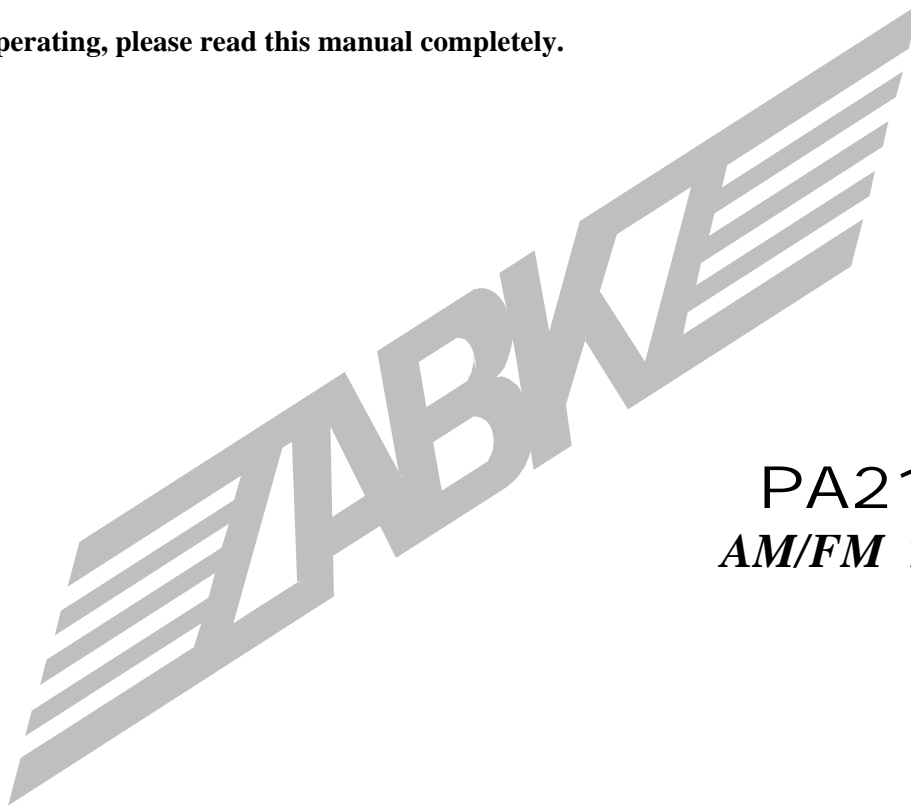


**PA2177R**  
**AM/FM TUNER**



## ***FEATURES***


- | Digital tuner with MPU control.**
- | Touch key and VFD display.**
- | 20 memories for each AM & FM.**
- | Auto save with auto station search.**
- | Level meter for audio output.**
- | Memory function after power dropped.**

## FRONT PANEL

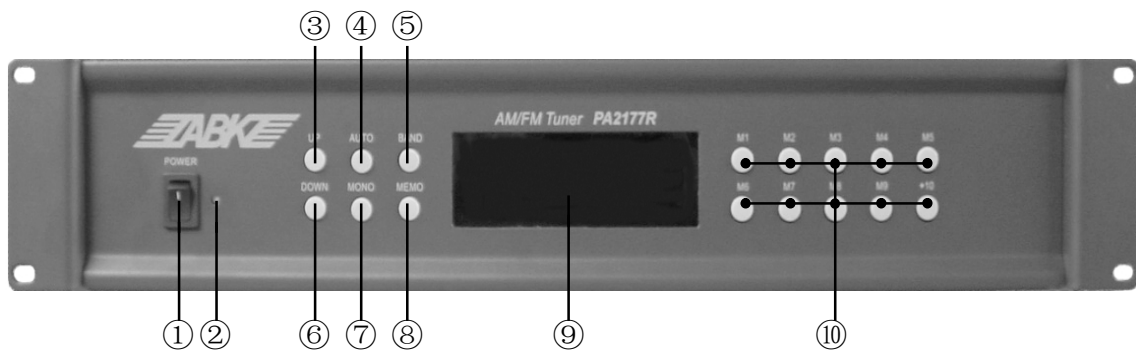


- ① Power switch(1 is power on and the “power LED” is on )
- ② Power LED indicator
- ③ Up keys
- ④ Auto keys
- ⑤ Band keys
- ⑥ Down keys
- ⑦ Mono keys
- ⑧ Memo keys
- ⑨ Display screen
- ⑩ M1~+10 Location keys

## REAR PANEL

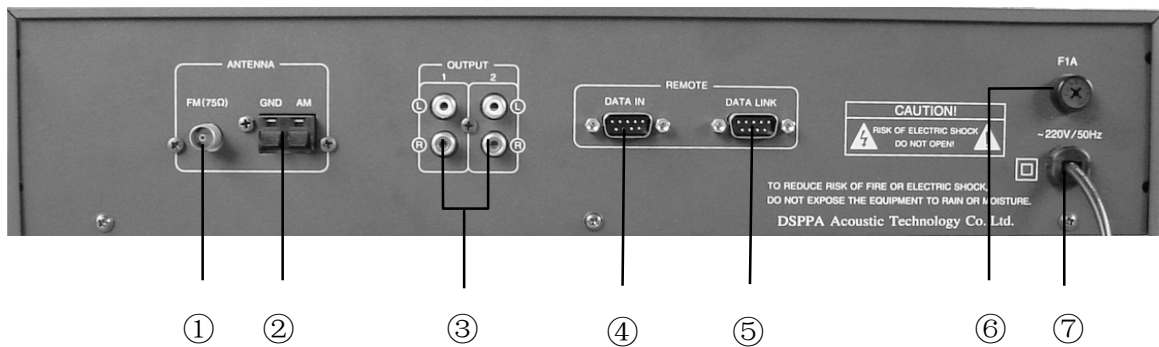 

- ① FM antenna jack
- ② AM antenna jack
- ③ Output jack
- ④ Remote input
- ⑤ Remote output
- ⑥ Fuse
- ⑦ Mains Cable

# CONNECTION

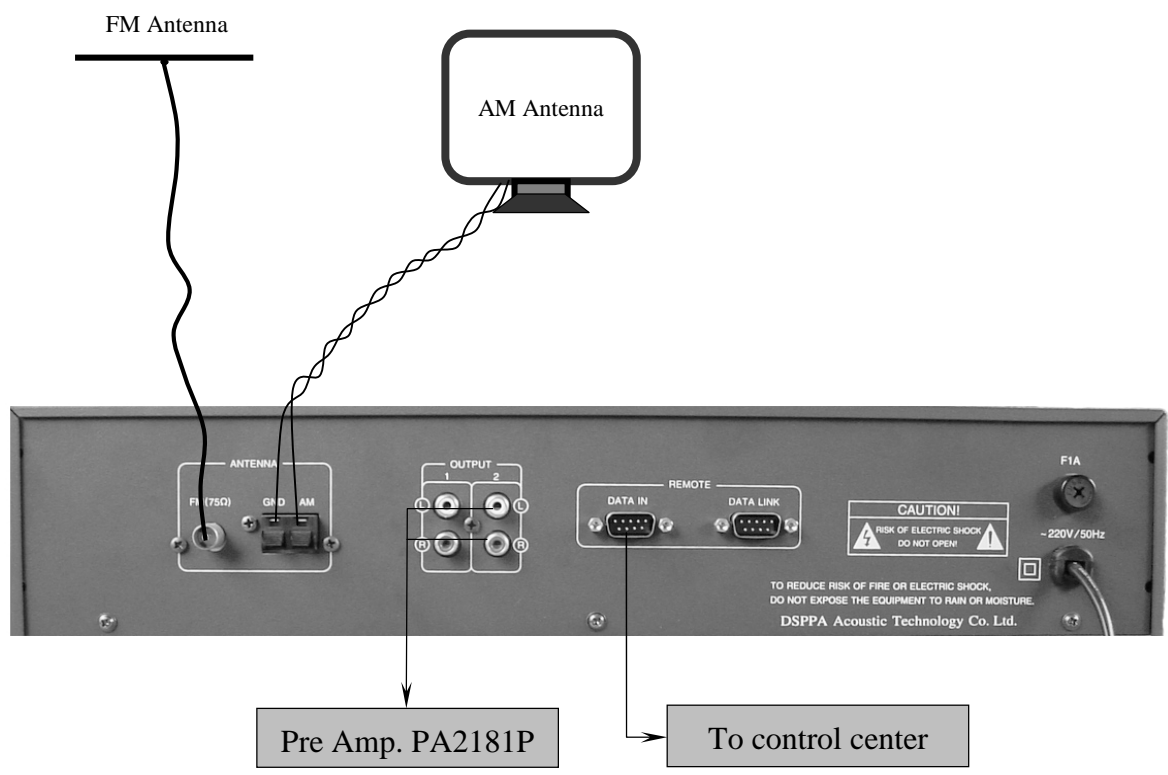 

# ***OPERATION***

## **1 Select a station**

**A Tuning in** Click BAND key for band selecting. Click UP or DOWN key for tuning step by step (FM: 50kHz/step, AM: 9 kHz/step). If keeping UP or DOWN pressed down for 1 second, it will search continuously until a station tuned in or don't in 30 seconds.

**B Calling out** Click BAND key for band selecting. Click one key of M1~+10 for calling out a station which stored in M1~M10. Press down M+10 key for 1 second with CH1\_ appears on the VFD screen, and then click one of M1~M9 for calling out the station stored in M11~M19. Press down M+10 key for 2 seconds for calling out the station stored in M20.

## **2 Save a station**

**A Save with auto search** Click BAND key for band selecting. Click AUTO key with the symbol "AUTO" flashing on the VFD screen, and then click UP or DOWN key for starting to search station from the lowest frequency to the highest frequency of the band or in reverse order. The stations received will be saved into the memories from M1 to M20 until searching to the end of the band or all memories filled up. The station stored in M1 will be called out when AUTO SEARCH comes to the end.

**B Save manually** Click MEMO key with the symbols "MEN" and "CH\_ \_" flashing on the VFD screen. Click one key of M1~M+10 as the way mentioned in section 1·B for memory selection and then click MEMO key once again to save the station received at present into the memory selected. The screen will resume to receiving mode when done.

## **3 Mono/Stereo switching**

Click MONO key in circle for switching between Stereo Mode and Mono Mode of the receiver. Stereo Mode is for FM only. The stereo function will be activated automatically with the symbol "STEREO" flashing in Stereo Mode while the FM stereo signal is strong enough. But the S/N of Mono Mode is better than that of Stereo Mode.

## **4 Remote with compute link**

This set can be controlled by a program manager of ZABKZ-PA series (or DSPPA-MP series and DSPPA-MAG series) via a link cord. For this purpose, fit a link cord from the Remote Link port of this set to the link port of the program manager. We can use the manager to make programs or timings for this set.

## ***SPECIFICATIONS***

<b>Band</b>	FM	87.0 ~ 108.0 MHz
	AM	522 ~ 1611 kHz
<b>Input Sensitivity</b>	FM	16dB $\mu$
	AM	49dB $\mu$
<b>S/N</b>	FM	Mono 75dB, Stereo 70 dB
	AM	40dB
<b>Freq. Step</b>	FM	50kHz
	AM	9kHz
<b>MF</b>	FM	10.7 MHz
	AM	450 kHz
<b>Output level</b>	0dB	
<b>Protection</b>	AC fuse $\times$ 1	
<b>Power Requirement</b>	AC 220 –240 V / 50~60 Hz	
<b>Dimensions</b>	485 $\times$ 88 $\times$ 378 mm	
<b>Gross weight</b>	6.5 kg	
<b>Net weight</b>	5.2 kg	

Specifications are subject to be changed without notice.

### **CAUTION**

- Do not put the vase full of water and similar things on the machine.
  - Please pull out the plug from the outlet when the machine is OFF state.
  - To reduce the risk of electric shock, do not remove the unit's cover.
- No user parts are inside. For services, refer to a qualified service person.