

# **OWNER'S MANUAL**




# **FEATURES**

- I 10CH inputs.
- I Volume control.
- A display screen is provided for the quick and easy visual monitoring of input level.
- I Build in monitor speaker.

1




# FRONT PANEL

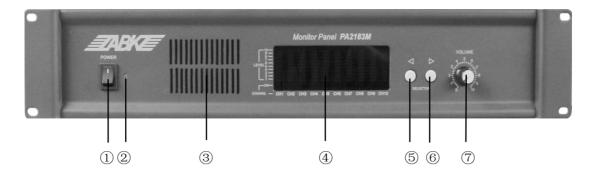


- ① Power switch
- ④ Display screen
- 7 Volume control
- ② Power LED indicator
- ⑤ Left shift key
- ③ Monitor Speaker
- 6 Right shift key

# **REAR PANEL**

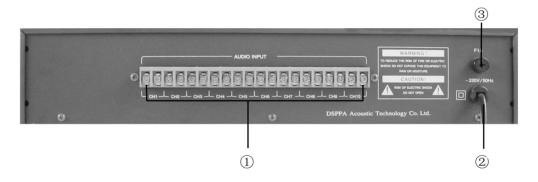

- ① 1~10CH input terminals
- ② AC Power cord
- 3 AC Fuse.

# **CONNECTIONS**

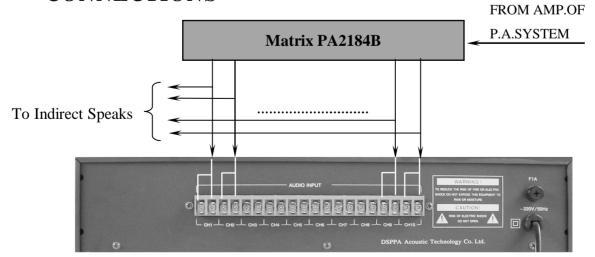

#### **OPERATION**

- 1 Make connections as shown above then turn on the power.
- 2 Select channel which you want to monitor with **Right shift key** or **Left shift key**. Speaker on the front panel will sound with a red LED lit.
- 3 Control the volume with **Volume controller** on front panel. The level of every channel doesn't regard the volume.

#### **SPECIFICATIONS**

Channels	10, switchable
Inputs	$70 \sim 100  \mathbf{V}$ , $10  \mathbf{k}  \Omega$
Output	65 dB SPL Variable
Frequency response	100 <b>Hz</b> 15 <b>kHz</b>
Signal to noise ratio	80 <b>dB</b>
Speak	Build in
Protection	$\mathbf{AC}$ fuse $\times 1$
Power Requirement	<b>AC</b> 220 −240 <b>V</b> / 50~60 <b>Hz</b>
Dimensions	485×88×378 <b>mm</b>
Gross weight	6.5 <b>kg</b>
Net weight	5.2 kg

Specifications are subject to be changed without notice.

#### **CAUTION**

- Do not put the vase full of water and similar things on the machine.
- Please pull out the plug from the outlet when the machine is OFF state.
- To reduce the risk of electric shock, do not remove the unit's cover.

No user parts are inside. For services, refer to a qualified service person.