

## Technical Specifications:

### DMX-16SW:

Power Input(DMX-16SW).....	DC 9V, 200 mA min.
DMX In.....	3-pin XLR male
DMX Output.....	3-pin XLR female
Dimensions.....	482x82x44mm
Weight.....	2.3kg
Accessories.....	An external Adaptor

### DP-415:

Power Input (DP-415).....	AC120V~60Hz, 15A Max.
DMX Output.....	3-pin XLR female
DMX Input.....	3-pin XLR male
Fuses (Internal).....	6A-250V 5x20mm (x 4pcs)
Dimensions.....	180 x177 x 64
Weight.....	1.4kg

### **\*Special Note:**

*Improvements and changes in specifications and design to this manual and the unit may be made at any time without any prior written notice.*



<https://muzcentre.ru>

P/N:24-004-2352-00  
Rev1.0

Elation Professional  
4295 Charter Street  
Los Angeles CA. 90058  
[www.elationlighting.com](http://www.elationlighting.com)



## DMX-16SW SYS

**DMX-16SW  
DMX Switch Controller**



**DP-415  
4 Channel DMX dimmer/switch pack**

## USER MANUAL

# Contents

## About the DMX-16SW SYS

Introduction.....	1
Unpacking.....	1
Customer Support.....	1
Caution.....	1
Warning.....	2
Connection & Setup.....	3,4

## DMX-16SW SYS Controller(DMX-16SW)


DMX-16SW features.....	5
Controls & Functions.....	5
Operation Guide.....	6

## DMX-16SW SYS Dimmer(DP-415)

Features.....	6
Controls & Functions.....	7,8
DMX Addressing.....	8,9

## Technical Specifications.....10

Dip switches 1-9 are in place so a DMX address can be assigned to the pack. Dip switch 10 functions as a mode switch that allows you to select how you want the pack to operate. When set to On, the pack will operate in "Switch" mode. When set to Off, the pack will operate in "Dimmer" mode.

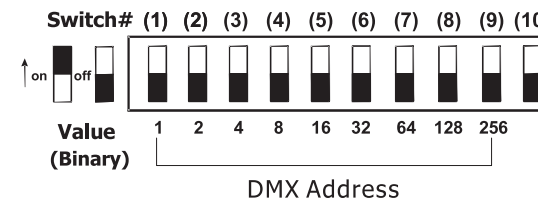

As the above illustration shows, each dip switch represents a DMX value. The top row of numbers is the dip switch number and the bottom row is the value for each dip switch. Simply flip the desired dip switch or switches to the ON position for which the binary values add up to your desired address. For example, if your trying to get to channel 17 you would flip dip switches 1 & 5 ON. See below for more help.

### Additional examples:

Dip Switch Setting	DMX Address
 (1) (2) (3) (4) (5) (6) (7) (8) (9) 1 2 4 8 16 32 64 128 256	1
 (1) (2) (3) (4) (5) (6) (7) (8) (9) 1 2 4 8 16 32 64 128 256	2
 (1) (2) (3) (4) (5) (6) (7) (8) (9) 1 2 4 8 16 32 64 128 256	3
 (1) (2) (3) (4) (5) (6) (7) (8) (9) 1 2 4 8 16 32 64 128 256	10

Dip Switch Setting	DMX Address
 (1) (2) (3) (4) (5) (6) (7) (8) (9) 1 2 4 8 16 32 64 128 256	15
 (1) (2) (3) (4) (5) (6) (7) (8) (9) 1 2 4 8 16 32 64 128 256	106
 (1) (2) (3) (4) (5) (6) (7) (8) (9) 1 2 4 8 16 32 64 128 256	259
.....	.....

The DMX indicator will flash when DMX signal is present.


### "Switch" / "Dimmer" mode selection:

Dip-switch 10 is the Mode selector switch. When set to "ON", the pack will be in switch mode. When set to "OFF" the pack is in linear dimming mode.

- In "Switch" mode, the channel output will have a switch point at value 128. This means when relevant channel is below value 128, there will be no output for that channel. When the value is at 128 or above, the output will be ON at 100% for the relevant channel.
- In "Dimmer" mode, the intensity for each channel could be adjusted from 0 to 100% in real time.

## Controls & Functions

### Rear panel view

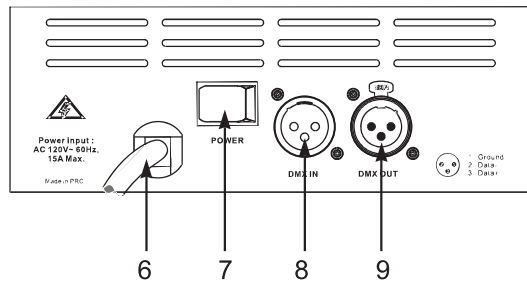

#### 6. Power input:

Plug into an AC 120V~60Hz outlet.

#### 7. Power Switch:

This switch turns the unit ON and OFF.


#### 8. DMX Input:

This 3-pin male XLR connector is the input and should be connected to a DMX controller or the previous DMX device in line.

#### 9. DMX Output:

This 3-pin female XLR connector is the output and should be connected to the next DMX device in line.

## DMX Addressing

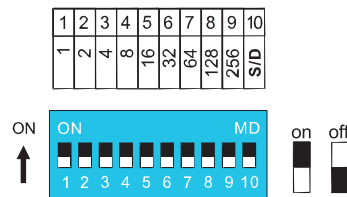

## About the DMX-16SW SYS

### Introduction:

Thank you for your purchasing of the Elation Professional DMX-16SW SYS. To optimize the performance of this product, please read these operating instructions carefully to familiarize yourself with the basic operation of this system. The Elation Professional DMX-16SW SYS is simple to use. All system components have been tested at the factory before being shipped to you. Please simply connect cables between your DP-415 and DMX-16SW, then you're ready to go!

### Unpacking:

The DMX-16SW SYS has been thoroughly tested and shipped in perfect working condition. Please take a few minutes to carefully inspect the system carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect each system component for damage, in the case that damage is found, please contact our customer support center, listed below, for further instructions. The Elation Professional DMX-16SW SYS carton should include the following:

- 1 DP-415
- 1 DMX-16SW
- 2 XLR DMX cable
- 1 External Adaptor
- 1 User's Manual

### Customer Support:

Every effort has been made to design dependable and reliable products. New products are constantly being designed to meet the needs of the entertainment lighting industry. Your comments regarding our products and services are welcome. Elation Professional will provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at [www.elationlighting.com](http://www.elationlighting.com) for any comments or suggestions. And please send us an e-mail to [info@elationlighting.com](mailto:info@elationlighting.com) and let us know how to improve to better serve you. It is both a privilege and a pleasure serving you.

Service Hours are Monday through Friday 8:00 a.m. To 5:00 p.m. Pacific Standard Time.

Voice:(800) 322-6337

Fax:(323) 582-2610

E-mail:[support@elationlighting.com](mailto:support@elationlighting.com)

### Caution!

There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufacturer's warranty. In the unlikely event your unit may require service, please contact your nearest Elation Professional dealer.

Do not discard this carton in the trash, please recycle when ever possible.


Upon unpacking, carefully inspect your unit for any damage that any have occurred during shipping. If damage may have occurred, do not plug the unit in, please contact your dealer as soon as possible.

## WARNINGS:

- Be sure to use a proper ground connection for all DP-415's.
- Do not remove or break off the ground prong from the electrical cord. The ground is used to reduce the risk of electrical shock for fire.
- Do not allow for any liquids to spill into or onto your unit.
- Be sure that the local power outlet match that of the required voltage for your unit.
- Do not attempt to operate this unit if the power supply cord has been frayed or broken. Be sure to route your power supply cord out of the way of foot traffic.
- Disconnect from main power before making any type of data connections.
- Do not remove the top cover under any condition. There are not user serviceable parts inside.
- Disconnect the unit's main power when left unused for long periods of time.
- Never plug this unit into a dimmer pack.
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6"(15mm) between this device and any surrounding walls or objects.
- Do not attempt to operate this unit , if it becomes damaged in any way.
- Never operate this unit when its cover is removed.
- To reduce the risk of electrical shock or fire, do not expose this unit rain or moisture.

## Controls & Functions

### Front panel view

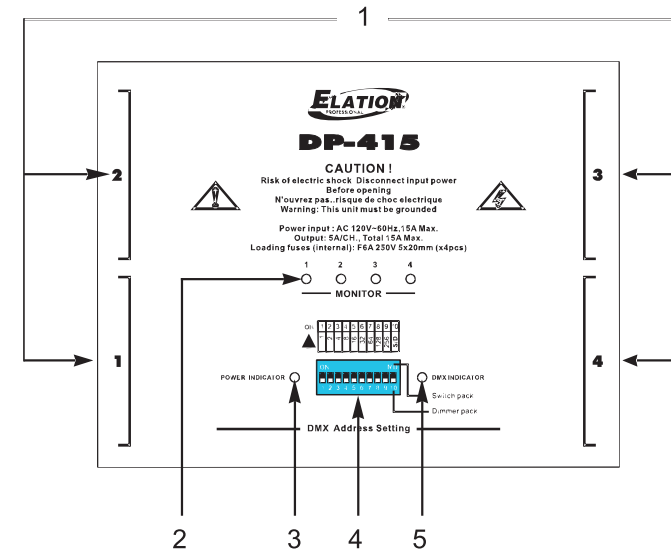

#### 1. Dual Edison Output sockets:

There are four dual Edison output sockets. Each socket is labeled with its relevant channel number. Each channel is rated at 5A. Up to 15A can be ON at a time.

#### 2. Channel output LEDs (1~4):

These four LED's indicate corresponding channel intensity.

#### 3. Power indicator:

This LED should be lit when the pack is powered ON.

#### 4. Dip-switches:

Dip switches 1-9 should be used to set the packs DMX address. Dip switch 10 should be used to set the packs operation mode. When set to On, the operates in "Switch" mode. When set to Off, the pack operates in "Dimmer" mode.

#### 5. DMX indicator:

This LED flashes when DMX signal is present.

## Operation Guide

1. The dip switches 1-9 are used to select the DMX start address, which are corresponding to the 16 channels.
2. Those 16 switches can shift between ON and OFF, which can be indicated by the corresponding LEDs. When a LED is on, it indicates the corresponding switch is in ON mode (the corresponding DMX value is 255); when a LED is off, it indicates the corresponding switch is in OFF mode (the corresponding DMX value is 0).
3. When the device is in HTP mode, that is in link condition, it outputs the bigger value between the inputted DMX 512 signal and the 16 channels value which corresponds to the device's address.

## DMX-16SW SYS Dimmer Pack(DP-415 )

The DP-415 is a hybrid, 4 channel pack designed to both dim and switch. Dip switch number 10 on the pack functions as the mode switch. When it's set to On, the pack will operate in "Switch" mode. When it's set to Off, the pack will operate in "Dimmer" mode. Whenever using these packs to control Par Cans or any other type of conventional effect (fixture with no transformer), dip switch 10 should be left OFF so to function in "Dimmer" mode. Each of the packs four channels can hold a load of up to 5 amps. This is roughly equal to 600 watts. It is very important to distribute the load evenly so to not blow a channel fuse. Each channel is internally protected with a 6amp, 250V midget fuse. Each channel also features dual Edison sockets so multiple lights can be plugged directly into the pack without having to use a tri-tap Or plug bar.

### Features:

- Compact 4 channel DMX dimmer/switch pack
- USITT DMX512 (1990) multiplexed digital control via 3-pin XLR connector
- Dual 15A Edison plugs per channel
- On/Off power switch
- 3-pin XLR In/Out
- 10 position dip switch setting
- Hanging bracket to hang on truss or rig to clamp
- LED power "ON" indicator
- Channel intensity LED indicators
- 5 Amps per channel, 15 Amps maximum ON at a time

## Connection & Setup

### Power Supply:

Before plugging your unit in, be sure the source voltage in your area matches the required voltage for the DMX-16SW SYS. Be sure to plug your power supply into a wall outlet with matching power before attempting to operate. And complete the system connection by using 3-pin Power/data extension cables.

### Data Cable (DMX Cable) Requirements:

Your controller and packs require a standard 3-pin XLR connector for DMX data input and DMX data output (Figure 1). If you are making your own cables be sure to use standard two conductor shielded cable (This cable may be purchased at almost all pro sound and lighting stores). Your cables should be made with a male and female XLR connector on either end of the cable. Also remember that DMX cable must be daisy chained and can not be "Y"ed or split.



Figure 1

**Notice:** Do not use the ground lug on the XLR connector. Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behavior.

**Notice:** Be sure to follow figures two and three when making your own cables.

 


Figure 2


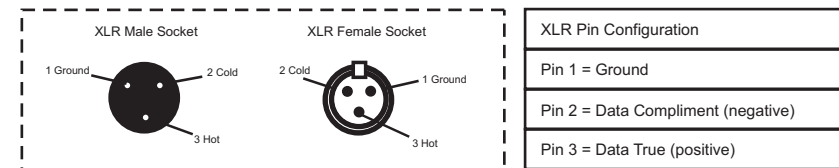


Figure 3

### Special Note: Line Termination.

 When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behavior. A terminator is a 120 ohm 1/4 watt resistor which is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This unit is inserted in the female XLR connector of the last unit in your daisy chain to terminate the line. Using a cable terminator will decrease the possibilities of erratic behavior.



**DMX Signal Cable.** 120 ohm impedance DMX signal cable **MUST** be used for signal connection.

## 5-Pin XLR DMX Connectors

Some manufactures use 5-pin XLR connectors for DATA transmission in place of 3-pin. 5-pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used, these adaptors are readily available at most electric stores. The chart below details a proper cable conversion.

3-Pin XLR to 5-Pin XLR Conversion		
Conductor	3-Pin XLR Female(Out)	5-pin XLR Male(In)
Ground/Shield	Pin 1	Pin 1
Data Compliment(-signal)	Pin 2	Pin 2
Data True(+signal)	Pin 3	Pin 3
Not Used		Pin 4 - Do Not Used
Not Used		Pin 5 - Do Not Used


## DMX-16SW SYS Controller(DMX-16SW)

### DMX-16SW features include:

- USITT DMX512(1990) multiplexed digital control, via 3 pin XLR connector
- 16 switches which can be switched between on and off
- Power Requirement: DC9V 200mA Min
- Dimensions: 482x82x44mm
- Weight: 2.3kg
- Power Failure Memory
- 10 position dip switch setting
- Accessories: An external Adaptor (Included)


### Controls & Functions:

#### Front View:

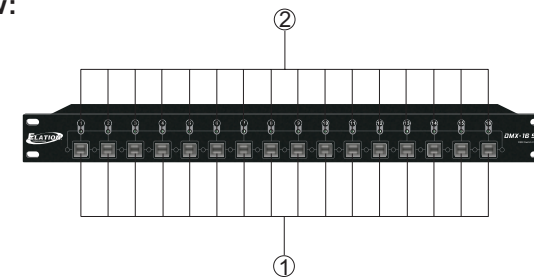

- ① Channel Switches: Control the output of the DMX 512 signal respectively.
- ② Channel LEDs: Indicate the corresponding channel switch's state, ON or OFF.

#### Rear View:

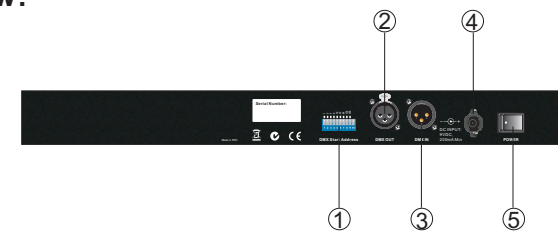

- ① Dip Switches: Select the initial channel setting mode.
- ② DMX Output Socket: Used to connect to DMX input socket of next unit.
- ③ DMX Input Socket: Used to connect DMX signals.
- ④ Power Supply Port: Used to connect the Adaptor.
- ⑤ Power Switch: When in power, put the power on or off.