


DIGITAL KEYBOARD


OWNER'S MANUAL

— **PSR-E373**

— **YPT-370**

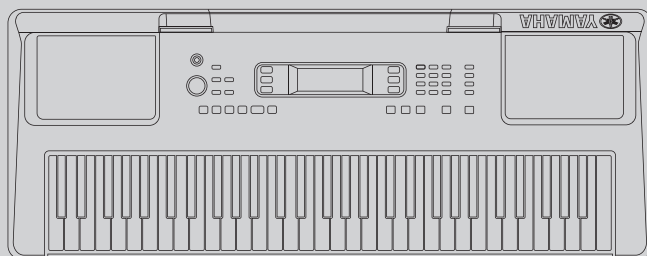

— **PSR-EW310**

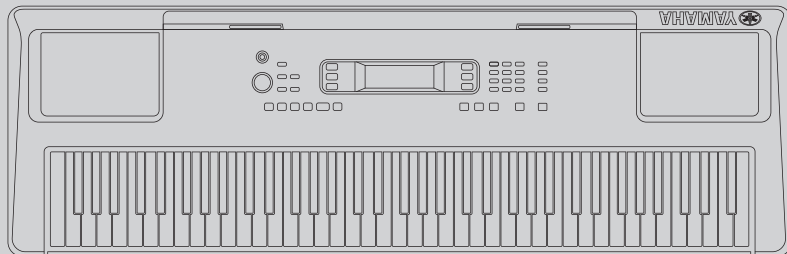

Before using the instrument, be sure to read
“PRECAUTIONS” on pages 5-7.

FCC INFORMATION (U.S.A.)

1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

2. IMPORTANT:

When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

3. NOTE:

This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices. Compliance with FCC regulations does not guarantee

that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to co-axial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America, Electronic Service Division, 6600 Orangethorpe Ave., Buena Park, CA90620

The above statements apply ONLY to those products distributed by Yamaha Corporation of America or its subsidiaries.

* This applies only to products distributed by Yamaha Corporation of America.

(class B)

COMPLIANCE INFORMATION STATEMENT (Supplier's declaration of conformity procedure)

Responsible Party : Yamaha Corporation of America
Address : 6600 Orangethorpe Ave., Buena Park, Calif. 90620
Telephone : 714-522-9011
Type of Equipment : Digital Keyboard
Model Name : PSR-E373, PSR-EW310, YPT-370

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received including interference that may cause undesired operation.

* This applies only to products distributed by Yamaha Corporation of America.

(FCC SDoC)


The model number, serial number, power requirements, etc., may be found on or near the name plate, which is at the bottom of the unit. You should note this serial number in the space provided below and retain this manual as a permanent record of your purchase to aid identification in the event of theft.

Model No. _____

Serial No. _____

(bottom_en_01)

For the AC adaptor

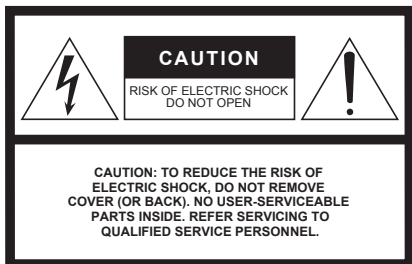

Explanation of Graphical Symbols



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

(UL60065_03)

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe and handy place for future reference.

For the AC adaptor



WARNING

- This AC adaptor is designed for use with only Yamaha electronic instruments. Do not use for any other purpose.
- Indoor use only. Do not use in any wet environments.



CAUTION

- When setting up, make sure that the AC outlet is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch of the instrument and disconnect the AC adaptor from the outlet. When the AC adaptor is connected to the AC outlet, keep in mind that electricity is flowing at the minimum level, even if the power switch is turned off. When you are not using the instrument for a long time, make sure to unplug the power cord from the wall AC outlet.

For the instrument



WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

Power supply/AC adaptor

- Do not place the power cord near heat sources such as heaters or radiators. Also, do not excessively bend or otherwise damage the cord, or place heavy objects on it.
- Only use the voltage specified as correct for the instrument. The required voltage is printed on the name plate of the instrument.
- Use the specified adaptor (page 85) only. Using the wrong adaptor can result in damage to the instrument or overheating.
- Check the electric plug periodically and remove any dirt or dust which may have accumulated on it.

Do not open

- This instrument contains no user-serviceable parts. Do not open the instrument or attempt to disassemble or modify the internal components in any way. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.

Water warning

- Do not expose the instrument to rain, use it near water or in damp or wet conditions, or place on it any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings. If any liquid such as water seeps into the instrument, turn off the power immediately and unplug the power cord from the AC outlet. Then have the instrument inspected by qualified Yamaha service personnel.
- Never insert or remove an electric plug with wet hands.

Fire warning

- Do not put burning items, such as candles, on the unit. A burning item may fall over and cause a fire.

Battery

- Follow the precautions below. Failure to do so might result in explosion, fire, overheating or battery fluid leakage.
 - Do not tamper with or disassemble batteries.
 - Do not dispose of batteries in fire.

- Do not attempt to recharge batteries that are not designed to be charged.
- Keep the batteries separate from metallic objects such as necklaces, hairpins, coins, and keys.
- Use the specified battery type (page 85) only.
- Use new batteries, all of which are the same type, same model, and made by the same manufacturer.
- Always make sure all batteries are inserted in conformity with the +/- polarity markings.
- When the batteries run out, or if the instrument is not to be used for a long time, remove the batteries from the instrument.
- When using Ni-MH batteries, follow the instructions that came with the batteries. Use only the specified charger device when charging.
- Keep batteries away from small children who might accidentally swallow them.
- If the batteries do leak, avoid contact with the leaked fluid. If the battery fluid should come in contact with your eyes, mouth, or skin, wash immediately with water and consult a doctor. Battery fluid is corrosive and may possibly cause loss of sight or chemical burns.

If you notice any abnormality

- When one of the following problems occur, immediately turn off the power switch and disconnect the electric plug from the outlet. (If you are using batteries, remove all batteries from the instrument.) Then have the device inspected by Yamaha service personnel.
 - The power cord or plug becomes frayed or damaged.
 - It emits unusual smells or smoke.
 - Some object has been dropped into the instrument.
 - There is a sudden loss of sound during use of the instrument.
 - If any cracks or breakages exist on the instrument.



CAUTION

Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the instrument or other property. These precautions include, but are not limited to, the following:

Power supply/AC adaptor

- Do not connect the instrument to an electrical outlet using a multipleconnector. Doing so can result in lower sound quality, or possibly cause overheating in the outlet.
- When removing the electric plug from the instrument or an outlet, always hold the plug itself and not the cord. Pulling by the cord can damage it.
- Remove the electric plug from the outlet when the instrument is not to be used for extended periods of time, or during electrical storms.

Location

- Do not place the instrument in an unstable position where it might accidentally fall over.
- Before moving the instrument, remove all connected cables, to prevent damage to the cables or injury to anyone who might trip over them.
- When setting up the product, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch and disconnect the plug from the outlet. Even when the power switch is turned off, electricity is still flowing to the product at the minimum level. When you are not using the product for a long time, make sure to unplug the power cord from the wall AC outlet.

- Use only the stand specified for the instrument. When attaching it, use the provided screws only. Failure to do so could cause damage to the internal components or result in the instrument falling over.

Connections


- Before connecting the instrument to other electronic components, turn off the power for all components. Before turning the power on or off for all components, set all volume levels to minimum.
- Be sure to set the volumes of all components at their minimum levels and gradually raise the volume controls while playing the instrument to set the desired listening level.

Handling caution

- Do not insert a finger or hand in any gaps on the instrument.
- Never insert or drop paper, metallic, or other objects into the gaps on the panel. This could cause physical injury to you or others, damage to the instrument or other property, or operational failure.
- Do not rest your weight on, or place heavy objects on the instrument, and do not use excessive force on the buttons, switches or connectors.
- Do not use the instrument/device or headphones for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.

Yamaha cannot be held responsible for damage caused by improper use or modifications to the instrument, or data that is lost or destroyed.

Always turn the power off when the instrument is not in use.

Even when the [] (Standby/On) switch is in standby status (display is off), electricity is still flowing to the instrument at the minimum level.

When you are not using the instrument for a long time, make sure you unplug the power cord from the wall AC outlet.

Make sure to discard used batteries according to local regulations.

NOTICE

To avoid the possibility of malfunction/ damage to the product, damage to data, or damage to other property, follow the notices below.

■ Handling

- Do not use the instrument in the vicinity of a TV, radio, stereo equipment, mobile phone, or other electric devices. Otherwise, the instrument, TV, or radio may generate noise. When you use the instrument along with an application on your smart device such as a smartphone or tablet, we recommend that you set "Airplane Mode" to on on that device in order to avoid noise caused by communication.
- Depending on the condition of surrounding radio waves, the instrument may possibly malfunction.
- Do not expose the instrument to excessive dust or vibrations, or extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day) to prevent the possibility of panel disfiguration, damage to the internal components or unstable operation. (Verified operating temperature range: 5° – 40°C, or 41° – 104°F.)
- Do not place vinyl, plastic or rubber objects on the instrument, since this might discolor the panel or keyboard.
- Do not press the LCD screen with your finger because it is a sensitive, precision-made part. Doing so might cause an appearance abnormality, such as a stripe on the LCD, although this abnormality should disappear again within a short time.

■ Maintenance

- When cleaning the instrument, use a soft cloth. Do not use paint thinners, solvents, alcohol, cleaning fluids, or chemical-impregnated wiping cloths.

■ Saving data

- Some of the data of this instrument (page 51) are retained when the power is turned off. However, the saved data may be lost due to some failure, an operation mistake, etc. Save your important data onto an external device such as a computer (page 50).

Information

■ About copyrights

- Copying of the commercially available musical data including but not limited to MIDI data and/or audio data is strictly prohibited except for your personal use.
- This product incorporates and bundles contents in which Yamaha owns copyrights or with respect to which Yamaha has license to use others' copyrights. Due to copyright laws and other relevant laws, you are NOT allowed to distribute media in which these contents are saved or recorded and remain virtually the same or very similar to those in the product.
 - * The contents described above include a computer program, Accompaniment Style data, MIDI data, WAVE data, voice recording data, a score, score data, etc.
 - * You are allowed to distribute medium in which your performance or music production using these contents is recorded, and the permission of Yamaha Corporation is not required in such cases.

■ About functions/data bundled with the instrument

- Some of the preset songs have been edited for length or arrangement, and may not be exactly the same as the original.
- The bitmap fonts used in this instrument have been provided by and are the property of Ricoh Co., Ltd.

■ About this manual

- The illustrations and LCD screens as shown in this manual are for instructional purposes only, and may appear somewhat different from those on your instrument.
- iPhone, iPad are trademarks of Apple Inc., registered in the U.S. and other countries.
- The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

About the Manuals

In addition to this Owner's Manual, the following Online materials (PDF files) are available.



Drum Kit List

This contains detailed information of the Drum Kit Voices (Voice No. 242-263; page 70). When you select these Voices, various drum, percussion and SFX sounds listed here are assigned to each key.



MIDI Reference

This contains MIDI-related information, such as the MIDI Implementation Chart.



Computer-related Operations

This contains instructions about computer-related functions.



Smart Device Connection Manual

This explains how to connect the instrument to smart devices, such as smartphones, tablet devices, etc.

To obtain these manuals, access the Yamaha Downloads, and then enter the model name for searching the desired files.

Yamaha Downloads <https://download.yamaha.com/>

NOTE

- For a general overview of MIDI and how you can effectively use it, search for "MIDI Basics" (only in English, German, French and Spanish) on the website above.



Song Book (only in English, French, German and Spanish)

This contains music scores for the preset Songs (excluding the Demo Songs) of this instrument.

To obtain this SONG BOOK, access the Yamaha website and download it from the product web page.

Yamaha Global Site <https://www.yamaha.com>

Included Accessories

- Owner's Manual (this book)
- AC adaptor*
- Music rest
- Online Member Product Registration

* May not be included depending on your particular locale. Check with your Yamaha dealer.

Formats and functions



GM System Level 1

"GM System Level 1" is an addition to the MIDI standard which ensures that any GM-compatible music data can be accurately played by any GM-compatible tone generator, regardless of manufacturer. The GM mark is affixed to all software and hardware products that support GM System Level.



XGlite

As its name implies, "XGlite" is a simplified version of Yamaha's high-quality XG tone generation format. Naturally, you can play back any XG song data using an XGlite tone generator. However, keep in mind that some songs may play back differently compared to the original data, due to the reduced set of control parameters and effects.



Style File Format (SFF)

The Style File Format combines all of Yamaha's auto accompaniment know-how into a single unified format.



USB

USB is an abbreviation for Universal Serial Bus. It is a serial interface for connecting a computer with peripheral devices. It allows "hot swapping" (connecting peripheral devices while the power to the computer is on).



Touch Response

The exceptionally natural Touch Response feature gives you maximum expressive control over the level of the Voices.

Thank you for purchasing this Yamaha Digital Keyboard!
This instrument is loaded with various sounds, preset Songs and may convenient functions—
so that even beginners can enjoy playing it right away.
We recommend that you read this manual carefully so that you can fully take advantage of the
advanced and convenient functions of the instrument.
We also recommend that you keep this manual in a safe and handy place for future reference.

Contents

About the Manuals.....	8
Included Accessories.....	8
Formats and functions.....	8

Setting Up

Panel Controls and Terminals	10
---	-----------

Setting Up	12
-------------------------	-----------

Power Requirements.....	12
Turning the Power On.....	13
Setting the Auto Power Off function.....	13
Adjusting the Master Volume.....	14
Connecting Headphones or External Speaker.....	14
Using a Pedal.....	14
Using the music rest.....	14

Display Items and Basic Operations	15
---	-----------

Display Items.....	15
Basic Operations.....	15

Reference

Playing a Variety of Instrument Voices	16
---	-----------

Selecting a Main Voice.....	16
Playing the “Grand Piano”.....	16
Using the Metronome.....	16
Layering a Dual Voice.....	17
Playing a Split Voice in the Left Hand area.....	17
Changing the Touch Response of the Keyboard.....	18
Applying Effects to the Sound.....	18
Adding Harmony or Arpeggio.....	20

Playing the keyboard with two persons (Duo mode)	22
---	-----------

Playing Rhythm and Accompaniment (Style)	23
---	-----------

Fingering Type.....	23
Setting the Fingering Type.....	23
Setting the Smart Chord Key.....	23
Playing Styles.....	24
Style Variations.....	25
Chord Types for Style Playback.....	26
Chords Heard When Smart Chord is Selected.....	27
Looking Up Chords Using the Chord Dictionary.....	28
Using the Music Database.....	29
Registering a Style File.....	29
Changing the Tempo.....	30

Playing Songs	31
----------------------------	-----------

Listening to a Demo Song.....	31
Selecting and Playing Back a Song.....	31
BGM Playback.....	32
Song Fast Forward, Fast Reverse, and Pause.....	32
Changing the Melody Voice.....	32
A-B Repeat.....	33
Turning Each Part On/Off.....	33
Playing songs loaded from a computer to this instrument.....	33

Using the Song Lesson Feature	34
--	-----------

Keys To Success.....	35
Phrase Repeat.....	37
Listening, Timing and Waiting.....	38

Learning How to Use “Touch” Control (Touch Tutor)	40
--	-----------

Hearing and Experiencing the Sound of the Chords (Chord Study)	41
---	-----------

Hear and experience a sound of a single chord.....	41
Hear and experience basic chord progressions.....	41

Playing Chords along with Chord Progressions of a Song	42
---	-----------

Play the chords in combination with “Waiting” of the Lesson function.....	42
--	----

Recording Your Performance	43
---	-----------

Track Structure of a Song.....	43
Quick Recording.....	43
Recording to a Specified Track.....	44
Clearing a User Song.....	44

Memorizing Your Favorite Panel Settings	45
--	-----------

Recalling Panel Settings from the Registration Memory.....	45
Memorizing Panel Settings to the Registration Memory.....	46
Deleting the Registration Memory.....	46
Disabling Recall of Specific Items (Freeze).....	46

Selecting an EQ Setting for your Favorite Sound	47
--	-----------

Playing an Device with the Built-in Speakers	48
---	-----------

Lowering the volume of a melody part (Melody Suppressor function).....	49
---	----

Using with a Computer or Smart Device	50
--	-----------

Connecting to a computer.....	50
Connecting a Smart Device.....	50

Backup and Initialization	51
--	-----------

Backup Parameters.....	51
Initialization.....	51

The Functions	52
----------------------------	-----------

Appendix

Troubleshooting	56
------------------------------	-----------

Song Book Sample	58
-------------------------------	-----------

Voice List	68
-------------------------	-----------

Standard Kit 1 List	74
----------------------------------	-----------

Song List	75
------------------------	-----------

Style List	76
-------------------------	-----------

Music Database List	78
----------------------------------	-----------

Effect Type List	80
-------------------------------	-----------

Specifications	84
-----------------------------	-----------


Index	86
--------------------	-----------

Panel Controls and Terminals

Front Panel

NOTE

- The illustrations and displays as shown in this manual are based on the PSR-E373.
- Please note that the PSR-EW310, PSR-E373 and YPT-370 have different numbers of keys: the PSR-EW310 has 76 keys, and the PSR-E373 and YPT-370 have 61 keys.

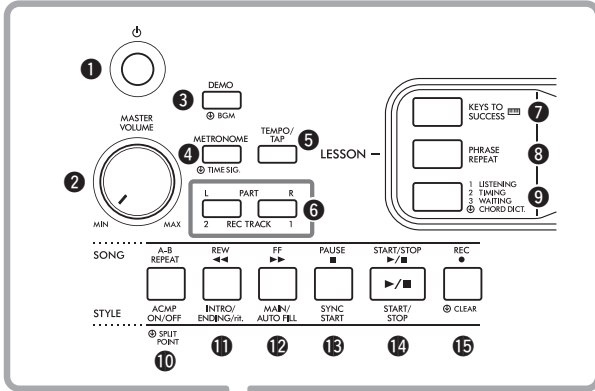


Style List
(page 76)

Song List
(page 75)

Display
(page 15)


Voice List
(page 68)

Music Database List
(page 78)

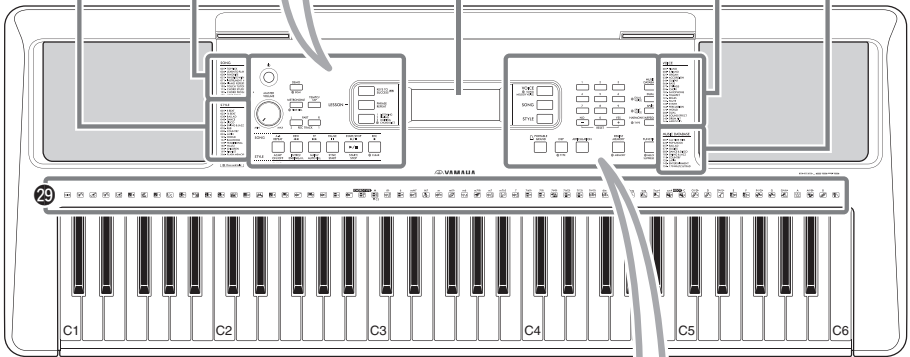

As illustrated, each note of the keyboard has a specific note number and name (e.g., 036/C1), which is used in making various settings, such as Split Point (page 24).

PSR-E373, YPT-370: 036 (C1) – 096 (C6)
PSR-EW310: 028 (E0) – 103 (G6)

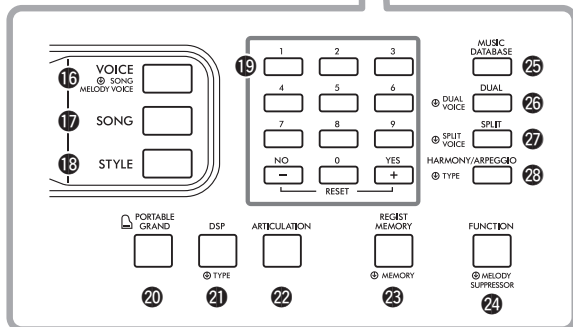

- 1 [⏻] (Standby/On) switch page 13
- 2 [MASTER VOLUME] dial page 14
- 3 [DEMO] button page 31
- 4 [METRONOME] button page 16
- 5 [TEMPO/TAP] button page 30

In the Lesson mode

- 6 PART
 - [L] button page 38
 - [R] button page 38

In the Recording mode

- 6 [REC TRACK 2] button page 43
- [REC TRACK 1] button page 43

- 7 [KEYS TO SUCCESS] button page 35
- 8 [PHRASE REPEAT] button page 37
- 9 [1 LISTENING 2 TIMING 3 WAITING] button
..... page 38

In the Song mode

- 10 [A-B REPEAT] button page 33
- 11 [REW] button page 32
- 12 [FF] button page 32
- 13 [PAUSE] button page 32



In the Style mode

- 10 [ACMP ON/OFF] button page 24
- 11 [INTRO/ENDING/rit.] button page 25
- 12 [MAIN/AUTO FILL] button page 25
- 13 [SYNC START] button page 24

- 14 [START/STOP] button page 31
- 15 [REC] button page 43
- 16 [VOICE] button page 16
- 17 [SONG] button page 31
- 18 [STYLE] button page 24
- 19 Number buttons [0]–[9], [+ / YES], [- / NO] ... page 15
- 20 [PORTABLE GRAND] button page 16
- 21 [DSP] button page 18
- 22 [ARTICULATION] button page 19
- 23 [REGIST MEMORY] button page 45
- 24 [FUNCTION] button page 52
- 25 [MUSIC DATABASE] button page 29
- 26 [DUAL] button page 17
- 27 [SPLIT] button page 17
- 28 [HARMONY/ARPEGGIO] button page 20
- 29 Drum illustrations for the Drum Kit page 16

Each of these indicates the drum or percussion instrument assigned to the corresponding key for "Standard Kit 1."

Rear Panel

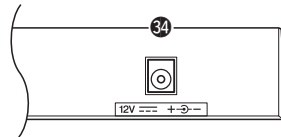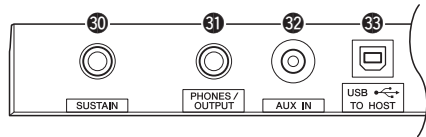


- 30 [SUSTAIN] jack page 14
- 31 [PHONES/OUTPUT] jack page 14
- 32 [AUX IN] jack page 48
- 33 [USB TO HOST] terminal* page 50
- * For connecting to a computer. For details, refer to "Computer-related Operations" (page 8) on the website. When connecting, use an AB type USB cable of less than 3 meters. USB 3.0 cables cannot be used.
- 34 DC IN jack page 12

Panel Setup (Panel Settings)

By using the controls on the panel, you can make various settings as described here. These settings of the instrument are together referred to as "panel setup" or "panel settings" in this manual.

The "Press and hold" Symbol

 Buttons having this indication can be used to call up an alternate function when the relevant button is pressed and held. Hold down this button until the function is called up.


Setting Up

Power Requirements

Although the instrument will run either from an AC adaptor or batteries, Yamaha recommends use of an AC adaptor whenever possible. An AC adaptor is more environmentally friendly than batteries and does not deplete resources.

Using an AC Adaptor

Connect the AC adaptor in the order shown in the illustration.

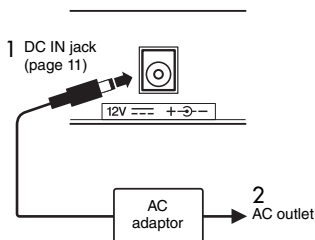


WARNING

- Use the specified AC adaptor (page 85) only. Using the wrong AC adaptor can result in damage to the instrument or overheating.

WARNING

- When using the AC adaptor with a removable plug, make sure to keep the plug attached to the AC adaptor. Using the plug alone can cause electric shock or fire.
- If the plug is accidentally removed from the AC adaptor, slide it back in until it clicks into place, taking care to avoid touching any internal metal parts. To avoid electric shock, short circuit or damage, also be careful that there is no dust between the AC adaptor and plug.

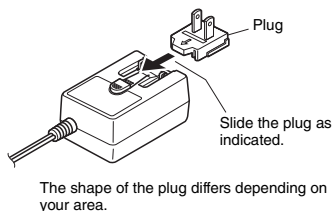

CAUTION

- When setting up the product, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn the power off and disconnect the plug from the outlet.

NOTE

- Follow the order shown above in reverse when disconnecting the AC adaptor.


Using Batteries

This instrument requires six “AA” size, Alkaline (LR6)/Manganese (R6) batteries, or rechargeable nickel-metal hydride batteries (rechargeable Ni-MH batteries). The Alkaline batteries or rechargeable Ni-MH batteries are recommended for this instrument, since other types may result in poorer battery performance.


WARNING

- When the batteries run out, or if the instrument is not to be used for a long time, remove the batteries from the instrument.

- 1 Make sure that the power of the instrument is off.
- 2 Open the battery compartment cover located on the instrument's bottom panel.

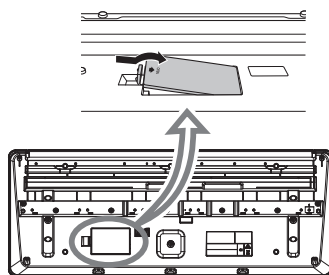

- 3 Insert the six new batteries, being careful to follow the polarity markings on the inside of the compartment.

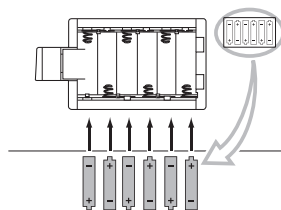

- 4 Replace the compartment cover, making sure that it locks firmly in place.

Make sure to set the battery type correctly (page 13).

NOTICE

- Connecting or disconnecting the AC adaptor with batteries installed may turn the power off, resulting in loss of data being recorded or transferred at the time.
- When battery power becomes too low for proper operation, the volume may be reduced, the sound may be distorted, and other problems may occur. When this happens, make sure to replace all batteries with new ones or already recharged ones.

NOTE

- This instrument cannot charge the batteries. Use only the specified charger device when charging.
- Power will be automatically drawn from the AC adaptor if an AC adaptor is connected while batteries are installed in the instrument.

■ Setting the battery type


Depending on the battery type to be used, you may need to change the battery type setting on this instrument. Alkaline (and manganese) batteries are chosen by default. After installing new batteries and turning the power on, make sure to set the Battery Type appropriately (rechargeable or not) via Function number 061 (page 55).

NOTICE

- Failure to set the battery type may shorten the amount of the battery life. Make sure to set the battery type correctly.

Turning the Power On

- 1 Turn down the [MASTER VOLUME] dial to "MIN."

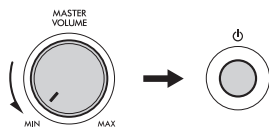

- 2 Press the [⏻] (Standby/On) switch to turn the power on. The Voice name appears on the display. Adjust the volume as desired while playing the keyboard.
- 3 Press and hold the [⏻] (Standby/On) switch for about a second to set the instrument to standby mode.

⚠ CAUTION

- Even when the [⏻] (Standby/On) switch is in standby status, electricity is still flowing to the product at the minimum level. Remove the electric plug from the outlet when the instrument is not to be used for extended periods of time, or during electrical storms.

NOTICE

- Press only the [⏻] (Standby/On) switch when turning the power on. Any other operations such as pressing the pedal are not allowed. Doing so may cause the instrument to malfunction.

Setting the Auto Power Off function

To prevent unnecessary power consumption, this instrument features an Auto Power Off function that automatically turns the power off if the instrument is not operated for a specified period of time. The amount of time that elapses before the power is automatically turned off is 30 minutes by default; however, you can change the setting.

■ To set the time that elapses before Auto Power Off is executed:

Press the [FUNCTION] button several times until "AutoOff" (Function 060; page 55) appears, then use the [+ / YES] or [- / NO] button to select the desired value.

Settings: OFF, 5, 10, 15, 30, 60, 120 (minutes)

 
Default value: 30 (minutes)

■ To disable the Auto Power Off function:

Turn the power on while holding down the lowest key on the keyboard. A message "oOff AutoOff" appears briefly, then the instrument starts up with the Auto Power Off function disabled. The Auto Power Off function also can be disabled by selecting Off in Function number 060 (page 55).

PSR-E373, YPT-370

The lowest key

**PSR-EW310****NOTICE**

- Depending on the instrument status, the power may not turn off automatically, even after the elapse of the specified period of time. Always turn off the power manually when the instrument is not in use.
- When the instrument is not operated for a specified period of time while connected to an external device such as an amplifier, speaker or computer, make sure to follow the instructions in the Owner's Manual to turn off the power to the instrument and the connected devices, in order to protect the devices from damage. If you do not want the power to turn off automatically when a device is connected, disable Auto Power Off.

NOTE

- Generally, the data and settings are maintained even when the power is turned off with the Auto Power Off function. For details, see page 51.

Adjusting the Master Volume


To adjust the volume of the entire keyboard sound, use the [MASTER VOLUME] dial while playing the keyboard.



CAUTION

- Do not use the instrument for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss.

Connecting Headphones or External Speaker

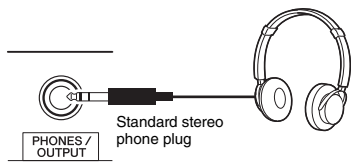

Connect a pair of headphones to the [PHONES/OUTPUT] jack. This jack also functions as an external output. By connecting to a computer, keyboard amplifier, recorder, or other audio device, you can output the audio signal of this instrument to that external device. The speakers of this instrument are automatically shut off when a plug is inserted into this jack.

CAUTION

- Do not use the instrument or headphones for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss.
- Before connecting the instrument to other electronic components, turn off the power of all the components. Also, before turning any components on or off, make sure to set all volume levels to minimum. Otherwise, damage to the components or electrical shock may occur.


NOTICE

- To avoid possible damage to the external device, first turn on the power to the instrument, then to the external device. When turning off the power, do so in reverse order: first turn off the power to the external device, then to the instrument.

NOTE

- When connecting the headphones or external speaker to the instrument, set the Master EQ (page 47) to "2 Headphone." The Master EQ can be set in Function settings (page 53; Function 025).

Using a Pedal

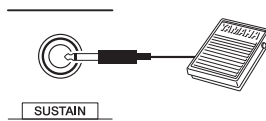


You can control three functions: Sustain, Articulation (page 19), and Arpeggio (page 21) as you play by pressing a footswitch (FC5 or FC4A; sold separately) plugged into the [SUSTAIN] jack. By default, Sustain is assigned, so that the sound can be heard for a long time even if you take your finger off the keyboard while pressing the foot switch, like a damper pedal on a piano. To use a function other than Sustain, use the function settings (Function 029; page 53).

NOTE

- Plug or unplug the footswitch while the power is off. Also, do not press the footswitch when turning the power on. Doing so changes the polarity of the footswitch, resulting in reversed operation.
- The sustain function does not affect split voices (page 17) and style (automatic accompaniment; page 23).

Using the music rest

Insert the music rest into the slots as shown.

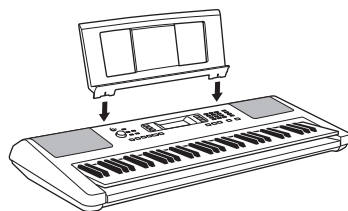

Display Items and Basic Operations

Display Items

Function status

- HARMONY** Harmony (page 20)
- ARPEGGIO** Arpeggio (page 20)
- DUAL** Dual (page 17)
- SPLIT** Split (page 17)
- DSP** DSP (page 18)
- DUO** Duo (page 22)
- S.Art Lite** Articulation (page 19)

Voice/Song/Style

- VOICE** Voice selection mode
- SONG** Song mode
- STYLE** Style mode

VOICE is not displayed alone. It is always displayed with **SONG** or **STYLE**.

appears for functions whose settings can be changed with the numeric buttons and [+ / YES] / [- / NO] buttons.

Registration Memory

REGIST

1 2 3
4 5 6
7 8 9

(page 45)

Touch Indication

TOUCH

Touch Response (page 18)

Strength Meter

is a meter that lights up according to the strength with which you play the keyboard. (pages 18, 40)

represents the target strength when practicing with songs in the "Touch Tutor" category. (page 40)

Lesson Indication

This area indicates the Lesson related status is on.

Keys To Success (page 35)

PHRASE

Phrase Repeat (page 37)
Chord Progression (page 42)

★★★
Indicates the Passing Status (page 36) of the Keys To Success lesson.

The illustration is of the PSR-E373.

Chord

Indicates the chord which is played on the Auto Accompaniment range (page 24) of the keyboard, or specified via Song playback.

Measure or Function

Normally indicates the current measure number of the current Style or Song. When the [FUNCTION] button (page 52) is in use, this indicates the Function number.

Beat

Indicates the current beat of playback.

Keyboard Display

Indicates notes currently being played. Indicates the melody and chord notes of a Song when the Song lesson function is in use. Also indicates the notes of a chord—either when playing a chord or when using the Dictionary function.

Song Track status

Indicates the on/off status of Song playback or target Track of Song recording (pages 33, 44).

L R

R Lit: Track contains data

R Unlit: Track is muted or contains no data

Flashing: Track is selected as recording track

A-B Repeat

Appears when the A-B Repeat function is active. (page 33)

Auto Accompaniment

Appears when the Auto Accompaniment function is on. (page 24)

Basic Operations

Before operating the instrument, it may be helpful to familiarize yourself with the basic controls below that are used to select items and change values.

■ Number buttons

Use the Number buttons to directly enter an item or value. For numbers that start with one or two zeroes, the first zeroes can be omitted.

Example: Selecting Voice 003, Bright Piano.

Press number buttons [0], [0], [3], or simply press [3].

■ [-/NO] and [+ / YES] buttons

Press the [+ / YES] button briefly to increase the value by 1, or press the [- / NO] button briefly to decrease the value by 1. Press and hold either button to continuously increase or decrease the value in the corresponding direction.

Press briefly to decrease.

Press briefly to increase.


Playing a Variety of Instrument Voices

In addition to piano, organ, and other “standard” keyboard instruments, this instrument has a large range of Voices that includes guitar, bass, strings, sax, trumpet, drums and percussion, and even sound effects—giving you a wide variety of musical sounds.

Selecting a Main Voice

1 Press the [VOICE] button.

The Voice number and name will be shown.

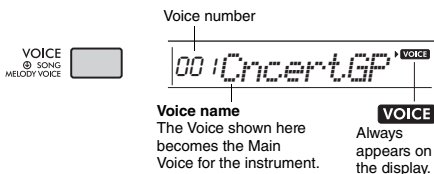

NOTE

- VOICE is not displayed alone. It is always displayed with SONG or STYLE. Refer to page 15.

2 Use the number buttons [0]–[9], [+YES], [-/NO] buttons to select the desired Voice.

Refer to the Voice List on page 68.



Select the Voice you want to play

3 Play the keyboard.



Preset Voice Types

001–241	Instrument Voices (including sound effects).
242–263 (Drum Kit)	Various drum and percussion sounds are assigned to individual keys, from which they can be played. Details on the instruments and key assignments of each Drum Kit can be found in the Standard Kit 1 List on page 74 and “Drum Kit List” on the website (page 8).
264–283	Arpeggios are automatically reproduced by simply playing the keyboard (page 20).
284–622	XGlite Voices (page 71)
000	One Touch Setting The One Touch Setting feature automatically selects the most suitable Voice when you select a Style or Song (excepting the Song inputted from other devices). Simply select Voice number “000” to activate this feature.

Playing the “Grand Piano”

When you want to reset various settings to default and simply play a Piano sound, press the [PORTABLE GRAND] button.



The Voice “001 Live!ConcertGrandPiano” will automatically be selected as the Main Voice.

Using the Metronome

The instrument features a built-in metronome (a device that keeps an accurate tempo), convenient for practicing.

1 Press the [METRONOME] button to start the metronome.



2 Press the [METRONOME] button again to stop the metronome.

To change the tempo:

Press the [TEMPO/TAP] button to call up the Tempo value, then use the number buttons [0]–[9], [+YES], [-/NO].



Current Tempo value

Press the [+YES] and [-/NO] buttons simultaneously to instantly reset the value to the default tempo.

To set the Time Signature:

Press and hold the [METRONOME] button to call up “TimeSigN” (Functions 030; page 54), then use the number buttons, [+YES] and [-/NO] buttons.

 
To set the Metronome Volume:

This can be set via Function number 032 (page 54).


Layering a Dual Voice

In addition to the Main Voice, you can layer a different Voice over the entire keyboard as a “Dual Voice.”

1 Press the [DUAL] button to turn Dual on.



2 Play the keyboard.

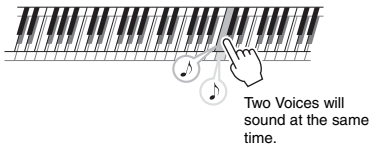

3 Press the [DUAL] button again to exit from Dual.

To select a different Dual Voice:


 
Although turning on Dual will select a Dual Voice suitable for the current Main Voice, you can easily select a different Dual Voice by pressing and holding the [DUAL] button to call up “D.Voice” (Function 008; page 53), then using the number buttons [0]–[9], [+ / YES], [- / NO].

Playing a Split Voice in the Left Hand area

By dividing the keyboard into the two separate areas, you can play a different Voice between the Left hand and Right hand areas.

1 Press the [SPLIT] button to turn on Split.


The keyboard is divided into the Left hand and Right hand areas.

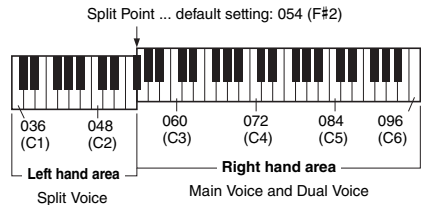

You can play a “Split Voice” on the Left hand area of the keyboard while playing a Main Voice and Dual Voice on the Right hand area of the keyboard.

The highest key for the Left hand area is referred to as the “SplitPnt” (Function 003; page 52) which can be changed from the default F#2 key.

 2 Play the keyboard.



3 Press the [SPLIT] button again to exit from Split.

To select a different Split Voice:

 
 
Press and hold the [SPLIT] button to call up “S.Voice” (Function 012; page 53), then use the number buttons [0]–[9], [+ / YES], [- / NO].

Changing the Touch Response of the Keyboard

The keyboard of this instrument is equipped with a Touch Response feature that lets you dynamically and expressively control the level of the Voices according to your playing strength.

1 Press the [FUNCTION] button several times until “TouchRes” (Function 004; page 52) appears.

After a few seconds, the current Touch Response appears.



[TOUCH] Appears when the Touch Response is not “Fixed.”

2 Use the number buttons [1]–[4], [+ /YES], [- /NO] buttons to select a Touch Response setting between 1 and 4.


Touch Response


1	Soft	Produces relatively high volume even with light playing strength. Best for players with a light touch who want to maintain a consistent, relatively loud volume.
2	Medium	Produces a fairly “standard” keyboard response.
3	Hard	The keys must be played very strongly to generate loud volume. This setting is best for a wide dynamic range and optimum expressive control of the sound, from pianissimo to fortissimo.
4	Fixed	All notes are produced at the same volume no matter how hard the keyboard is played.

3 Play the keyboard.

The strength meter will light according to the strength with which you play the keyboard.

When you play softly. 

When you play at medium strength. 

When you play strongly. 

[NOTE]

• When the Touch Response is “Fixed”, the strength meter is at fixed medium strength.

Applying Effects to the Sound

This instrument can apply various Effects as listed below to the instrument’s sound.

● DSP

The DSP (digital signal processor) is an effect in which digital signal processing is applied to the sound to change it.

When a Voice or Song that features a recommended DSP processing is selected, the DSP effect is applied to the Main Voice and Song part. DSP effect has effect variations, called DSP types. Please refer to page 82.

You can also turn the DSP on / off and change the DSP type using the following procedure.

1 Press the [DSP] button to turn on the DSP.

[NOTE]

- The DSP effect is only applied to the main voice. The DSP effect is not applied to voices added by the Dual function or voices in the left hand area that have been split.
- The DSP cannot be turned on during lessons.

When the DSP is turned on, the DSP type (page 82) appropriate for the current panel setting is automatically selected, but you can also select it yourself.




[DSP] Appears when the DSP is on.

2 Hold down the [DSP] button for longer than a second. After a few seconds, the current DSP type appears.



Hold for longer than a second.

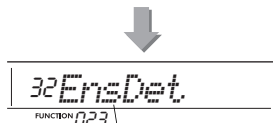

Current DSP type

3 Use the number buttons [0]–[9], [+ /YES], [- /NO] buttons to select the desired type.

4 Play the keyboard.

5 Press the [DSP] button again to turn off the DSP.

● **Articulation**

Articulation is an effect that reproduces the sounds of playing methods that are unique to specific instruments.

The Articulation effect is applied to the sound only while holding down the [ARTICULATION] button. The Articulation effect is enabled only for S.Art Lite Voices (Super Articulation Lite Voices). The S.Art Lite Voices are indicated by “****” in Voice List (page 68).

Examples of the Articulation effect

If you select a guitar voice, you can realistically reproduce the following guitar-specific playing techniques.

Example: Voice number 044 “S.Art Lite Nylon Guitar Harmonics”

If you play the keyboard while holding down the [ARTICULATION] button, a harmonics sound is produced.

Example: Voice number 048 “S.Art Lite Distortion Guitar”

If you press the [ARTICULATION] button, a scratch-noise is produced.


When S.Art Lite Voices are selected, the appropriate articulation effect is automatically selected.

When other Voices are selected, the modulation effect is automatically selected.

Appears when the S.Art Lite Voice is selected



- 1 Press the [ARTICULATION] button while playing the keyboard.

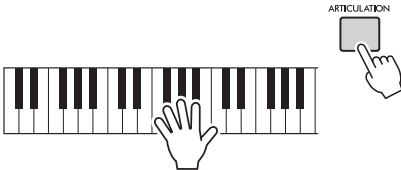

- 2 Release the [ARTICULATION] button to turn Articulation off.

Adding the Articulation effect by using the pedal

If you assign the Articulation function to the pedal (foot switch) with “PdIFunc” (Function 029; page 53), you can apply the effect by pressing on the pedal.

NOTE

- The Articulation effect is applied only to a Main Voice.
- S.Art Lite Voices sound differently depending on the velocity, etc.

● **Reverb**

Adds the ambience of a club or concert hall to the sound. Although the best-suited Reverb type is called up by selecting a Song or Style, you can select another one via Function number 020 (page 53). When you select “oFF,” the Reverb effect is turned off. And you can also set the Reverb depth via Function number 021 (page 53).

● **Chorus**

Makes the Voice sound richer, warmer and more spacious. Although the best-suited Chorus type is called up by selecting a Song or Style, you can select another one via Function number 022 (page 53). When you select “oFF,” the Chorus effect is turned off. You can also set the Chorus depth for Voices via Function numbers 007 (page 52), 011, 015 (page 53).

The Chorus depth cannot be applied to the Styles or Songs.

● **Sustain**

By turning on the Sustain parameter of Function number 024 (page 53), you can add a fixed, automatic sustain to the Main/Dual Voices played on the keyboard. Or, you can produce a natural sustain as desired with the footswitch (sold separately; page 14).

NOTE

- Even if you turn on Sustain, there are some Voices to which sustain is not applied.


Adding Harmony or Arpeggio

You can add harmony or arpeggio notes to the Voice played on the keyboard.

By specifying the Harmony Type, you can apply harmony parts, such as duet or trio, or add tremolo or echo effects to the played sound of the Main Voice.

Also, when the Arpeggio Type is selected, arpeggios (broken chords) are automatically played back when you simply play the appropriate notes on the keyboard. For example, you could play the notes of a triad—the root, third, and fifth—and the Arpeggio function will automatically create a variety of interesting phrases. This feature can be used creatively in music production as well as performance.

- 1 Press the [HARMONY/ARPEGGIO] button to turn on the Harmony or Arpeggio function.

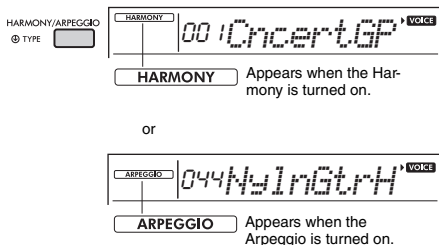

When the Harmony or the Arpeggio is turned on, the most suitable one will be selected for the current Main Voice.


If you want to select a specific type, select it by the operation steps 2 and 3 below.

NOTE

- The Harmony effect can be added to only the Main Voice.
- When selecting a Voice number between 264 and 283, the Arpeggio function will automatically be turned on.
- When selecting a Harmony Type between 001 and 005, the harmony effect will only be added to your right-hand melody play if you turn on the Style (page 24) and press chords in the auto accompaniment range of the keyboard.

- 2 Hold down the [HARMONY/ARPEGGIO] button for longer than a second so that “Harm/Arp” (Functions 026; page 53) appears on the display.

After “Harm/Arp” is shown for a few seconds, the current type appears.

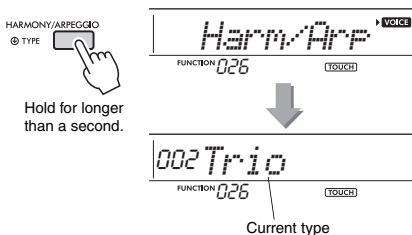

- 3 Use the number buttons [0]–[9], [+ / YES], [- / NO] buttons to select the desired type.

When you want to specify a Harmony Type, refer to the Harmony Type list on page 80; to specify an Arpeggio Type, refer to the Arpeggio Type list on page 81.

NOTE

- When playing one of the Arpeggio Types 143 to 176, select the corresponding Voice below as the Main Voice. 143–173: Select a Drum Kit (Voice No.242–252). 174 (China): Select “StdKit1 + Chinese Perc.” (Voice No.253). 175 (Indian): Select “Indian Kit 1” (Voice No.254) or “Indian Kit 2” (Voice No.255). 176 (Arabic): Select “Arabic Kit” (Voice No.259).

- 4 Press a note or notes on the keyboard to trigger the Harmony or Arpeggio.

When a Harmony Type is selected, a harmony part (for example, duet or trio) or an effect (for example, tremolo or echo) can be added to the played sound of the Main Voice.

Also, when an Arpeggio Type is selected, arpeggios (broken chords) are automatically played back when you simply play the appropriate notes on the keyboard. The particular arpeggio phrase differs depending on the number of pressed notes and the area of the keyboard.



- 5 To turn the Harmony or Arpeggio off, press the [HARMONY/ARPEGGIO] button again.

How to play the various Types

The method of sounding the Harmony effect (01–26) differs depending on the selected type. For Types 01–05, turn the Auto Accompaniment on and play it by pressing a chord in the auto accompaniment section of the keyboard, then play some keys in the right-hand side to produce the Harmony effect. For Types 06–26, turning auto accompaniment on or off has no effect. However, it is necessary to play two notes simultaneously for Types 06–12.

- Harmony Type 001 to 005



Press the right-hand keys while playing chords in the auto accompaniment range of the keyboard when Auto Accompaniment is on (page 24).

- Harmony Type 006 to 012 (Trill)



Hold down two keys.

- Harmony Type 013 to 019 (Tremolo)



Keep holding down the keys.

- Harmony Type 020 to 026 (Echo)



Play the keys.

- Arpeggio Type 027 to 176

When Split is off:



Arpeggio function applies to the Main Voice and the Dual Voice.

When Split is on:



Arpeggio function applies only to the split Voice.

NOTE

- Arpeggio cannot be applied to the Split and Main/Dual Voices simultaneously.
- Selecting a Voice number between 274 and 283 as the Main Voice will turn on Arpeggio and Split automatically.

To adjust the Harmony Volume:

This can be adjusted via Function number 027 (page 53).

To adjust the Arpeggio Velocity:

This can be adjusted via Function number 028 (page 53).

Holding the Arpeggio Playback via the Footswitch (Hold)

You can set the instrument so that Arpeggio playback continues even after the note has been released, by pressing the footswitch connected to the [SUSTAIN] jack.

- 1 Press a [FUNCTION] button a number of times until the “PdIFunc” (Function 029; page 53) item appears on the display.

After “PdIFunc” is shown for a few seconds, the current setting is shown.



- 2 Use the number buttons [1]–[3], [+ /YES], [- /NO] buttons to select “Arp Hold.”

If you want to restore the footswitch function to sustain, select “Sustain.” If you want to use both hold and sustain functions, select “Sus+ArpH.”



- 3 Try playing the keyboard with Arpeggio playback using the footswitch.

Even if you release the notes, Arpeggio playback will continue. To stop Arpeggio playback, release the footswitch.

Playing the keyboard with two persons (Duo mode)


When the Duo mode is activated on this instrument, two different players can play the instrument simultaneously, with the same sound, over the same octave range—one person on the left and the other on the right. This is useful for learning applications, in which one person (a teacher, for example) plays a model performance and the other person watches and practices while sitting at the first person's side.

1 Press a [FUNCTION] button several times until the “DuoMode” (Function 048; page 55) item appears on the display.

2 Use the [+ / YES] button to select “on.”
The F#3 key becomes the Duo Split Point and the keyboard is divided into two sections: one for the left Voice and one for the right Voice.



DUO Appears when the Duo is turned on.

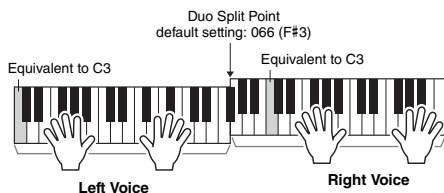

NOTE

- The right Voice section and the left Voice section of the keyboard are both set to the same Voice (Main Voice).
- The Duo Split Point can be changed via Function number 050 (page 55) by holding down the [ACMP ON/OFF] button for longer than a second.

3 One person should play the left Voice section of the keyboard while the other plays the right Voice section.

4 To exit from Duo mode, select “oFF” via “DuoMode” (Function 048; page 55) by executing steps 1 and 2.

Changing the Left Voice

To change only the Left Voice, select the desired Left Voice with “DuoLVc” (Function 049; page 55). If the Left Voice is different from the Right Voice, the Right Voice is shown on the display.

NOTE

- Certain functions such as Lesson, Harmony/Arpeggio and Dual cannot be used in the Duo mode.

How sounds are output in the Duo mode

The performance sound of the left Voice will sound from the left speaker, and the performance sound of the right Voice will sound from the right speaker, in the initial Duo mode setting. This output setting can be changed from the “DuoType” setting (Function 055; page 55).

NOTE

- In the Duo mode, the pan, volume and tonal characteristics of the stereo sound may differ from those in the normal mode, due to the setting of DuoType = “Separate” (page 55). Particularly with Drum Kits, the difference may be more obvious, since each key of a Drum Kit features a different stereo pan position.

Using sustain in the Duo mode

Sustain can be applied to the left and right Voice sections in Duo mode just as it normally is by using one of the following methods in the Duo mode like the usual mode.

- Press the foot switch (page 14) connected to the [SUSTAIN] jack.
- Set “Sustain” (Function 024; page 53) to on. Sustain is applied to all notes.

NOTE

- Sustain cannot be applied independently to the left Voice section and the right Voice section.
- While Sustain is on, the setting of hold is maintained even when the power is turned off.

Playing Rhythm and Accompaniment (Style)

This instrument includes an Auto Accompaniment feature that automatically plays appropriate “Styles” (rhythm + bass + chord accompaniment), controlled simply by playing root notes or chords with your left hand.

You can select how you want to play the chords from two ways: “SmartChord,” which lets you play chords by playing a key with only one finger, and “Multi,” which lets you play them normally, with all the constituent notes.

Fingering Type

When playing the Styles, specify how to play chords in the Auto Accompaniment range via “FingType” (“Fingering Type” Function 017; page 53). With this instrument, you can choose from two fingering types.

● “SmartChord” (Default setting)

You can play the Style by playing only the root note of a chord.

● “Multi”

This is a way to play the Style by playing all notes of a chord. However, major, minor, seventh, and minor sevenths can also be easily played by pressing one to three keys.

For information about chords, refer to “Chord Types for Style Playback” (page 26) or use the Chord Dictionary function (page 28).

Setting the Fingering Type

1 Press the [FUNCTION] button several times until “FingType” (Function 017; page 53) appears.

“FingType” is shown in the display for a few seconds, followed by the current Fingering Type.

FingType
FUNCTION 017



SmartChrd
FUNCTION 017

2 Use the number buttons [0]-[9] or [+ / YES] and [- / NO] buttons to select “SmartChrd” or “Multi.”

3 Press the [STYLE] button to exit from the Fingering Type settings.

Setting the Smart Chord Key

If “SmartChd” is selected in the “FingType,” you need to set the keys of the Songs you want to play in advance. The specified key is called the Smart Chord Key.

1 Press the [FUNCTION] button until “S.ChdKey” (Function 018; page 53) appears.

The current Smart Chord Key appears.

SPS ChdKey
FUNCTION 018

2 Press the [+ / YES] and [- / NO] buttons to select the smart chord key that matches the score.

For example, when you want to play the music score below, you need to set the Smart Chord Key to “FL2” (2 flats) (page 27).




3 Press the [STYLE] button to exit from the Smart Chord Key settings.


Playing Styles

- 1 Press the [STYLE] button, then use the number buttons [0]–[9], [+ / YES], [- / NO] to select the desired Style.


The Style List is provided on the front panel, or in the Style List (page 76).

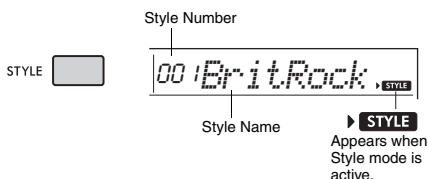

- 2 Press the [ACMP ON/OFF] button to turn on the Auto Accompaniment.

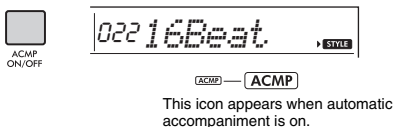

With this operation, the area of the keyboard to the left of the Split Point (054: F#2) becomes the “Auto Accompaniment range” and is used only for specifying the chords.

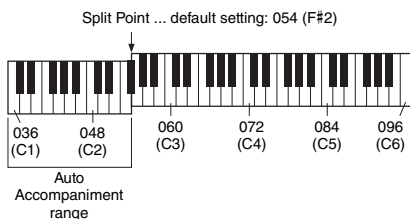

You can change the Split Point via Function number 003 (page 52) by holding down the [ACMP ON/OFF] button for longer than a second.

NOTE

- The strength meter (page 18) does not respond to playing in the Auto Accompaniment range.

- 3 Press the [SYNC START] button to turn Synchro Start on.


This puts the Style playback in “standby” and Style starts playing back when you play the keyboard.



Flashes when sync start is on.

- 4 Play a key in the Auto Accompaniment range to start playback.

If “SmartChd” is selected, play the root note of a chord with your left hand. If “Multi” is selected, refer to page 26 for instructions on how to play. Play a melody with the right hand and chords with the left hand.

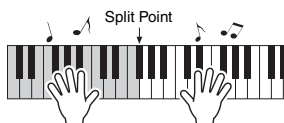

- 5 Press the [START/STOP] button to stop playback.



You can add intro, ending and rhythm variations to Style playback by using “Sections.” For details, refer to page 25.

To play back the rhythm part only

If you press the [START/STOP] button (without pressing the [ACMP ON/OFF] button in step 2), only the rhythm part can be played back, and you can play a melody performance using the entire keyboard range.

NOTE

- Since the Pianist category Styles (197–205) have no rhythm parts, no sound will be produced if you start rhythm-only playback. When playing these Styles, make sure to carry out Steps 2–4 on this page.

Adjusting the Style Volume

To adjust the volume balance between Style playback and keyboard, you can adjust the Style Volume. This can be set via Function number 016 (page 53).

Style Variations

Each Style consists of "Sections" that allow you to vary the arrangement of the accompaniment to match the song you are playing.



● INTRO

This is used for the beginning of the Song. When the Intro finishes, Style playback shifts to the Main section. The length of the Intro (in measures) differs depending on the selected Style.

● MAIN

This is used for playing the main part of the Song. Playback of the Main section repeats indefinitely until another Section's button is pressed. There are two variations (A and B), and the Style playback sound changes harmonically in response to the chords you play with your left hand.

● AUTO FILL

This is automatically added before changing to Main A or B.

● ENDING

This is used for the ending of the Song. When the Ending finishes, the Style playback stops automatically. The length of the Ending (in measures) differs depending on the selected Style.

1-3

Same as Steps 1-3 in page 24.

4 Press the [MAIN/AUTO FILL] button to select Main A or Main B.



5 Press the [INTRO/ENDING/rit.] button.




Now, you're ready to start Style playback from the Intro section.

6 Play a chord with your left hand to start playback of the Intro.

For example, play a C major chord.

For information on how to enter chords, refer to page 26.

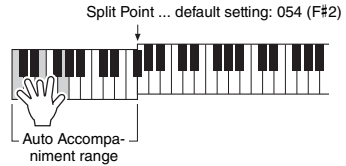

7 After the Intro finishes, play the keyboard according to the progression of the Song you are playing.

Play chords with your left hand while playing melodies with your right hand, and press the [MAIN/AUTO FILL] button as necessary. The Section will change to Fill-in then Main A or B.



8 Press the [INTRO/ENDING/rit.] button.



The Section switches to the Ending. When the Ending is finished, Style playback stops automatically. You can have the Ending gradually slow down (ritardando) by pressing the [INTRO/ENDING/rit.] button again while the Ending is playing back.

Chord Types for Style Playback

For users who are new to chords, this chart conveniently shows how to play common chords in the Auto Accompaniment range of the keyboard. Since there are many useful chords and many different ways to use them musically, refer to commercially available chord books for further details.

When Multi is selected, play the notes that make up the chord in the automatic accompaniment range. When Smart Chord is selected, play the root note “★” in the automatic accompaniment range.

★ indicates the root note.

Major	Minor	Seventh	Minor Seventh	Major Seventh
C 	Cm 	C7 	Cm7 	CM7
D 	Dm 	D7 	Dm7 	DM7
E 	Em 	E7 	Em7 	EM7
F 	Fm 	F7 	Fm7 	FM7
G 	Gm 	G7 	Gm7 	GM7
A 	Am 	A7 	Am7 	AM7
B 	Bm 	B7 	Bm7 	BM7

- Inversions can be used as well as in “root” position—with the following exceptions:
m7, m7♯5, m7(11), 6, m6, sus4, aug, dim7, 7♯5, 6(9), sus2
- Inversions of the 7sus4 chords are not recognized if the notes are omitted.
- When playing a chord which cannot be recognized by this instrument, nothing is shown on the display. In such a case, only a specific part, such as the rhythm, will be played.

When “Multi” is selected, major, minor, seventh, and minor sevenths can also be easily played by pressing one to three keys.

Easy Chords for root “C”



To play a major chord
Press the root note (★) of the chord.



To play a minor chord
Press the root note together with the nearest black key to the left of it.



To play a seventh chord
Press the root note together with the nearest white key to the left of it.



To play a minor seventh chord
Press the root note together with the nearest white and black keys to the left of it (three keys altogether).

Chords Heard When Smart Chord is Selected

When you select Smart Chord and set Smart Chord Key based on the composition of the score (page 23), play the root note in the automatic accompaniment range. This lets you hear the respective chords below.

Key Signature on the music score	Smart Chord Key (Display)	Root Note													
		D \flat			E \flat			F \sharp			G \sharp			B \flat	
		C	D	E	F	G	A	B							
	FL7	C dim	D \flat m	D dim7	E \flat 1+5	E	F dim	F \sharp 7	G	G \sharp m	A	B \flat m7 \flat 5	B		
	FL6	C dim	D \flat 7	D	E \flat m	E	F m7 \flat 5	F \sharp	G dim	G \sharp m	A dim7	B \flat 1+5	B		
	FL5	C m7 \flat 5	D \flat	D dim	E \flat m	E dim7	F 1+5	F \sharp	G dim	G \sharp 7	A	B \flat m	B		
	FL4	C 1+5	D \flat	D dim	E \flat 7	E	F m	F \sharp	G m7 \flat 5	G \sharp	A dim	B \flat m	B dim7		
	FL3	C m	D \flat	D m7 \flat 5	E \flat	E dim	F m	F \sharp dim7	G 1+5	G \sharp	A dim	B \flat 7	B		
	FL2	C m	D \flat dim7	D 1+5	E \flat	E dim	F 7	F \sharp	G m	G \sharp	A m7 \flat 5	B \flat	B dim		
	FL1	C 7	D \flat	D m	E \flat	E m7 \flat 5	F	F \sharp dim	G m	G \sharp dim7	A 1+5	B \flat	B dim		
No key signature	SP0 (Default)	C	D \flat dim	D m	E \flat dim7	E 1+5	F	F \sharp dim	G 7	G \sharp	A m	B \flat	B m7 \flat 5		
	SP1	C	D \flat dim	D 7	E \flat	E m	F	F \sharp m7 \flat 5	G	G \sharp dim	A m	B \flat dim7	B 1+5		
	SP2	C	D \flat m7 \flat 5	D	E \flat dim	E m	F dim7	F \sharp 1+5	G	G \sharp dim	A 7	B \flat	B m		
	SP3	C dim7	D \flat 1+5	D	E \flat dim	E 7	F	F \sharp m	G	G \sharp m7 \flat 5	A	B \flat dim	B m		
	SP4	C	D \flat m	D	E \flat m7 \flat 5	E	F dim	F \sharp m	G dim7	G \sharp 1+5	A	B \flat dim	B 7		
	SP5	C dim	D \flat m	D dim7	E \flat 1+5	E	F dim	F \sharp 7	G	G \sharp m	A	B \flat m7 \flat 5	B		
	SP6	C dim	D \flat 7	D	E \flat m	E	F m7 \flat 5	F \sharp	G dim	G \sharp m	A dim7	B \flat 1+5	B		
	SP7	C m7 \flat 5	D \flat	D dim	E \flat m	E dim7	F 1+5	F \sharp	G dim	G \sharp 7	A	B \flat m	B		

NOTE

- The "1+5" chord indication on the instrument's display is the same as that of a major chord.

Looking Up Chords Using the Chord Dictionary

The Dictionary function is useful when you know the name of a certain chord and want to quickly learn how to play it.


1 Press and hold the [1 LISTENING 2 TIMING 3 WAITING] button for longer than a second to call up “Dict.”

“Dict.” will appear in the display.




This operation will divide the entire keyboard into the three ranges as illustrated below.

- The range to the right of “**ROOT**”:
Lets you specify the Chord Root, but produces no sound.
- The range between “**CHORD TYPE**” and “**ROOT**”:
Lets you specify the Chord Type, but produces no sound.
- The range to the left of “**CHORD TYPE**”:
Lets you play and confirm the Chord specified in the above two ranges.

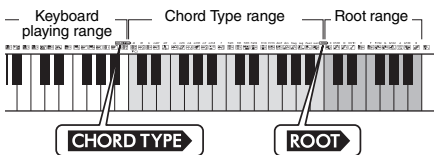


2 As an example, learn how to play a GM7 (G major seventh) chord.

- 2-1. Press the “G” key in the section to the right of “**ROOT**” so that the “G” is shown as the root note.

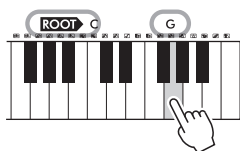

- 2-2. Press the key labeled “M7” in the section between “**CHORD TYPE**” and “**ROOT**.”
The notes you should play for the specified chord are shown in the keyboard display.

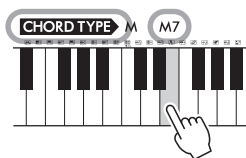

Chord name (root and type)



Individual notes of chord (keyboard)

- To call up possible inversions of the chord, press the [+]/[YES]/[-]/[NO] buttons.

NOTE

- About major chords: Simple major chords are usually indicated only by the root note. For example, “C” refers to C major. However, when specifying major chords here, make sure to select “M” (major) after pressing the root note.
- These chords are not shown in the Chord Dictionary function: 6(9), M7(9), M7(#11), b5, M7b5, M7aug, m7(11), mM7(9), mM7b5, 7b5, sus2

3 Following the notation and keyboard diagram in the display, try playing a chord in the range to the left of “**CHORD TYPE**.”

When you’ve played the chord properly, a bell sound signals your success and the chord name in the display flashes.

4 To exit from the Chord Dictionary mode, press one of these buttons; [VOICE], [SONG] or [STYLE].

Using the Music Database

If you have difficulty finding and selecting the desired Style and Voice, use this feature. From the Music Database, just selecting the favorite music genre calls up the ideal settings.

1 Press the [MUSIC DATABASE] button.

Both the Auto Accompaniment and Synchro Start are automatically turned on.



2 Use the number buttons [0]–[9], [+ / YES], [- / NO] to select the desired Music Database.

This operation calls up the panel settings such as Voice and Style that are registered to the selected Music Database. The category name of Music Database List is provided on the front panel, or in the Music Database List (page 78).

3 Play the keyboard as described in Steps 4–5 on page 24.

 
Registering a Style File

Style data created on another instrument or computer can be registered (loaded) to Style numbers 206–215, and you can play them just the same as the internal preset Styles.

1 Transfer the Style file (***.STY) from a computer to this instrument by connecting this instrument and the computer.

For instructions, refer to “Computer-related Operations” (page 8) on the website.

2 Press the [FUNCTION] button several times until “StyleReg” (Function 057; page 55) appears.



After about two seconds, a registerable Style file name will appear in the display.

3 If necessary, select the desired Style by using the [+ / YES] or [- / NO] button.

4 Press the [0] button.

As the Load destination, “***Load To?” (***) (206–215) appears on the display. If desired, select a different number using the [+ / YES] or [- / NO] button.

5 Press the [0] button.

A confirmation message will appear. To cancel the operation, press the [- / NO] button.

6 Press the [+ / YES] button to actually load the file.

After a while, a message indicating completion of the operation appears.

NOTICE

- The load operation cannot be cancelled during execution. Never turn off the power during the operation. Doing so may result in data loss.

7 Press the [STYLE] button, use the [+ / YES] or [- / NO] button to select a Style from 206–215, and then try playing it back.

Changing the Tempo

Press the [TEMPO/TAP] button to call up the Tempo value, then use the number buttons, [-/NO] and [+ /YES] buttons to adjust the Tempo value.



Press the [+ /YES] and [- /NO] buttons simultaneously to reset the value to the default tempo of the current Style or Song.

Using the Tap function

While a Song or Style is playing back, press the [TEMPO/TAP] button just twice at the desired tempo to change the tempo. While Song or Style playback is stopped, tap the [TEMPO/TAP] button several times to start playback at the tapped tempo—four times for a 4-beat Song or Style or three times for a 3-beat Song or Style.



Playing Songs

You can simply enjoy listening to the internal Songs, or use them with just about any of the functions, such as Lesson.

● Song Category

The Songs are organized by category as listed below.

SONG

- 001 - TOP PICK — These demonstration songs showcase the various sounds of the instrument.
- 004 - LEARN TO PLAY — Each of these songs has two variations: an easy one which even beginners can practice with ease, and another more challenging version.
- 020 - FAVORITE — We've collected various folk songs from around the world which have been handed down from through the generations, as well as famous classical pieces. Try playing the melody of these songs.
- 051 - FAVORITE WITH STYLE —
- 071 - INSTRUMENT MASTER —
- 080 - PIANO REPERTOIRE —
- 103 - TOUCH TUTOR — Enjoy performing a piece with Style accompaniment (automatic accompaniment data). (Keys to Success is designed so that you master playing the melody with your right hand first, and then learn the roots of the chords with your left hand.)
- 113 - CHORD STUDY —
- 125 - CHORD PROGRESSION — These songs feature solo instruments other than piano—letting you enjoy playing other instrumental voices along with orchestral accompaniment.
- 155 - USER SONG —
- 160 - FLASH MEMORY — These included famous pieces from around the world along with well-known piano pieces. Enjoy the beautiful, resonant piano sound as you play solo or along with orchestral backing.
- Learn how to use expressive "touch" control while playing the keyboard according to the strength level displayed in the LCD.
- Hear and experience the sound of chords and easy chord progressions while playing the keyboard according to the LCD display indications.
- Learn how to play chords with Songs featuring simple, fundamental chord progressions.
- Songs (User Songs) you record yourself.
- Songs transferred from a computer (refer to "Computer-related Operations"—page 8).

Listening to a Demo Song

Press the [DEMO] button to play the Demo Songs in sequence.



When the Demo Songs (Song numbers 001 to 003) are played back in sequence and the last Song (003) is finished, playback will repeat continuously, starting again from the first Song (001).

To stop playback, press the [DEMO] button or the [START/STOP] button.


NOTE

- You can select the next or previous Song in order by using the [+YES]/[-NO] buttons after pressing the [DEMO] button. The selection range is all Songs in the selected Demo Group (Function 058; page 55). For details, refer to page 32 about Demo Group.

Selecting and Playing Back a Song

1 Press the [SONG] button, then use the Number buttons to select the desired Song.

Refer to the Song List (page 75).

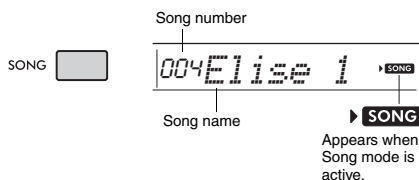

2 Press the [START/STOP] button to start playback.

To stop playback, press the [START/STOP] button again.



To change the tempo:

Refer to "Changing the Tempo" on page 30.

Adjusting the Song Volume

 
To adjust the volume balance between Song playback and keyboard, you can adjust the Song Volume. This can be set via Function number 019 (page 53).

BGM Playback

With the default setting, pressing the [DEMO] button will play back only three internal Demo Songs repeatedly. This setting can be changed so that, for example, all internal Songs automatically play back, letting you use the instrument as a background music source.

1 Hold down the [DEMO] button for longer than a second.

“DemoGrp” (Function 058; page 55) is shown in the display for a few seconds, followed by the current repeat playback target.



2 Use the [+ / YES] or [- / NO] button to select a playback group.

Demo	Preset songs (001–003)
Preset	All preset songs (001–102)
User	All User songs (155–159)
Download	All songs transferred from a computer (160–)

NOTE

- When User songs and Download songs data do not exist, Demo songs are played back.

3 Press the [DEMO] button to start playback.


To stop playback, press the [DEMO] button again or press the [START/STOP] button.

Random Song Playback

When the Demo Group (above) is set to something other than “Demo,” the playback order via the [DEMO] button can be changed between numerical order and random order. To do this, press the [FUNCTION] button several times until “PlayMode” (Function 059; page 55) is called up, then select “Normal” or “Random.”

Song Fast Forward, Fast Reverse, and Pause

Like the transport controls on an audio player, this instrument lets you fast forward (FF), rewind (REW) and pause (PAUSE) playback of the Song.

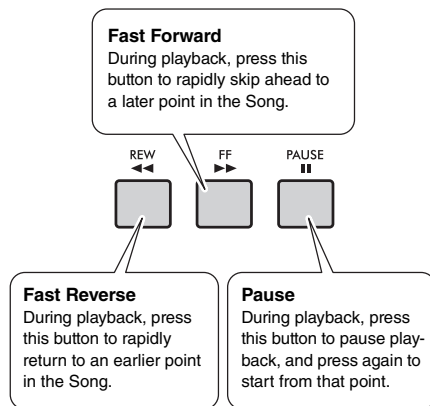

NOTE

- When the A-B repeat (page 33) is specified, the Fast Reverse and Fast Forward will only work within the range between A and B.
- [REW], [FF] and [PAUSE] button cannot be used during Song playback by using the [DEMO] button.

Changing the Melody Voice

You can change a Song’s melody Voice to any other desired Voice.

- 1 Select a Song.
- 2 Select the desired Voice.
- 3 Press and hold the [VOICE] button for longer than a second.

 
“SONG MELODY VOICE” appears in the display for a few seconds, and the selected Voice replaces the Song’s original melody Voice.

NOTE

- Selecting another Song will cancel the changed Melody Voice.
- You cannot change the melody Voice of a User Song.

A-B Repeat

You can play back only a specific section of a Song repeatedly by setting the A point (start point) and B point (end point) in one-measure increments.



- 1 Start playback of the Song (page 31).
- 2 When playback reaches to the point you want to specify as the start point, press the [A-B REPEAT] button to set the A point.



- 3 When playback reaches to the point you want to specify as the end point, press the [A-B REPEAT] button again to set the B point.

The specified A-B section of the song will now play repeatedly.

NOTE

- You can also set the A-B Repeat function when the Song is stopped. Simply use the [REW] and [FF] buttons to select the desired measures, pressing the [A-B REPEAT] button for each point, then start playback.
- If you want to set the start point "A" at the top of the Song, press the [A-B REPEAT] button before starting playback.

- 4 To cancel repeat playback, press the [A-B REPEAT] button.

 
To stop playback, press the [START/STOP] button.

NOTE

- The A-B Repeat function will be canceled when you select another Song.

Turning Each Part On/Off

As indicated above the panel buttons (shown below), Songs other than Song numbers 125 to 154 consist of two Parts, which can be turned on or off individually by pressing the corresponding button, L or R.



- When a User Song (number 155-159; page 43) is selected
The L and R indicators light when the tracks contain data, and are unlit when a track is muted or contains no data.

- When songs other than a User Song is selected

The L and R indicators always light regardless of whether a track contains data or not.

By turning the left- and right-hand parts on or off during playback, you can listen to the Part (that is turned on), or practice the other part (that is turned off) on the keyboard.

NOTE

- Selecting another Song will cancel the on/off status of the Parts.

Playing songs loaded from a computer to this instrument

By using a USB cable to connect the [USB TO HOST] terminal of this instrument to a computer, you can load song files from the computer. For details, refer to the "Using with a Computer or Smart Device" on page 50.

Using the Song Lesson Feature


Use these convenient features to practice the preset Songs and improve your playing skills. The lessons are arranged for optimum, enjoyable learning, so select the one suitable for you, and take your keyboard skills higher, step by step.

You can refer to the music score in the Song Book (free downloadable scores). To obtain the SONG BOOK, access the Yamaha website and download it from the product web page.
<https://www.yamaha.com>

Keys To Success

(Page 35)

You can select just the key phrases of the Song—the ones you like most or need to work on—and practice them one by one. This lesson is ideal for beginning players.

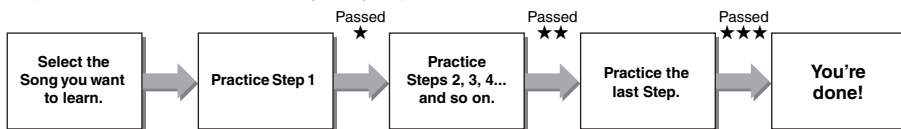


Each Song consists of several Steps. Each time you play all the way through the current Step, your performance will be evaluated. A score of "60" or more indicates that you passed this Step and you should try the next Step, which begins automatically.

The passing status ★ is saved, but you can go on to next Step even when you didn't pass the Step, or you can retry the Step later.

Phrase Repeat

(Page 37)

You can practice two or more phrases at once repeatedly by specifying them, as desired. This is ideal as a finishing practice before you try a last (finishing) Step to pass in the Keys to Success mode, or when you just want to practice the difficult phrase(s) repeatedly.

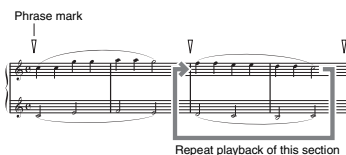


Listening, Timing and Waiting

(Page 38)

You can practice the preset Songs in three steps, independently for the right or left hand, or both hands together. This is ideal when you want to practice all the way through the Song with the selected part.

 - **Lesson 1 (Listening)** Listen to the playback part you will play. Remember it as best as you can.
- **Lesson 2 (Timing)** Learn to play the notes with the correct timing. Even if you play wrong notes, the correct notes will sound.
- **Lesson 3 (Waiting)** Learn to play the correct notes. The Song pauses until you play the right note.



You can combine the Keys to Success lesson (page 35) with the Listening, Timing or Waiting lesson (page 38). If you feel it difficult to play the specific phrase in the Keys to Success lesson, use Listening, Timing or Waiting lesson to listen to the phrase, to practice only the timing to play, or to let the phrase pause until you play the correct notes.

The passing status is not shown when the selected lesson playback starts in the Keys to Success mode.

In addition, various learning functions are provided for your enjoyable playing experience as follows:

- **Touch Tutor (page 40)**

Lets you learn how hard or soft to play the keys for more expressive performances.

- **Chord Study (page 41)**

Lets you hear and experience the sound of the chords to use styles efficiently.

- **Chord Progressions (page 42)**

Lets you hear and experience standard chord progressions. Mastering the typical chord progressions in specific musical genres enables you to play a wider variety of songs with the Style function.

Keys To Success

In this lesson, you can practice individual phrases in the Song (with each Step) to effectively master the entire Song.

1 Prepare the Song Book.

Download the Song Book from the Yamaha website (page 8), or you can refer to the scores of some Songs at the end of this manual. The amount of Steps and lesson parts (which are pre-programmed) will differ depending on the Song. For details, refer to the Song Book.

NOTE

- All preset Songs 004 to 102 other than 001–003 and 103–154 can be used with this mode, especially the “LEARN TO PLAY” category Songs.


2 Press the [SONG] button, then select a Song for your lesson.

Here, select song “Für Elise (Basic)” from the “LEARN TO PLAY” category, then open the corresponding page of the Song Book.




3 Press the [KEYS TO SUCCESS] button to engage this lesson.

The keyboard icon, “Step01” and lesson part (“R” or “L” or “LR”) appears on the display, indicating that you are to start this lesson from scratch. If you have already passed several Steps, the next Step number appears on the display.

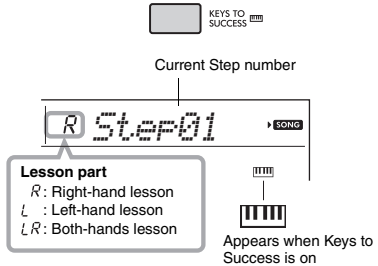

4 Press the [START/STOP] button to start Lesson.

After the lead-in, playback of the current Step starts.

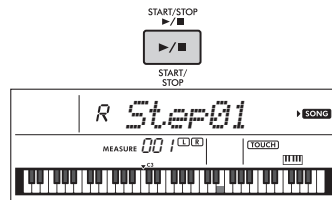

NOTE

- For your practice enjoyment, a special arrangement is applied to each Song. This is why playback tempo may be slower than original.

5 Practice the phrase in the current Step.

Referring to the notation in the Song Book and the keyboard indications shown on the display, play the notes.

6 Confirm the evaluation in the current Step.

When the current Step reaches the end, your performance will be evaluated and your score (from 0–100) is shown in the display.



★
Displayed when you've passed the Step.

A score between “0”–“59” indicates that you did not pass this Step and you should try the same Step again, which begins automatically. A score of “60”–“100” indicates that you passed this Step and you should try the next Step, which begins automatically.

NOTE

- If the specified part is both hands, you cannot pass the Step until you play both hands, even if you play one of the hands well. Only a message such as “Left Part is correct!” appears in the display.

7 Execute Step 02, 03, 04, and so on.

In the last Step of each Song, you will practice all the way through the Song. When you pass all Steps, the Keys to Success mode will automatically be turned off and playback stops.

NOTE

 
- Even during lesson, you can select another Step by using the [+YES]/[-NO] buttons.

8 To stop this Lesson, press the [KEYS TO SUCCESS] button.

Confirming the Passing Status

You can confirm the passing status of each Song simply by selecting a Song and each Step.

●When Step is selected



★ : Passed
No information: Not yet passed

●When Song is selected



- ★ : There are one or more Steps not yet passed in addition to the last Step
- ★ ★ : Only last Step passed
- ★ ★ ★ : All Steps passed other than last Step
- ★ ★ ★ ★ : All Steps passed

Clearing the Passing Status

You can clear existing passing status entries for the entire Song or a specific Step of the Song.

●To clear the passing status entries of all Steps:

Select the desired Song then hold down the [KEYS TO SUCCESS] button for longer than three seconds, with the Keys to Success mode disabled. A “Cleared” message will appear on the display.

●To clear the passing status entry for a specific Step:

Select the desired Song, enable Keys to Success, select the desired Step, then hold down the [KEYS TO SUCCESS] button for longer than three seconds. A “Cleared” message will appear on the display.

NOTE


- This operation cannot be executed during playback.

Phrase Repeat

You can practice a difficult phrase repeatedly by selecting a specific number of the Phrase Marks pre-programmed in the Preset Songs (excepting the Song numbers 001–003, 103–154). You can confirm the Phrase Mark location in the Song Book (page 8).


NOTE

- Phrase Mark is a pre-programmed marker in certain Song data, which indicates a specific location in the Song.

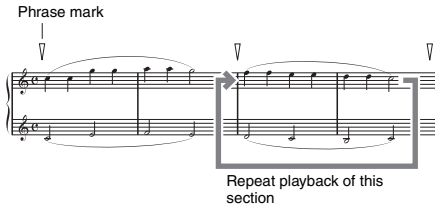

Practicing only a single Phrase

During Song playback, press the [PHRASE REPEAT] button at the phrase you want to practice. The corresponding Phrase number will appear in the display and, after a lead-in, repeat playback will start. Turn off the L or R part (page 33), then practice the phrase which is turned off repeatedly until you are satisfied.

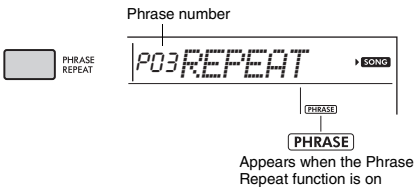

Even during repeat playback, you can select any other phrase number via the [+ / YES] or [- / NO] button, and you can return to normal playback by pressing the [PHRASE REPEAT] button again.

Practicing two or more Phrases

By setting Phrase A (as the start point) and Phrase B (as the end point), you can practice two or more Phrases repeatedly. During Phrase Repeat playback, press the [A-B REPEAT] button to assign the current Phrase to Phrase A. When playback reaches to the desired Phrase, press the [A-B REPEAT] button again to assign Phrase B. "A-B Rep" appears on the display, and Repeat playback between Phrases A and B starts. To cancel this setting, press the [A-B REPEAT] button again.

NOTE

- You can set Phrases A and B also when playback is stopped by selecting the Phrase number via the [+ / YES] and [- / NO] buttons.
- Specifying only Point A results in repeat playback between Point A and the end of the Song.

Listening, Timing and Waiting

●Lesson 1—Listening

In this Lesson, you need not play the keyboard. The model melody/chords of the part you selected will sound. Listen to it carefully and remember it well.

●Lesson 2—Timing

In this Lesson, simply concentrate on playing the notes with the correct timing. Even if you play wrong notes, the correct notes shown in the display will sound.

●Lesson 3—Waiting

In this Lesson, try playing the correct notes shown on the display. The Song pauses until you play the right note, and playback tempo will change to match the speed at which you are playing at.

NOTE

- If you want to keep a steady playback tempo maintained during Lesson 3: Waiting, set the Your Tempo parameter to OFF via the Function number 035 (page 54).

1 Press the [SONG] button then select a Song for your lesson.


NOTE

- The Song Lesson can be applied also to the Songs transferred from a computer (page 50), but cannot be applied to the User Songs.

NOTE

- Songs 125 to 154 are not compatible with the Listening, Timing and Waiting Lessons.

2 Press either or both the [R] and [L] buttons to select the part you want to practice.

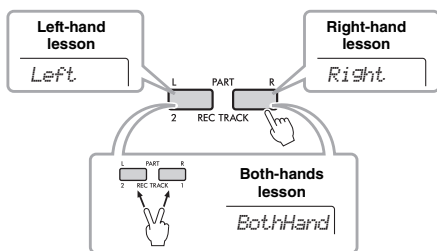

NOTE

- In this step, “No LPart” may appear, indicating that the current Song does not contain a left-hand part.

3 Press the [1 LISTENING 2 TIMING 3 WAITING] button to start playback of the Song Lesson.

Pressing this button repeatedly will change the Lesson number from 1: LISTENING → 2: TIMING → 3: WAITING → off → 1.... Press this button until the desired number is shown on the display.




NOTE

- During playback, you can change the Lesson mode by pressing this button, and you can stop the Lesson at any time by pressing the [START/STOP] button.
- When you play the lesson song, the Main Voice changes to “000” (One Touch Setting; page 16).

4 When Lesson playback reaches to the end, check your evaluation Grade on the display.

“2 Timing” and “3 Waiting” will evaluate your performance in four levels.

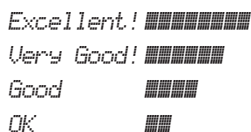

After the evaluation display has appeared, the lesson will start again from the beginning.

NOTE

- When the melody Voice of the Song is changed, the key position shown in the display may be shifted (in octave units), depending on the selected Voice.

NOTE

- The Dual or Split mode cannot be engaged during lessons.

5 Stop the Lesson mode.

 
You can stop the Lesson mode at any time by pressing the [START/STOP] button.

Turning the Guide note off

When the “Guide” function is on, you can hear the Guide note while you are practicing with Lesson 3 (Waiting), and this is ideal when you are not sure of which keys to play next. The Guide note will sound slightly behind the timing to indicate the correct note, when you fail to play the correct note with the correct timing. When you play the correct note with the correct timing, the Guide note will not sound and the playback continues.

If you don't want to hear the Guide note, turn the function to off in the following steps.

- 1 Press the [FUNCTION] button several times until “Guide” (Function 036; page 54) appears.



- 2 Use the [+ / YES] and [- / NO] buttons to select the value “OFF.”

The default value of this function is “on” (Guide note will sound.)

NOTE

- The Guide setting cannot be changed during the Lesson mode.

The Guide function can be used for all preset Songs, except Songs in categories “FAVORITE WITH STYLE” (left-hand part) and “CHORD PROGRESSION,” and No.79.

Keys to Success with Listening, Timing or Waiting

You can combine the Keys to Success lesson (page 35) with the Listening, Timing or Waiting lesson (page 38).

- 1 **Enable the Keys to Success lesson.**
Refer to Steps 1–3 on page 35.
- 2 **Select the desired Step via the [+ / YES] / [- / NO] buttons, then press the [1 LISTENING 2 TIMING 3 WAITING] button repeatedly to select the desired lesson.**

The selected lesson playback starts under the Keys to Success mode. Practice the phrase of the current Step via the selected Lesson. As evaluation for each Step, just “Timing is correct!” or “Your playing is correct!” appears, and the passing status is not available.

- 3 **To return to only the Keys to Success mode, press the [1 LISTENING 2 TIMING 3 WAITING] button repeatedly until “StepXX” (XX: number) appears in the display.**

- 4 **To exit from the Lesson mode, press the [KEYS TO SUCCESS] button.**

Phrase Repeat with Listening, Timing or Waiting

With Phrase Repeat set to On, press the [1 LISTENING 2 TIMING 3 WAITING] button once, twice or three times to start and use Lesson playback with Phrase Repeat. Pressing the same button again several times to exit from the Lesson mode stops playback and allows use of just the Phrase Repeat mode.

NOTE

- In this status, the evaluation function is not available.

Learning How to Use “Touch” Control (Touch Tutor)

This learning feature lets you practice how hard or soft to play the keys for musical expression, referred to as “Touch” in this chapter, by playing back Song numbers 103 to 112 (in the “Touch Tutor” category). Playing back Songs from this category shows indications for the appropriate playing strength. Try playing according to the level displayed in the LCD as the Song progresses.

NOTE

- Be sure to set the Touch Response parameter (page 18) to a value other than “Fixed.” When set to “Fixed,” the Touch Tutor function is inactive.

1 Select a Song from Song numbers 103 to 112 in the “Touch Tutor” category by executing Step 1 in “Selecting and Playing Back a Song” on page 31.

To play with the same Voice that is used in a performance data, select Voice number “000” (OTS; page 16). After this operation, please make sure to go back to the Touch Tutor display by pressing the [SONG] button.



2 Press the [START/STOP] button to play back the selected Song.

3 When the following display appears, play the keyboard along with the keyboard indications shown in the display at the strength level displayed in the LCD. Play while the strength level is shown.

Strength level (Target value)

TOUCH █ █ █ █ █ █ █ █ : Soft

TOUCH █ █ █ █ █ █ █ █ █ █ : Medium

TOUCH █ █ █ █ █ █ █ █ █ █ █ █ : Hard

 
The notes to play are indicated in the graphic keyboard in the display.

Strength targets are indicated by “█”. Your actual playing “Touch” is indicated by “█”. Try playing so that the indications below appear (as target values) while you play.




The positions of “█” and “█” are displayed with a gap when your touch is softer or harder than the target value.


Your touch is harder than the target value
(Target value: medium, your touch: hard)



 Your touch is same as the target value
(Target value: medium, your touch: medium)



 Your touch is softer than the target value
(Target value: medium, your touch: soft)



When the playing is accurate, the instrument evaluates the accuracy of the touch (velocity) and indicates the following evaluation results on the display. If you continue to play the keys accurately, your grade will gradually increase. If you continue to play the keys inaccurately, your grade will gradually decrease.

Great! > Very Good > Good > OK

4 To stop the playback, press the [START/STOP] button.

To exit from the Touch Tutor mode, select a Song from any other category, except “Touch Tutor.”

NOTE


- This function cannot be used with Keys To Success.

Hearing and Experiencing the Sound of the Chords (Chord Study)

You can hear and experience the sound of the chords used in a typical performance by playing back Song numbers 113 to 124 (in the “Chord Study” category). Song numbers 113 to 119 are very simple songs consisting of a single chord (C, Dm, Em, F, G, Am, Bm; respectively) played in various positions, letting you listen to and master the chords one by one. On the other hand, Song numbers 120 to 124 consist of several chords strung together in a pattern, for experiencing and understanding basic chord progressions. Hear and experience the sound of simple chords and progressions by playing back these Songs, and play the keyboard while following along with the keyboard indications shown in the display.

Hear and experience a sound of a single chord

- 1 Select a Song from Song numbers 113 to 119 in the “CHORD STUDY” category by executing Step 1 in “Selecting and Playing Back a Song” on page 31.
- 2 Press the [START/STOP] button to play back the selected Song.
- 3 Play the keyboard while looking at the keyboard indications shown on the display.

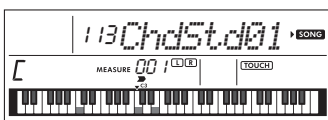

If you feel it difficult to play the notes, use the Waiting function (page 38) to have the Song automatically pause until you play the correct notes. Press the [1 LISTENING 2 TIMING 3 WAITING] button repeatedly until “WAITING” appears in the display. To exit from the Waiting function, press the same button again.

- 4 To stop the playback, press the [START/STOP] button.

Hear and experience basic chord progressions

- 1 Select a Song from Song numbers 120 to 124 by pressing the [+ / YES] / [- / NO] buttons.
- 2 Press the [START/STOP] button to play back the selected Song.
- 3 Play the keyboard while looking at the keyboard indications shown on the display.

Listen to the basic chord progression, and play along with the Song repeatedly until you can smoothly perform and play along with the chord changes.

If you feel it difficult to play the notes, use the Waiting function (page 38) to have the Song automatically pause until you play the correct notes. Press the [1 LISTENING 2 TIMING 3 WAITING] button repeatedly until “WAITING” appears in the display. To exit from the Waiting function, press the same button again.


- 4 To stop the playback, press the [START/STOP] button.

Playing Chords along with Chord Progressions of a Song

Song numbers 125 to 154 in the “Chord Progression” category are constructed from typical chord progressions. You can listen to and get a feel for the chord progressions by playing back the Song and playing the keyboard while looking at the keyboard indications shown on the display. The number of keys that are indicated for you to play progress in sequence—from a single root note, to two notes, then three and four—getting you to gradually and naturally memorize the chords. Also, you can change the key of the Song, allowing you to practice the progressions in all keys for full mastery of the chords.

1 Select a Song from Song numbers 125 to 154 in the “Chord Progression” category by executing Step 1 in “Selecting and Playing Back a Song” on page 31.

2 Press the [PHRASE REPEAT] button. After “CHORD PROGRESSION” scrolls across the display, the tonic pitch of the selected Song and the number of the keys to be pressed are shown.

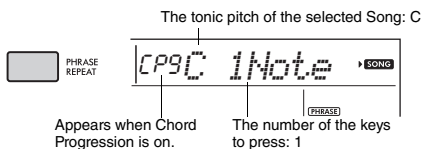


NOTE

- The initial key setting is C major or A minor.

3 Press the [+ / YES] / [- / NO] buttons to select the number of the keys to be played.

 Each time the [+ / YES] button is pressed, the number of the keys to press is increased from just one root note (1Note) to two notes (2Notes), three notes (3Notes) and four notes (All).




NOTE

- The number of the keys to press can also be set by using the number buttons [1]–[4].

4 Press the [START/STOP] button to play back the selected Song.

 5 Play the keyboard while looking at the keyboard indications shown on the display.




NOTE

- When you play the keyboard within the range of C5–B5, the notes will not sound.

6 Press the [PHRASE REPEAT] button again to turn the Chord Progression function off.

To change the key of a Song:

When Chord Progression is on, press one of the keys in the top octave (C5–B5; indicated to the right of “ROOT” on the panel, just above the keys) to change the tonic pitch of the Song.

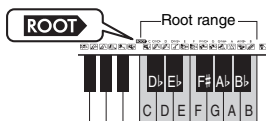

For example, if you press the key D5 in the Song of C major, the key changes to D major.

NOTE

- The key of a Song cannot be changed during playback.

The number of the keys to be played

- **Only one root note (1Note)**
Press only the root note of the chord.
- **Two notes (2Notes)**
Press the 3rd interval of a chord along with the root note, and understand the difference between major chords and minor chords.
- **Three notes (3Notes)**
Press the 5th interval of a chord along with the root note and the 3rd.
- **Four notes (All)**
Press all the notes that make up the chord. Very often, chords are played with just three notes; however, another interval (such as a 7th) is sometimes added. Keep in mind that depending on the chord, there may be no 4th note.

Play the chords in combination with “Waiting” of the Lesson function

You can practice the playing the chords in combination with “Waiting” (page 38) of the Lesson function by simply pressing the [1 LISTENING 2 TIMING 3 WAITING] button once.

NOTE

- Even if you play notes in octaves outside of the notes shown on the display (excluding the range of C5–B5, which are used to change the key of a Song), as well as different inversions of the chords, the playback will progress.

Recording Your Performance

You can record up to 5 of your performances as **User Songs** (User 1–5: Song numbers 155–159). The recorded User Songs can be played back on the instrument. The recorded User Song can be played back in the same way as the preset Songs.

Track Structure of a Song

 
You can record your performance to the following two tracks of a User Song individually or simultaneously.

●Track 1:

Your melody performance is recorded to this track.

●Track 2:

Your melody performance, or Style playback (Chord changes and Section changes), is recorded to this track.



●Recording Data Capacity:

A total of approximately 10,000 notes can be recorded to the five User Songs.

Quick Recording


The operation is convenient for recording a new Song without having to specify a track.

1 Make the desired settings such as Voice and Style settings.

If you want to record only the melody performance, turn ACMP off (page 24). If you want to record Style playback or Rhythm playback as well as melody performance, turn ACMP on (page 24).

2 Press the [REC] button to enter the Record Ready mode.

This operation selects the lowest-numbered unrecorded User Song (“User 1”–“User 5”) as the recording target, if a User Song has not been specified in advance or if Record Ready mode has been entered from the Style mode. If you want to select another Song, use the [+ / YES] and [- / NO] buttons.

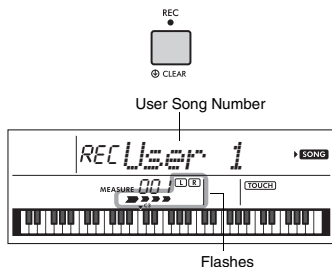

To exit from the Record mode, press the [REC] button again to stop flashing on the display.

NOTICE


- If all User Songs contain recorded data, “User 1 (Song Number 155)” will automatically be selected. In this case, since you will record over and erase any previous data in “User 1,” we recommend that you save your important data to a computer (see page 51).

NOTE

- ACMP cannot be turned on or off in this status while you can select another Style in this status by using the [STYLE] and Number buttons.

3 Play the keyboard to start recording.

If ACMP is turned on, you can independently record just the rhythm sound of Style playback by pressing the [START/STOP] button then changing the Section (page 25).

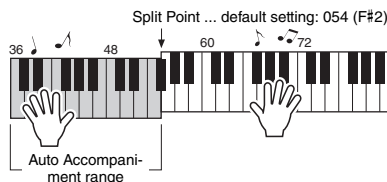

4 Press the [START/STOP] button to stop recording.

When using a Style, you can stop recording also by pressing the [INTRO/ENDING/rit.] button then waiting until playback ends.

NOTICE

- After Recording stops, a “Writing!” message is shown on the display for a while. Never attempt to turn the power off while this is shown in the display. Doing so can damage the internal memory and result in a loss of data.

5 To play back the recorded Song, press the [START/STOP] button.

Limitations while Recording

- You cannot record the Reverb Level, metronome click, or the Transpose and Tuning settings.
- The following settings and buttons are not available, or if operated, the new settings cannot be recorded: ACMP ON/OFF, Split Point, Reverb Type, Chorus Type, Harmony/Arpeggio Type, [FUNCTION] button, [PORTABLE GRAND] button.
- You can record the DSP effect only to track 1.

 
Recording to a Specified Track

1 Make the desired settings, such as those of Voice or Style.


If you want to record the melody performance, turn ACMP off (page 24). If you want to record Style playback, turn ACMP on (page 24).

2 While holding down the [REC] button, press the desired Track button 1 or 2 to engage the Record mode.

If you want to record Style playback, make sure to select the Track 2. If you want to record melody performance, select either Track 1 or Track 2 as desired. The illustration below is the example when selecting Track 2.



The User Song appears on the display.

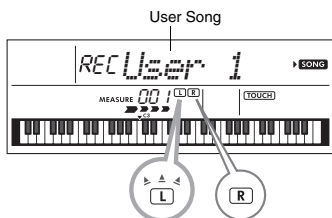

The L (TRACK 1) and R (TRACK 2) indicators light when the respective track contains data. They are unlit when the respective track contains no data. Even if a track contains data, it is unlit when the track is muted. In addition, they flash when the respective track is selected as a Recording target.

If Track 2 is selected as Recording target for example and Track 1 contains already recorded data, L flashes and R lights in the display. Turning on or off R via the [REC TRACK 1] button will determine whether you listen to a previously recorded Track or not while recording a new Track.

3 Press the [+ / YES], [- / NO] buttons to select the User Song you want to record.

4 Same as in Steps 3 to 5 (page 43) in "Quick Recording."

When playing back the recorded song, pressing [REC TRACK 1] or [REC TRACK 2] button allows you to mute Track 1 or Track 2. Each time the button is pressed, playback/mute is switched.



The L (TRACK 1) and R (TRACK 2) indicators light when the respective track contains data. They are unlit when the respective track is muted, even if the track contains data.

Clearing a User Song

1 Press the [SONG] button then select the desired User Song by using the Number buttons.

2 Press and hold the [REC] button for longer than a second.

A confirmation message appears.



Hold for longer than a second.

To cancel the operation, press the [- / NO] button.

3 Press the [+ / YES] button.

A confirmation message appears again.



To cancel the operation, press the [- / NO] button.

4 Press the [+ / YES] button to clear the Song.

A "Writing!" message appears while the track is being cleared.


Memorizing Your Favorite Panel Settings

This instrument has a Registration Memory feature that lets you memorize your favorite settings for easy recall whenever they're needed. Up to nine complete setups can be memorized and assigned to each number button 1–9. (Factory settings are recorded to 1-9.)

Recalling Panel Settings from the Registration Memory


1 Press the [REGIST MEMORY] button.

"LoadNo.?" appears on the display.

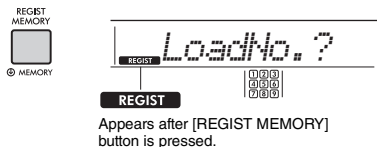

2 Press one of the [1]–[9] buttons to call up the panel settings you memorized.

 The recalled Registration Memory number and the Voice Name in the Memory appear on the display.



Registration Memory Number

Voice Name in Memory

The Registration Memory number can be changed by pressing one of the other [1]–[9] buttons. To exit from Registration Memory, press the [REGIST MEMORY] button.

Factory settings

Registration Memory Number	Voice Name in Memory
R01	S.Art Lite Nylon Guitar Harmonics
R02	S.Art Lite Steel Guitar Harmonics
R03	S.Art Lite Distortion Guitar
R04	S.Art Lite Slap Bass
R05	S.Art Lite Strings
R06	S.Art Lite Gospel Choir
R07	S.Art Lite Tenor Sax
R08	S.Art Lite Brass Section
R09	S.Art Lite Flute

Parameters that are memorized to Registration Memory

● Style settings*

Style number, ACMP on/off, Style volume, Tempo, Main A/B, Fingering Type, Smart Chord Key

● Voice settings

Main Voice settings: Voice number and all settings of the related Functions

Dual Voice settings: Dual on/off and all settings of the related Functions

Split Voice settings: Split on/off and all settings of the related Functions

● **Effect settings:** Reverb Type, Reverb level, Chorus Type, DSP on/off, DSP Type, Sustain on/off

● **Harmony/Arpeggio settings:** Harmony/Arpeggio on/off and all settings of the related Functions

● **Other settings:** Transpose, Split Point, All settings for the Function "DUO", Pedal Function

* When a Song is selected, the Style settings cannot be recorded or called up.

Memorizing Panel Settings to the Registration Memory

- 1 Make the desired settings such as those for Voice and Style.
- 2 Press and hold down the [REGIST MEMORY] button for longer than a second. "MemNo.?" appears on the display.

 


Hold for longer than a second.

Flashes after the [REGIST MEMORY] button is pressed and held for longer than a second.

- 3 Press one of the [1]–[9] buttons to memorize the current panel settings.

If you select a Registration Memory number that already contains data, an "Overwr?" message appears in the display. To overwrite, press the [+ / YES] button; to cancel, press [- / NO].



When memorizing is completed, "Mem OK" is displayed.

NOTICE

- If you select a Registration Memory number that already contains data, the previous data is deleted and overwritten by the new data.
- To restore all Registration Memories to the factory settings, execute Backup Clear operation.
- Do not turn off the power while memorizing settings to the Registration Memory, otherwise the data may be damaged or lost.

Deleting the Registration Memory

 
- 1 Hold down the [REGIST MEMORY] button for longer than a second. "MemNo.?" is shown in the display.



Hold for longer than a second.

Flashes after the [REGIST MEMORY] button is pressed and held for longer than a second.

- 2 Hold down the [1]–[9] buttons corresponding to the Registration Memory number you want to delete for longer than a second.



"ClrRegX?" ("X" represents the Registration Memory number) is shown in the display.

- 3 Press the [+ / YES] button to delete the Registration Memory.

Press the [- / NO] button to cancel deleting the Registration Memory. When deleted, the Registration Memory number on the screen disappears.



Disabling Recall of Specific Items (Freeze)


Registration Memory lets you recall all the panel setups you made with a single button press. However, there may be times that you want certain items to remain the same, even when switching Registration Memory setups. When you want to switch the Voice settings but still maintain the Style settings, for example, you can "freeze" only the Style settings and have those Style settings remain, even when you select another Registration Memory number. Select the items you want to freeze via Function numbers 045, 046 (page 54) and 047 (page 55).

Selecting an EQ Setting for your Favorite Sound

Six different master equalizer (EQ) settings let you create the optimum sound when listening through different reproduction systems—the instrument’s internal speakers, headphones, or an external speaker system.

- 1 Press the [FUNCTION] button several times until the “MasterEQ” (Function 025; page 53) item appears on the display.

“MasterEQ” is shown in the display for a few seconds, and the current Master EQ type appears.

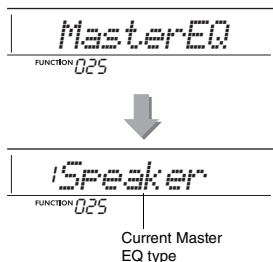

- 2 Use the [+ / YES] or [- / NO] button to select the desired Master EQ type.

Master EQ types

1	Speaker	Optimum for listening via the instrument’s built-in speakers.
2	Headphone	Optimum for headphones, or for listening via external speakers.
3	Boost	Features more powerful sound.
4	Piano	Optimum for piano solo performance.
5	Bright	Lowers the mid range for a brighter sound.
6	Mild	Lowers the high range for a softer sound.

Playing an Device with the Built-in Speakers

CAUTION

- Before connecting, turn off the power of both this instrument and the external audio device. Also, before turning the power on or off, make sure to set all volume levels to minimum (0). Otherwise, damage to the devices, electrical shock, or even permanent hearing loss may occur.

You can output the sound of an audio device, such as a smartphone, with the built-in speakers of this instrument by connecting it via a cable. This lets you play the keyboard along with playback of your music player.


NOTICE

- To avoid damage to the external audio device and this instrument, first turn on the power to the external device, and then to the instrument. When turning off the power, first turn off the power to the instrument, and then to the external device.

1 Turn off the power for both the external audio device and this instrument.

2 Connect the audio device to the instrument's [AUX IN] jack.

Use the cable which has the stereo-mini plug at one side for connecting to this instrument and the plug matching the output jack of the external audio device at the other side.

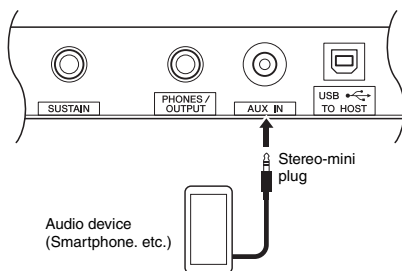

NOTE

- If you are using a computer or a smart device such as an iPhone/iPad, you can also connect it to the [USB TO HOST] terminal (see "Connecting to a Computer" on page 50).

3 Turn on the external audio device, then this instrument.

4 Play back the connected external audio device.

The sound of the audio device is output through the speakers of this instrument.

5 Adjust the volume balance between the external audio device and this instrument.

Adjust the audio playback volume on the audio device, then adjust the entire volume by rotating the [MASTER VOLUME] control of the instrument.

NOTE

- You can adjust the level of the input from the external audio device by calling up "AuxInVol" via Function number 040 (page 54) and using the [0]–[9], [+]/YES, [-]/NO buttons.

6 Play the keyboard along with the sound of the audio device.


You can cancel or lower the volume of the melody part of audio playback. For details, refer to page 49.

7 After finishing the performance, stop playback of the audio device.

Lowering the volume of a melody part (Melody Suppressor function)

When you output the audio sound of an external audio device or a computer connected to the [AUX IN] jack or the [USB TO HOST] terminal through this instrument, you can cancel or lower the volume of the melody part of audio playback. You can use the function to practice the melody part along with the audio playback.

- 1 Play back audio on the connected external device.
- 2 Hold down the [FUNCTION] button for longer than a second to call up “MelodySP.”

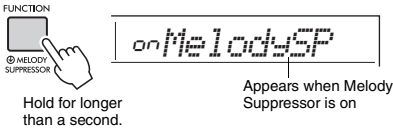

- 2 Adjust the pan position of the sound to be canceled (lowered) by using the [+ / YES], [- / NO] buttons.

NOTE

- Depending on the particular music content, the melody or vocal sound may not be canceled as expected even if the Melody Suppressor is turned on.

- 3 Press the [+ / YES] button to select “on.”


NOTE

- When the instrument is connected to the [USB TO HOST] terminal, and Audio Loop Back (page 54, Function 042) is set to OFF, the Melody Suppressor function cannot be used.

- 4 To cancel the Melody Suppressor function, select “oFF” via “MelodySP” (Function 043; page 54) by executing steps 2 and 3.

When the melody or vocal sound may not be canceled (or lowered) as expected


- 1 Press the [FUNCTION] button several times to call up “SupprPan” (Function 044; page 54) while the Melody Suppressor function is turned on.

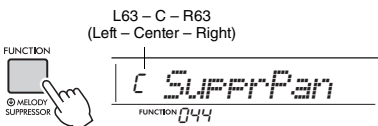

Using with a Computer or Smart Device

Connecting to a computer

Connecting the [USB TO HOST] terminal of this instrument and the computer via a USB cable allows you to do the following.

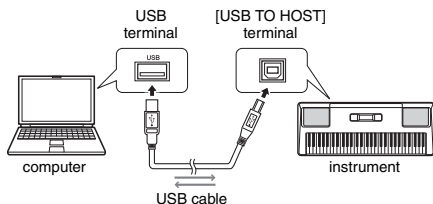

● When Storage Mode (Function 056; page 55) is set to on.

- File transfer (Song, Style, Backup)

● When Storage Mode is set to off.

- Performance data communication by MIDI
- Audio data communication by USB

Simply by connecting the instrument and a computer via a USB cable, the instrument is recognized by the computer. However, a dedicated driver must be installed for audio data communication. For details, refer to “Computer-related Operations” on the website (page 8).

NOTE

- The volume for USB audio communication data cannot be adjusted with the [MASTER VOLUME] dial.
- While Storage Mode is set to on, you cannot play the instrument. Set Storage Mode to on, only when transmitting/receiving files to/from a computer.
- While Storage Mode is set to off, not only your keyboard performance data but also automatic performance data (Style and User Song) are transmitted to the computer via MIDI.
- If you are using with a music production application, such as a DAW (Digital Audio Workstation), set “Loopback” (Function 042; page 54) to off. If this is instead set to on, a mix of the audio data and the sound of the instrument is sent to DAW, which may cause howling and unexpected loud sounds.

File transfer when Storage Mode is set to on

● Operation method

Operate on a computer. Refer to “Computer-related Operations” on the website (page 8).

● Files that can be transferred

- Song files (Extension: .MID)
Song files created on other instruments or computers can be transferred to this instrument. Note that user songs created with this instrument cannot be transferred to a computer as a single file.
- Style files (Extension: .STY)
This instrument does not have a function for creating Style files, but you can import a style file created on another device. The maximum capacity per file is 50KB. Files that exceed the limit will not be recognized on this instrument.
- Backup files (Extension: .BUP)
 - * You can transfer the data of “Parameters backed up as needed” (excluding “Passing Status of Keys to Success”) and “Parameters backed up when the power is turned off” on page 51 to the computer and save the data as a single backup file.

NOTE

- Files up to a total of about 1.4 MB can be transferred to this instrument.
- If you transfer a Style file to this instrument, you need to register it before using it on the instrument. For details, refer to “Registering a Style File” (page 29).
- Files transferred to the instrument are listed in the instrument in the order of symbol, number and alphabet.

Connecting a Smart Device

By connecting a smart device such as an iPhone/iPad to the instrument, you can take advantage of various functions. For details on connections, refer to the online PDF manual (page 8) “Smart Device Connection Manual.” For information about the compatible smart devices and application tools, access the following page:

<https://www.yamaha.com/kbdapps/>

NOTE

- If you are using the instrument with a music production application such as a DAW (Digital Audio Workstation), set “Loopback” (Function 042; page 54) to off. If it is set to on, a mix of the audio data and the sound of the instrument is sent to DAW, which may cause howling and unexpected loud sounds.

Backup and Initialization

Backup Parameters

The following Backup parameters will be maintained even if the power is turned off.

Parameters backed up as needed

- User Songs (page 43)
- Style Number 206–215 (page 29)
- Passing Status of Keys to Success (page 36)

Parameters backed up when the power is turned off

- Registration Memory (page 45)
- FUNCTION Settings: (page 52)
 - Tuning, Split Point, Touch Response, Style Volume, Song Volume, Metronome Volume, Your Tempo, Demo Group, Demo Play Mode, Master EQ type, Sustain, Auto Power Off, Battery Type, Guide, Audio Loop Back, Fingering Type, [AUX IN] Audio Volume, [USB TO HOST] Audio Volume, Style Freeze, Transpose Freeze, Voice Freeze

In addition to the Backup parameters above, all the data (including Style data that have not been loaded) transferred from the connected computer will be maintained even if you turn off the power.

Backup parameters other than “Passing Status of Keys to Success” can be transferred and saved to a computer as a single Backup file (with the extension: .BUP). This backup file can be loaded to the instrument for future.

For details on using a computer with this instrument, refer to the online PDF manual (page 8) “Computer-related Operations.”

Error during Backup Operation

When connecting to a computer with Storage Mode (Function 056; page 55) set to on, there may not be enough free space on the instrument to create a backup file for transferring to the computer. In this situation, the error message “Not enough storage for backup” scrolls on the display. If you want to save a backup file to the computer, delete unnecessary Song files or Style files of the instrument to secure free space and set Storage Mode to off and back to on again. A backup file is created.

If you do not save a backup file on the computer, there is no problem if an error message is displayed, and you can ignore the message.

NOTE

- The size of a backup file varies depending on the amount of data stored on the instrument. The maximum capacity is about 620KB.
- Even if a backup file for transferring to a computer is not created, the backup data is retained in the instrument.


Initialization

You can initialize your original data via the following two methods.

Backup Clear


This operation initializes the backup parameters and the Registration Memories.

While holding down the highest white key, press the [⏻] (Standby/On) switch to turn the power on.

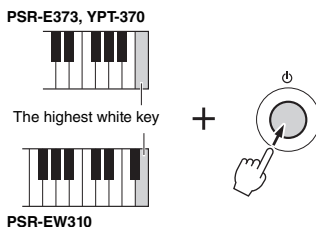

Flash Clear

This operation deletes all the Songs and Styles that have been transferred from a computer. Note that Style data registered to Style numbers 206–215 will be maintained. While simultaneously holding the highest white key and the three highest black keys, press the [⏻] (Standby/On) switch to turn the power on.

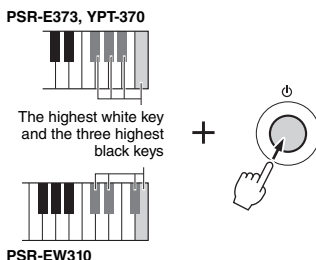

NOTICE


- **Keep in mind that Backup Clear and Flash Clear also delete the data you have purchased. Be sure to save the important data to a computer.**

The Functions

The Functions settings provide access to a range of detailed instrument parameters such as Tuning, Split Point, Voices and Effects.

1 Press the [FUNCTION] button several times until the desired item appears.

Each time the [FUNCTION] button is pressed, the Function number increases one by one. To decrease the Function number by one, simultaneously hold down the [FUNCTION] button and press the [-/NO] button briefly. Simply pressing only the [+ /YES] or [-/NO] button does not change the Function number.

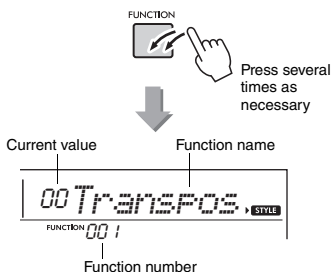


After a few seconds, the Function name may be replaced with the setting value depending on the selected Function.

NOTE

- The Function number does not appear in the display during Song, Style or metronome playback. The beat value appears instead.

2 Set the value by using the number buttons [0]–[9], [+ /YES], [- /NO].

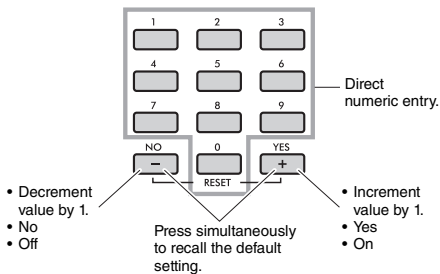

3 To exit from the Function settings, press one of these buttons; [VOICE], [SONG] or [STYLE].

Function List

Function Number	Function name	Display	Range/Settings	Default Value	Descriptions
Overall					
001	Transpose	<i>Transpos</i>	-12–12	00	Determines the pitch of the instrument in semitone increments.
002	Tuning	<i>Tuning</i>	427.0Hz–453.0Hz	440.0Hz	Determines the fine tuning of the pitch of the entire instrument in approx. 0.2Hz increments.
003	Split Point	<i>SplitPnt</i>	036–096 (C1–C6; PSR-E373, YPT-370)/ 028–103 (E0–G6; PSR-EW310)	54 (F#2)	Determines the highest key for the Split Voice and sets the Split “point”—in other words, the key that separates the Split (lower) and Main (upper) Voices. The Split Point setting (page 17) and Accompaniment Split Point setting (page 24) are automatically set to the same value.
004	Touch Response	<i>TouchRes</i>	1 (Soft), 2 (Medium), 3 (Hard), 4 (Fixed)	2 (Medium)	Refer to page 18.
Main Voice (page 16)					
005	Volume	<i>M. Volume</i>	000–127	*	Determines the volume of the keyboard performance when performing along with a Song or a Style.
006	Octave	<i>M. Octave</i>	-2 – +2	*	Determines the octave range for the Main Voice.
007	Chorus Depth	<i>M. Chorus</i>	000–127	*	Determines how much of the Main Voice’s signal is sent to the Chorus effect.

Function Number	Function name	Display	Range/Settings	Default Value	Descriptions
Dual Voice (page 17)					
008	Dual Voice	<i>D.Voice</i>	001–622	*	Determines the Dual Voice.
009	Volume	<i>D.Volume</i>	000–127	*	Determines the volume of the Dual Voice.
010	Octave	<i>D.Octave</i>	-2 – +2	*	Determines the octave range for the Dual Voice.
011	Chorus Depth	<i>D.Chorus</i>	000–127	*	Determines how much of the Dual Voice's signal is sent to the Chorus effect.
Split Voice (page 17)					
012	Split Voice	<i>S.Voice</i>	001–622	*	Determines the Split Voice.
013	Volume	<i>S.Volume</i>	000–127	*	Determines the volume of the Split Voice.
014	Octave	<i>S.Octave</i>	-2 – +2	*	Determines the octave range for the Split Voice.
015	Chorus Depth	<i>S.Chorus</i>	000–127	*	Determines how much of the Split Voice's signal is sent to the Chorus effect.
Style (page 23)					
016	Style Volume	<i>StyleVol</i>	000–127	100	Determines the volume of the Style while a Style is selected (page 24).
017	Fingering Type	<i>FingType</i>	1 (SmartChord) 2 (Multi)	1 (SmartChord)	Determines the method of chord detection in the Accompaniment Section when playing with a Style.
018	Smart Chord Key	<i>S.ChdKey</i>	FL7 (7 Flats ♭) – SP0 (No Key Signature) – SP7 (7 Sharps #)	SP0 (No Key Signature)	Determines the Key Signature when the Fingering Type is set to "Smart Chord." For example, if there are 2 sharps (#) in your music score, press the [+YES]/[-NO] buttons until "SP2" appears on the display.
Song (page 31)					
019	Song Volume	<i>SongVol</i>	000–127	100	Determines the volume of the Song when a Song is selected (page 31).
Effects					
020	Reverb Type	<i>Reverb</i>	1–4 (Hall 1–4) 5 (Cathedral) 6–8 (Room 1–3) 9–10 (Stage 1–2) 11–12 (Plate 1–2) 13 (Off)	**	Determines the Reverb type, including Off (page 82).
021	Reverb Level	<i>RevLevel</i>	000–127	64	Determines how much of the Voice's signal is sent to the Reverb effect.
022	Chorus Type	<i>Chorus</i>	1 (Chorus1) 2 (Chorus2) 3 (Chorus3) 4 (Flanger1) 5 (Flanger2) 6 (Off)	**	Determines the Chorus type, including Off (page 82).
023	DSP Type	<i>DSPType</i>	01–38	*	Determines the DSP Type (page 82).
024	Sustain	<i>Sustain</i>	ON/OFF	OFF	Determines whether the Sustain function is on or off (page 19).
025	Master EQ Type	<i>MasterEQ</i>	1 (Speaker) 2 (Headphone) 3 (Bass) 4 (Piano) 5 (Bright) 6 (Mild)	1 (Speaker)	Determines what type of equalization is applied to the speaker output or headphone output for optimum sound in different listening situations (page 47).
Harmony/Arpeggio (page 20)					
026	Harmony/Arpeggio Type	<i>Harm/Arp</i>	001–026 (Harmony) 027–176 (Arpeggio)	*	Determines whether the Harmony type or Arpeggio type is selected.
027	Harmony Volume	<i>HarmVol</i>	000–127	*	Determines the volume of the Harmony effect.
028	Arpeggio Velocity	<i>ArpVelo</i>	1 (Original) 2 (Key)	**	Determines the Arpeggio velocity. If "Key" is selected, arpeggios will be played back at a volume matching the strength at which you play the keyboard. If "Original" is selected, arpeggios will be played back at their original volume regardless of your playing strength.
Pedal (pages 19, 21)					
029	Pedal Function	<i>PdlFunc</i>	1 (Sustain) 2 (Arp Hold) 3 (Sus+ArpH) 4 (Articulation)	1 (Sustain)	Sustain: Sustain will be produced while the pedal is held down. Arp Hold: Arpeggio playback will continue while the pedal is held down. Sus + ArpH: Sustain will be produced and Arpeggio playback will continue while the pedal is held down. Articulation: Articulation effect will be produced while the pedal is held down.

Function Number	Function name	Display	Range/Settings	Default Value	Descriptions
Metronome (page 16)					
030	Time Signature Numerator	<i>TimeSign</i>	00-60	**	Determines the time signature of the Metronome.
031	Time Signature Denominator	<i>TimeSigD</i>	Half note, Quarter note, Eighth note, Sixteenth note	**	Determines the length of each metronome beat.
032	Metronome Volume	<i>MetroVol</i>	000-127	100	Determines the volume of the Metronome.
Lesson (page 34)					
033	Lesson Track (R)	<i>R-Part</i>	01-16	01	Determines the guide track number for your right hand lesson. The setting is only effective for Songs in SMF format 0 transferred from a computer. Select a Song you want to use for the lessons, select the "R-Part," and then use the number buttons [0]-[9], [+YES] and [-NO] to select the channel you want to play back as the specified right-hand part. We recommend that you select channel 1 for the right-hand part.
034	Lesson Track (L)	<i>L-Part</i>	01-16	02	Determines the guide track number for your left hand lesson. The setting is only effective for Songs in SMF format 0 transferred from a computer. Select a Song you want to use for the lessons, select the "L-Part," and then use the number buttons [0]-[9], [+YES] and [-NO] to select the channel you want to play back as the specified left-hand part. We recommend that you select channel 2 for the left part.
035	Your Tempo	<i>YourTemp</i>	ON/OFF	ON	This parameter is for Lesson 3 "Waiting." When this is set to ON, playback tempo will change for matching the speed you are playing at. When this is set to OFF, playback tempo will be maintained regardless of the speed you are playing at.
036	Guide	<i>Guide</i>	ON/OFF	ON	Determines whether the Guide note sounds (ON) or not (OFF) during the "Waiting" lesson.
MIDI					
037	Local Control	<i>Local</i>	ON/OFF	ON	Determines whether the instrument's keyboard controls the internal tone generator (ON) or not (OFF). When you are recording your keyboard performance to the application software on the computer via MIDI, set this parameter to OFF.
038	External Clock	<i>ExtClock</i>	ON/OFF	OFF	Determines whether the instrument synchronizes to the internal clock (OFF) or an external clock (ON). When you are recording your keyboard performance to the application software on the computer via MIDI, set this parameter to ON.
039	Initial Send	<i>InitSend</i>	YES/NO	-	Allows you to send the data of the panel settings to a computer. Press [+YES] to send, or press [-NO] to cancel. This operation should be done immediately after starting the Recording operation on the computer.
Audio (pages 48, 49, 50)					
040	[AUX IN] Audio Volume	<i>AuxInVol</i>	000-127	50	Determines the volume of audio playback, input from the [AUX IN] jack (page 48).
041	[USB TO HOST] Audio Volume	<i>USBInVol</i>	000-127	100	Determines the volume of audio playback, input from the [USB TO HOST] terminal (page 50).
042	Audio Loop Back	<i>Loopback</i>	ON/OFF	ON	Determines whether Audio sound input from the [USB TO HOST] terminal is returned to the computer or not with the performance played on the instrument. If you want to output only the sound played on this instrument to the computer, set this parameter to OFF.
043	Melody Suppressor	<i>MelodySP</i>	ON/OFF	OFF	When you output the audio sound of an external audio device or a computer connected to the [AUX IN] jack or the [USB TO HOST] terminal through this instrument, select "ON" to cancel or lower the volume of the melody part of audio playback.
044	Suppressor Pan	<i>SupprPan</i>	L63-C-R63	C	Determines the position of the playback sound of the external audio device to be canceled or lowered (page 49).
Registration Freeze (page 46)					
045	Style Freeze	<i>StyleFrz</i>	ON/OFF	OFF	When you want to call up the Registration Memory without overwriting the current Style setting, select "ON."
046	Transpose Freeze	<i>TransFrz</i>	ON/OFF	OFF	When you want to call up the Registration Memory without overwriting the current Transpose setting, select "ON."

Function Number	Function name	Display	Range/Settings	Default Value	Descriptions
047	Voice Freeze	<i>VoiceFrz</i>	ON/OFF	OFF	When you want to call up the Registration Memory without overwriting the current Voice setting, select "ON."
Duo (page 22)					
048	Duo Mode	<i>DuoMode</i>	ON/OFF	OFF	Select "ON" to divide the keyboard range into the left section and right section.
049	Duo L Voice	<i>DuoLvc</i>	001–622	*	Determines the voice in the left section.
050	Duo Split Point	<i>DuoPnt</i>	036–096 (C1–C6; PSR-E373, YPT-370)/ 028–103 (E0–G6; PSR-EW310)	66 (F#3)	Sets the boundary between the left section and right section.
051	Duo R Volume	<i>DuoRVol</i>	000–127	*	Determines the volume of the right section.
052	Duo L Volume	<i>DuoLVol</i>	000–127	*	Determines the volume of the left section.
053	Duo R Octave	<i>DuoROct</i>	-3 – +3	*	Determines the pitch of the right section in octave units.
054	Duo L Octave	<i>DuoLOct</i>	-3 – +3	*	Determines the pitch of the left section in octave units.
055	Duo Type	<i>DuoType</i>	1 (Balance) 2 (Separate)	2 (Separate)	This function is effective in Duo Mode (page 22). Balance: The performance sounds of the left section and the right section will sound from both the left and right speakers. Separate: The performance sound of the left section will sound from the left speaker, and the performance sound of the right section will sound from the right speaker.
Storage					
056	Storage Mode	<i>Storage</i>	ON/OFF	OFF	Select "ON" if you want the computer to recognize the instrument as storage when it is connected to the computer. When "ON" is selected, the operation of the instrument will be locked; for example, no sound will be produced when you play the keyboard. Select "OFF" if you want the computer to recognize the instrument as a MIDI device when it is connected to the computer. While Storage Mode is set to ON, you cannot play the instrument. Set Storage Mode to ON only when transmitting/receiving files to/from a computer.
Style File					
057	Style Register	<i>StyleReg</i>	001–nnn	–	Select and register a Style file from flash files that are loaded from computer (page 29).
Demo (page 31)					
058	Demo Group	<i>DemoGrp</i>	1 (Demo) 2 (Preset) 3 (User) 4 (Download)	1 (Demo)	Determines the repeat playback group.
059	Demo Play Mode	<i>PlayMode</i>	1 (Normal) 2 (Random)	1 (Normal)	Determines the repeat playback mode.
Auto Power Off (page 13)					
060	Auto Power Off Time	<i>AutoOff</i>	OFF, 5/10/15/30/60/120 (minutes)	30 minutes	Specifies the time that will elapse before the instrument's power is automatically turned off.
Battery (page 12)					
061	Battery Type	<i>Battery</i>	1 (Alkaline) 2 (Ni-MH)	1 (Alkaline)	Selects the type of batteries you have installed to this instrument. Alkaline: Alkaline battery/manganese battery Ni-MH: Rechargeable battery

* The appropriate value is automatically set for each Voice combination.

** The appropriate value is automatically set for each Song, Style or Arpeggio.

Troubleshooting

Problem	Possible Cause and Solution
When the instrument is turned on or off, a popping sound is temporarily produced.	This is normal and indicates that the instrument is receiving electrical power.
When using a mobile phone, noise is produced.	Using a mobile phone in close proximity to the instrument may produce interference. To prevent this, turn off the mobile phone or use it further away from the instrument.
Noise is heard from the instrument's speakers or headphones when using the instrument with an application on a smart device.	When you use the instrument along with the application on your smart device, we recommend that you set "Airplane Mode" to "ON" on your smart device in order to avoid noise caused by communication.
There is no sound even when the keyboard is played or when a song or style is being played back.	Check that nothing is connected to the [PHONES/OUTPUT] jack on the rear panel. When a set of headphones is plugged into this jack, no sound is output.
	Check the Local Control on/off setting. (See page 54 Function 037.) Make sure Local Control is set to ON.
The instrument does not respond when the instrument is operated.	Is Storage Mode set to ON? Make sure Storage Mode is set to OFF; refer to "Storage" on page 55 (Function 056).
Playing keys in the right hand area of the keyboard does not produce any sound.	When using the Dictionary function (page 28), the keys in the right hand area are used only for entering the chord root and type.
Not all of the voices seem to sound, or the sound seems to be cut off.	The instrument is polyphonic up to a maximum of 48 notes—including Dual voice, Split Voice, auto accompaniment, song, and Metronome. Notes exceeding this limit will not sound.
The harmony doesn't sound.	The method of sounding the Harmony effect (001–026) differs depending on the selected type. For Types 001–005, turn the Auto Accompaniment on and play it by pressing a chord in the auto accompaniment section of the keyboard, then play some keys in the right-hand side to produce the Harmony effect. For Types 006–026, turning auto accompaniment on or off has no effect. However, it is necessary to play two notes simultaneously for Types 006–012.
The Style or Song does not play back when the [START/STOP] button is pressed.	Is External Clock set to ON? Make sure External Clock is set to OFF; refer to "Function Settings" on page 54 (Function 038).
The ACMP ON indicator does not appear when the [ACMP ON/OFF] button is pressed.	<ul style="list-style-type: none"> • Always press the [STYLE] button first when you are going to use any Style-related function. • The ACMP ON indicator does not appear when the Duo mode is on.
The Style does not sound properly.	Make sure that the Style Volume (page 53 Function 016) is set to an appropriate level.
	Is the Split Point set to an appropriate key for the chords you are playing? Set the Split Point to an appropriate key (page 52 Function 003). Is the "ACMP" indicator showing in the display? If it is not showing, press the [ACMP ON/OFF] button so that it does show.
The Style does not sound as you play a chord.	<p>If the Fingering Type (Function 017; page 53) is set to Multi, the following conditions will occur.</p> <ul style="list-style-type: none"> • The auto accompaniment will sometimes not change when related chords are played in sequence (e.g., some minor chords followed by the minor seventh). • Two-note fingerings will produce a chord based on the previously played chord. • Playing two same root keys in the adjacent octaves produces accompaniment based only on the root.
The footswitch (for sustain) seems to produce the opposite effect. For example, pressing the footswitch cuts off the sound and releasing it sustains the sounds.	The polarity of the footswitch is reversed. Make sure that the footswitch plug is properly connected to the [SUSTAIN] jack before turning on the power.
The sound of the voice changes from note to note.	This is normal. The AWM tone generation method uses multiple recordings (samples) of an instrument across the range of the keyboard; thus, the actual sound of the voice may be slightly different from note to note.

Problem	Possible Cause and Solution
<ul style="list-style-type: none"> • The volume is too soft. • The sound quality is poor. • The rhythm stops unexpectedly or will not play. • The recorded data of the song, etc. does not play correctly. • The LCD display suddenly goes dark, and all panel settings are reset. 	<p>The batteries are low or dead. Replace all six batteries with completely new ones, or use the included AC adaptor.</p>
<p>Power suddenly and unexpectedly turns off.</p>	<p>This is normal and the Auto Power Off function may have been activated (page 13). If you need to disable the Auto Power Off function, select "Off" in the Function settings (Function 060; page 55).</p>
<p>When the instrument is turned on, power is turned off suddenly and unexpectedly.</p>	<p>The protection circuit has been activated due to over current. This may occur when an AC adaptor other than the one specified is used, or an AC adaptor is damaged. Use the specified adaptor (page 85) only. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.</p>
<p>The application on your smart device doesn't recognize the instrument.</p>	<p>Is Storage Mode set to ON? Make sure that Storage Mode is set to OFF; refer to "Function Settings" on page 55 (Function 056).</p>

Song Book Sample

This score is provided with the part of the song book (free downloadable scores).
The song book contains not only the scores for all internal songs (excepting Songs 1–3) but also music terms and important points for your practice. To obtain this SONG BOOK, access the Yamaha website and download it from the product web page.

Yamaha Global Site <https://www.yamaha.com>

* The Song book is provided in English, French, German and Spanish.
This example introduces part of the English song book.

Für Elise

L. v. Beethoven

Basic

Song No.004

Für Elise ~ With Step Map ~ 12

Für Elise is an all-time classical favorite.

The beautiful, well-known melody is repeated a number of times.


In each step you won't be practicing alone. You have a wonderful orchestra to back you up!

First, listen to the example a few times. It won't be long before you'll want to start playing it yourself!

Step 01	Warm-up Exercise - "The Semitone Mystery"	14
Step 02	Diligent Practice Time	15
Step 03	Warm-up Exercise - "Basic Accompaniment"	16
Step 04	Diligent Practice Time	16
Step 05	First Half Review	17
Step 06	Diligent Practice Time	17
Step 07	Warm-up Exercise - "The Jump Competition"	18
Step 08	"EEEEEE!"	18
Step 09	"Left! Right! Left! Right!"	19
Step 10	Second Half Review	19
Step 11	Play the Whole Song!	19


Before Playing...

◇ Sit Correctly

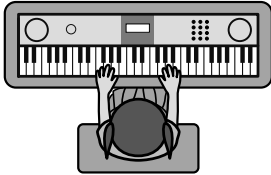

Sit near the middle of the keyboard.

◇ Finger Numbering

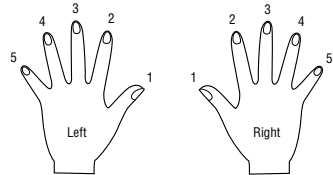

Reading the Score

◇ The Keyboard, Staff Lines, and Clef

1 octave
2 black keys 3 black keys

C D E F G A B C D E F G A B C D E F G A B C D E F G A B C D E F G A B C D E F G A B C D E F G A B C

Middle C (C3)

Treble clef

Bass clef

Clef

Key signature

Time signature

◇ Notes and Rests

Whole note		1 2 3 4	Whole note rest	
Dotted half note		1 2 3 4	Dotted half note rest	
Half note		1 2 3 4	Half note rest	
Dotted quarter note		1 2 3 4	Dotted quarter note rest	
Quarter note		1 2 3 4	Quarter note rest	
Eighth note		1 2 3 4	Eighth note rest	
Sixteenth note		1 2 3 4	Sixteenth note rest	

◇ Accidentals

- # (Sharp) Raise a semitone
- b (Flat) Lower a semitone
- ♮ (Natural) Return to normal pitch

◇ Time Signatures and Counting Time

4/4 time 	2/2 time 	2/4 time
3/4 time 	6/8 time 	9/8 time

Song No.004

Basic

Für Elise

~ With Step Map ~

Play with both hands as if gently telling a story. It might help to sing or hum the melody as you play.
 Similar melody lines and rhythms are repeated in this song, so there aren't as many sections to practice as you might think. Enjoy learning each section as you build proficiency.

Step 05 From here... ▶

Andante
pp


Step 01
Step 02

Step 04

Step 03


Step 02

Step 05 ...to here Step 10 From here...

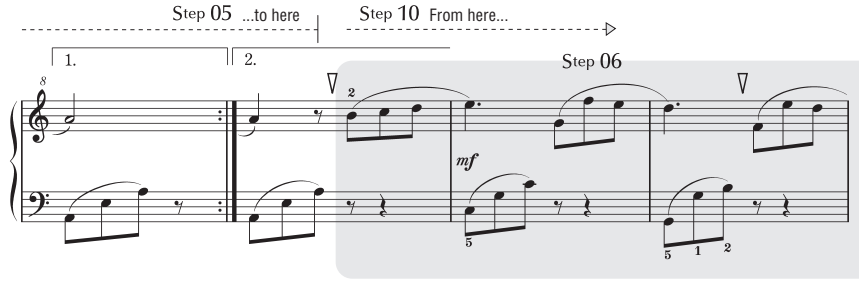

8 1. 2. Step 06 *mf*

Step 08 Step 09

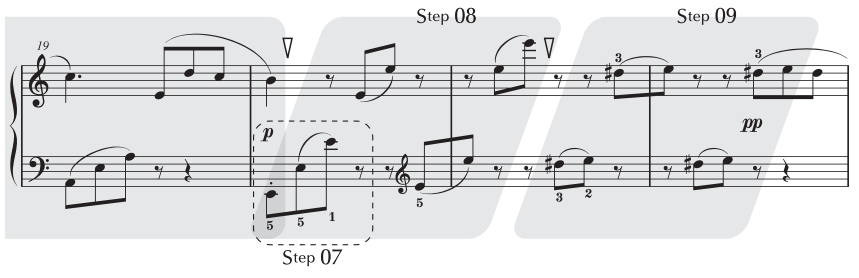

19 Step 07 *p* Step 09 *pp*



Step 10 ...to here





Step 01



Warm-up Exercise - "The Semitone Mystery"

Let's start with a warm-up exercise using three fingers of the right hand. We'll start by ascending and descending the white and black keys. Check out the illustrations until you understand how the fingers are supposed to move, then get started!

You'll find it easier to play if you bend your fingers slightly.

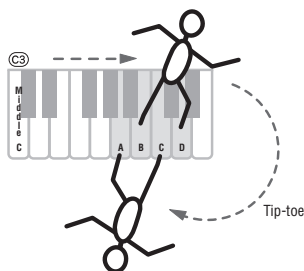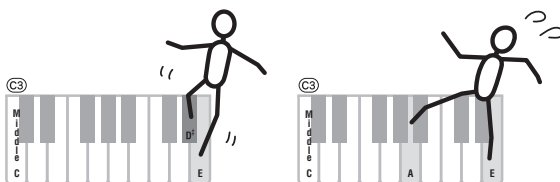

Go back to the beginning and play it again.

Step 02



Diligent Practice Time

 
Right! Now that we're warmed up let's try playing along with the orchestra in 3/4 time.

The melody will be built up little by little.

Compare each line... notice that many of the shapes formed by the notes are very similar.



Short break




Almost done ♪

Step 03



Warm-up Exercise - "Basic Accompaniment"

And now a warm-up exercise for the left hand.
It's important to spread your fingers widely from the start.
Don't play the black keys too strongly.

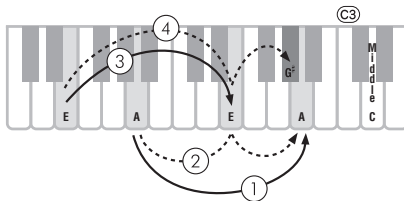

Step 04



Diligent Practice Time

Connect the notes smoothly, as if the left hand were passing them to the right hand. You'll be able to play smoothly if you move the left hand into position for the next phrase as soon as it finishes playing the first phrase.

Step 05



First Half Review

You've reached the halfway step! Have you learned all the material provided in the preceding steps? Now let's go back and play through all the first-half exercises. If you find that you're having trouble playing any of the material, go back and review the steps using the Step Map as a guide.

Step 06



Diligent Practice Time

OK, let's begin the second half!

You'll be able to play the melody nicely if you lift your fingers from the keyboard between the slurs.

It might be easier to grasp the key release timing if you sing along with the melody.

Don't panic and play too strongly where the left hand has to play short notes.

Always have left-hand finger 5 ready to play the next note!

Song No.004  Für Elise **Basic**


Step 07



Jump to the next E!

Warm-up Exercise - "The Jump Competition"

The first note has a staccato dot.
Spread your fingers wide and jump quickly to the next note!

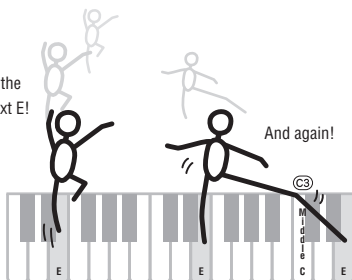

Step 08



"EEEEEE!"

The only note in this step is E!
Make the connection between the left and right hands as smooth as possible.

Step 09**“Left! Right! Left! Right!”**

Play “D[♯] E” repeatedly, alternating the left and right hands.

Have the next hand ready in position to play D[♯] so you won't have to rush.

Step 10**Second Half Review**

Try playing all the way through the second half.

As we did after the first half, if there are places you can't play with confidence go back and review the steps.

Step 11**Play the Whole Song!**

This is the finishing step!

Don't be afraid of making mistakes. Just concentrate on playing the entire song from start to finish.

Practice this with the lessons learned in each step in mind, and gradually you'll master the whole song.

Voice List

Maximum Polyphony

The instrument has 48-note maximum polyphony. This means that it can play a maximum of up to 48 notes at once, regardless of what functions are used. Auto accompaniment uses a number of the available notes, so when auto accompaniment is used the total number of available notes for playing on the keyboard is correspondingly reduced. The same applies to the Split Voice and Song functions. If the maximum polyphony is exceeded, earlier played notes will be cut off and the most recent notes have priority (last note priority).

NOTE

- The Voice List includes MIDI program change numbers for each voice. Use these program change numbers when playing the instrument via MIDI from an external device.
- Program change numbers are often specified as numbers "0-127." For these cases, it is necessary to subtract 1 from the intended program change number to select the appropriate sound, because this list uses a "1-128" numbering system. For example, to select program change number 38 in the list below, transmit program change number 37.
- Some voices may sound continuously or have a long decay after the notes have been released while the sustain pedal (footswitch) is held.

Panel Voice List

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
PIANO				
1	0	115	1	Live! Concert Grand Piano
2	0	112	1	Grand Piano
3	0	112	2	Bright Piano
4	0	112	7	Harpischord
5	0	112	4	Honky Tonk Piano
6	0	112	3	MIDI Grand Piano
7	0	113	3	CP80
E.PIANO				
8	0	118	5	Cool! SuitcaseEP
9	0	118	6	JazzChorusEP
10	0	120	5	PhaseEP
11	0	119	5	Cool! TremoloEP
12	0	121	5	Cool! ElectricPiano
13	0	117	5	StageEP
14	0	114	5	Cool! Galaxy Electric Piano
15	0	113	6	Hyper Tines
16	0	112	5	Funky Electric Piano
17	0	112	6	DX Modern Electric Piano
18	0	114	6	Venus Electric Piano
19	0	112	8	Clavi
20	0	113	8	WahClavi
ORGAN				
21	0	118	19	Cool! Organ
22	0	117	19	Cool! Rotor Organ
23	0	112	17	Jazz Organ 1
24	104	49	17	Jazz Organ 1+RotaryFast
25	0	113	17	Jazz Organ 2
26	104	50	17	Jazz Organ 2+RotaryFast
27	0	112	19	Rock Organ
28	0	120	19	Octave Shift Organ
29	0	114	19	Purple Organ
30	0	112	18	Click Organ
31	0	116	17	Bright Organ
32	0	127	19	Theater Organ
33	0	121	20	16'+2' Organ
34	0	120	20	16'+4' Organ
35	0	113	20	Chapel Organ
36	0	112	20	Pipe Organ
37	0	112	21	Reed Organ
ACCORDION				
38	0	112	22	Musette Accordion
39	0	113	22	Traditional Accordion
40	0	113	24	Bandoneon
41	0	113	23	Modern Harp
42	0	114	23	Blues Harp
43	0	115	23	Harmonica

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
GUITAR				
44	8	96	1	S.Art Lite Nylon Guitar Harmonics ***
45	8	96	2	S.Art Lite Steel Guitar Harmonics ***
46	8	97	1	S.Art Lite Nylon Guitar Slide ***
47	8	97	2	S.Art Lite Steel Guitar Slide ***
48	8	96	6	S.Art Lite Distortion Guitar ***
49	0	116	25	Dynamic Nylon Guitar
50	0	118	30	Dynamic Overdriven
51	0	121	31	Dynamic Distortion Guitar
52	0	122	25	Nylon Guitar
53	0	112	25	Classical Guitar
54	104	25	26	Steel Guitar
55	0	112	26	Folk Guitar
56	0	112	27	Jazz Guitar
57	0	117	28	60s Clean Guitar
58	0	113	26	12Strings Guitar
59	0	112	28	Clean Guitar
60	0	127	28	Wah Guitar
61	0	113	27	Octave Guitar
62	0	112	29	Muted Guitar
63	0	112	30	Overdriven Guitar
64	0	112	31	Distortion Guitar
65	0	127	31	Wah Distortion Guitar
BASS				
66	8	96	18	S.Art Lite Slap Bass ***
67	0	116	34	Dynamic Electric Bass
68	0	112	34	Finger Bass
69	0	112	33	Acoustic Bass
70	0	112	35	Pick Bass
71	0	112	36	Fretless Bass
72	0	112	37	Slap Bass
73	0	121	40	Funk Bass
74	0	112	39	Synth Bass
75	0	113	39	Hi-Q Bass
76	0	113	40	Dance Bass
STRINGS				
77	8	96	50	S.Art Lite Strings ***
78	0	117	50	Live! Strings
79	104	23	49	Studio Strings
80	0	112	49	Strings
81	0	112	50	Chamber Strings
82	0	115	50	Marcato Strings
83	0	113	50	Slow Strings
84	0	112	45	Tremolo Strings
85	0	112	51	Synth Strings

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
86	0	112	46	Pizzicato Strings
87	0	116	46	Orchestra Pizzicato Strings
88	0	113	41	Sweet! Violin
89	0	112	41	Violin
90	0	112	43	Cello
91	0	112	44	Contrabass
92	0	112	47	Harp
93	0	112	56	Orchestra Hit
CHOIR				
94	8	96	55	S.Art Lite Gospel Choir ***
95	0	112	53	Choir
96	104	12	54	Gospel Hm
97	104	13	54	Gospel Wow
98	0	113	53	Vocal Ensemble
99	0	112	55	Air Choir
100	0	112	54	Vox Humana
SAXOPHONE				
101	8	96	83	S.Art Lite Tenor Sax ***
102	0	122	67	Sax Section
103	0	117	67	Sweet! Tenor Sax
104	0	112	67	Tenor Sax
105	0	112	66	Alto Sax
106	0	112	65	Soprano Sax
107	0	112	68	Baritone Sax
108	0	114	67	Breathy Tenor Sax
109	0	116	66	Small Sax Section
110	0	112	72	Clarinet
111	0	112	69	Oboe
112	0	112	70	English Horn
113	0	112	71	Bassoon
TRUMPET				
114	0	112	57	Trumpet
115	0	127	57	Distortion Trumpet
116	0	112	58	Trombone
117	0	113	58	Trombone Section
118	0	112	60	Muted Trumpet
119	0	112	61	French Horn
120	0	112	59	Tuba
BRASS				
121	8	96	57	S.Art Lite Brass Section ***
122	0	117	63	Live! Brass
123	0	112	62	Brass Section
124	0	113	62	Big Band Brass
125	0	116	62	Octave Brass
126	0	113	63	80s Brass
127	0	119	62	Mellow Horns
128	0	115	63	Funky Brass
129	0	114	63	Techno Brass
130	0	112	63	Synth Brass
FLUTE				
131	8	96	74	S.Art Lite Flute ***
132	0	114	74	Sweet! Flute
133	0	115	74	Sweet! Classical Flute
134	0	112	74	Flute
135	0	112	73	Piccolo
136	0	112	76	Pan Flute
137	0	112	75	Recorder
138	0	112	80	Ocarina
SYNTH				
139	104	20	91	Gemini
140	104	21	91	Hands Up!
141	0	112	81	Square Lead

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
142	0	112	82	Sawtooth Lead
143	0	108	82	RS Tech Saw
144	0	112	88	Under Heim
145	0	112	85	Portatone
146	0	115	82	Analogon 1
147	0	119	82	Fargo 1
148	104	53	82	Analogon 2
149	104	54	82	Fargo 2
150	0	112	86	Voice Lead
151	0	121	82	Funky Lead
152	0	118	89	Sweet Heaven
153	0	121	89	Dream Heaven
154	0	113	89	Symbiont
155	0	112	99	Stardust
156	0	112	101	Brightness
157	0	112	92	Xenon Pad
158	0	112	95	Equinox
159	0	112	89	Fantasia
160	0	113	90	Dark Moon
161	0	113	101	Bell Pad
162	0	126	90	RS Analog Pad
163	0	116	91	RS Short Resonance
PERCUSSION				
164	0	112	12	Vibraphone
165	0	113	12	Jazz Vibes
166	0	112	13	Marimba
167	0	112	14	Xylophone
168	0	112	115	Steel Drums
169	0	112	9	Celesta
170	0	112	11	Music Box
171	0	112	15	Tubular Bells
172	0	112	48	Timpani
WORLD				
173	0	112	106	Banjo
174	0	0	111	Fiddle
175	0	0	110	Bagpipe
176	0	0	16	Dulcimer 1
177	0	35	16	Dulcimer 2
178	0	96	16	Cimbalom
179	0	121	16	Santur
180	0	97	108	Kanoon
181	0	98	106	Oud
182	0	96	106	Rabab
183	0	0	109	Kalimba
184	0	113	21	Harmonium 1 (Single Reed)
185	0	114	21	Harmonium 2 (Double Reed)
186	0	115	21	Harmonium 3 (Triple Reed)
187	0	114	105	Tanpura
188	0	96	112	Pungi
189	0	117	74	Bansuri
190	0	0	105	Sitar 1
191	0	32	105	Detuned Sitar
192	0	35	105	Sitar 2
193	0	0	112	Shehnai
194	0	97	106	Gopichant
195	0	116	117	Tabla
196	0	115	111	Er Hu
197	0	118	74	Di Zi
198	0	116	106	Pi Pa
199	0	113	108	Gu Zheng
200	0	40	47	Yang Qin
201	0	120	111	Morin Khuur

Voice List

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
202	0	124	74	Suling
203	0	0	107	Shamisen
204	0	0	108	Koto
205	0	96	108	Taisho-kin
DUAL*				
206	-	-	-	Octave Piano
207	-	-	-	Piano & Strings
208	-	-	-	Piano Pad
209	-	-	-	Octave Harpsichord
210	-	-	-	Tiny Electric Piano
211	-	-	-	Electric Piano Pad
212	-	-	-	Full Organ
213	-	-	-	Octave Jazz Guitar
214	-	-	-	Octave Strings
215	-	-	-	Orchestra Section
216	-	-	-	Octave Pizzicato Strings
217	-	-	-	Strings Session
218	-	-	-	Brass Tutti
219	-	-	-	Orchestra Tutti
220	-	-	-	Octave French Horns
221	-	-	-	Octave Harp
222	-	-	-	Orchestra Hit & Timpani
223	-	-	-	Octave Choir
224	-	-	-	Jazz Brass Section
225	-	-	-	Jazz Section
226	-	-	-	Ballroom Sax Ensemble
227	-	-	-	Ballroom Brass
228	-	-	-	Flute & Clarinet
229	-	-	-	Trumpet & Trombone
230	-	-	-	Fat Synth Brass
231	-	-	-	Octave Lead
232	-	-	-	Super 5th Lead
SOUND EFFECT				
233	0	0	121	Fret Noise
234	0	0	122	Breath Noise
235	0	0	123	Seashore
236	0	0	124	Bird Tweet
237	0	0	125	Telephone Ring
238	0	0	126	Helicopter
239	0	0	127	Applause
240	0	113	116	Hand Clap
241	0	0	128	Gunshot
DRUM KIT				
242	127	0	88	Power Kit
243	127	0	1	Standard Kit 1
244	127	0	2	Standard Kit 2
245	127	0	9	Room Kit
246	127	0	17	Rock Kit
247	127	0	25	Electronic Kit
248	127	0	26	Analog Kit
249	127	0	113	Dance Kit
250	127	0	33	Jazz Kit
251	127	0	41	Brush Kit
252	127	0	49	Symphony Kit
253	126	0	128	StdKit 1 + Chinese Perc.
254	126	0	40	Indian Kit 1
255	126	0	115	Indian Kit 2
256	126	0	55	StdKit 1 + Indonesian Perc. 1
257	126	0	56	StdKit 1 + Indonesian Perc. 2
258	126	0	57	StdKit 1 + Indonesian Perc. 3
259	126	0	37	Arabic Kit
260	126	0	41	Cuban Kit

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
261	126	0	1	SFX Kit 1
262	126	0	2	SFX Kit 2
263	126	0	113	Sound Effect Kit
ARPEGGIO**				
264	-	-	-	Concerto
265	-	-	-	Latin Rock
266	-	-	-	Brass Section
267	-	-	-	Piano Ballad
268	-	-	-	Synth Sequence
269	-	-	-	Guitarist
270	-	-	-	Pickin'
271	-	-	-	Spanish
272	-	-	-	Funky Clavi
273	-	-	-	Harpeggio
274	-	-	-	Finger Bass Left
275	-	-	-	Combo Jazz Left
276	-	-	-	Paul's Bass Left
277	-	-	-	Trance Bass Left
278	-	-	-	Acid Bass Left
279	-	-	-	Piano Ballad Left
280	-	-	-	Salsa Piano Left
281	-	-	-	Piano Arpeggio Left
282	-	-	-	Guitar Arpeggio Left
283	-	-	-	Strum Left

* When you select a Voice of the DUAL category, two voices sound at the same time.

** Selecting a Voice number between 264 and 283 will turn on Arpeggio.

*** S.Art Lite voice (page 19)

XGlite Voice List

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
XG PIANO				
284	0	0	1	Grand Piano
285	0	1	1	Grand Piano KSP
286	0	40	1	Piano Strings
287	0	41	1	Dream
288	0	0	2	Bright Piano
289	0	1	2	Bright Piano KSP
290	0	0	3	Electric Grand Piano
291	0	1	3	Electric Grand Piano KSP
292	0	32	3	Detuned CP80
293	0	0	4	Honky Tonk Piano
294	0	1	4	Honky Tonk Piano KSP
295	0	0	5	Electric Piano 1
296	0	1	5	Electric Piano 1 KSP
297	0	32	5	Chorus Electric Piano 1
298	0	0	6	Electric Piano 2
299	0	1	6	Electric Piano 2 KSP
300	0	32	6	Chorus Electric Piano 2
301	0	41	6	DX + Analog Electric Piano
302	0	0	7	Harpischord 1
303	0	1	7	Harpischord KSP
304	0	35	7	Harpischord 2
305	0	0	8	Clavi
306	0	1	8	Clavi KSP
XG CHROMATIC				
307	0	0	9	Celesta
308	0	0	10	Glockenspiel
309	0	0	11	Music Box 1
310	0	64	11	Music Box 2
311	0	0	12	Vibraphone
312	0	1	12	Vibraphone KSP
313	0	0	13	Marimba
314	0	1	13	Marimba KSP
315	0	64	13	Sine Marimba
316	0	97	13	Balimba
317	0	98	13	Log Drums
318	0	0	14	Xylophone
319	0	0	15	Tubular Bells
320	0	96	15	Church Bells
321	0	97	15	Carillon
XG ORGAN				
322	0	0	17	Drawbar Organ 1
323	0	32	17	Detuned Drawbar Organ
324	0	33	17	60s Drawbar Organ 1
325	0	34	17	60s Drawbar Organ 2
326	0	35	17	70s Drawbar Organ 1
327	0	37	17	60s Drawbar Organ 3
328	0	40	17	16+2'2/3 Organ
329	0	64	17	Organ Bass
330	0	65	17	70s Drawbar Organ 2
331	0	66	17	Cheezy Organ
332	0	67	17	Drawbar Organ 2
333	0	0	18	Percussive Organ 1
334	0	24	18	70s Percussive Organ
335	0	32	18	Detuned Percussive Organ
336	0	33	18	Light Organ
337	0	37	18	Percussive Organ 2
338	0	0	19	Rock Organ
339	0	64	19	Rotary Organ
340	0	65	19	Slow Rotary Organ
341	0	66	19	Fast Rotary Organ

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
342	0	0	20	Church Organ 1
343	0	32	20	Church Organ 3
344	0	35	20	Church Organ 2
345	0	40	20	Notre Dame
346	0	64	20	Organ Flute
347	0	65	20	Tremolo Organ Flute
348	0	0	21	Reed Organ
349	0	40	21	Puff Organ
350	0	0	22	Accordion
351	0	0	23	Harmonica 1
352	0	32	23	Harmonica 2
353	0	0	24	Tango Accordion 1
354	0	64	24	Tango Accordion 2
XG GUITAR				
355	0	0	25	Nylon Guitar 1
356	0	25	25	Nylon Guitar 3
357	0	43	25	Velocity Guitar Harmonics
358	0	96	25	Ukulele
359	0	0	26	Steel Guitar
360	0	35	26	12-string Guitar
361	0	40	26	Nylon & Steel Guitar
362	0	41	26	Steel Guitar with Body Sound
363	0	96	26	Mandolin
364	0	0	27	Jazz Guitar
365	0	32	27	Jazz Amp
366	0	0	28	Clean Guitar
367	0	32	28	Chorus Guitar
368	0	0	29	Muted Guitar
369	0	40	29	Funk Guitar
370	0	41	29	Muted Steel Guitar
371	0	45	29	Jazz Man
372	0	0	30	Overdriven Guitar
373	0	43	30	Guitar Pinch
374	0	0	31	Distortion Guitar
375	0	40	31	Feedback Guitar 1
376	0	41	31	Feedback Guitar 2
377	0	0	32	Guitar Harmonics 1
378	0	65	32	Guitar Feedback
379	0	66	32	Guitar Harmonics 2
XG BASS				
380	0	0	33	Acoustic Bass
381	0	40	33	Jazz Rhythm
382	0	45	33	Velocity Crossfade Upright Bass
383	0	0	34	Finger Bass 1
384	0	18	34	Finger Bass Dark
385	0	40	34	Bass & Distorted Electric Guitar
386	0	43	34	Finger Slap Bass
387	0	45	34	Finger Bass 2
388	0	65	34	Modulated Bass
389	0	0	35	Pick Bass
390	0	28	35	Muted Pick Bass
391	0	0	36	Fretless Bass 1
392	0	32	36	Fretless Bass 2
393	0	33	36	Fretless Bass 3
394	0	34	36	Fretless Bass 4
395	0	0	37	Slap Bass 1
396	0	32	37	Punch Thumb Bass
397	0	0	38	Slap Bass 2
398	0	43	38	Velocity Switch Slap
399	0	0	39	Synth Bass 1
400	0	40	39	Techno Synth Bass

Voice List

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
401	0	0	40	Synth Bass 2
402	0	6	40	Mellow Synth Bass
403	0	12	40	Sequenced Bass
404	0	18	40	Click Synth Bass
405	0	19	40	Synth Bass 2 Dark
406	0	40	40	Modular Synth Bass
407	0	41	40	DX Bass
XG STRINGS				
408	0	0	41	Violin
409	0	8	41	Slow Violin
410	0	0	42	Viola
411	0	0	43	Cello
412	0	0	44	Contrabass
413	0	0	45	Tremolo Strings
414	0	8	45	Slow Tremolo Strings
415	0	40	45	Suspense Strings
416	0	0	46	Pizzicato Strings
417	0	0	47	Orchestral Harp
418	0	0	48	Timpani
XG ENSEMBLE				
419	0	0	49	Strings 1
420	0	3	49	Stereo Strings
421	0	8	49	Slow Strings
422	0	35	49	60s Strings
423	0	40	49	Orchestra 1
424	0	41	49	Orchestra 2
425	0	42	49	Tremolo Orchestra
426	0	45	49	Velocity Strings
427	0	0	50	Strings 2
428	0	3	50	Stereo Slow Strings
429	0	8	50	Legato Strings
430	0	40	50	Warm Strings
431	0	41	50	Kingdom
432	0	0	51	Synth Strings 1
433	0	64	51	Synth Strings 4
434	0	0	52	Synth Strings 2
435	0	0	53	Choir Aahs
436	0	3	53	Stereo Choir
437	0	32	53	Mellow Choir
438	0	40	53	Choir Strings
439	0	0	54	Voice Oohs
440	0	0	55	Synth Voice 1
441	0	40	55	Synth Voice 2
442	0	41	55	Choral
443	0	64	55	Analog Voice
444	0	0	56	Orchestra Hit 1
445	0	35	56	Orchestra Hit 2
446	0	64	56	Impact
XG BRASS				
447	0	0	57	Trumpet
448	0	32	57	Warm Trumpet
449	0	0	58	Trombone 1
450	0	18	58	Trombone 2
451	0	0	59	Tuba
452	0	0	60	Muted Trumpet
453	0	0	61	French Horn 1
454	0	6	61	French Horn Solo
455	0	32	61	French Horn 2
456	0	37	61	Horn Orchestra
457	0	0	62	Brass Section
458	0	35	62	Trumpet & Trombone Section
459	0	0	63	Synth Brass 1





 




 







 











Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
460	0	20	63	Resonant Synth Brass
461	0	0	64	Synth Brass 2
462	0	18	64	Soft Brass
463	0	41	64	Choir Brass
XG REED				
464	0	0	65	Soprano Sax
465	0	0	66	Alto Sax
466	0	40	66	Sax Section
467	0	0	67	Tenor Sax
468	0	40	67	Breathy Tenor Sax
469	0	0	68	Baritone Sax
470	0	0	69	Oboe
471	0	0	70	English Horn
472	0	0	71	Bassoon
473	0	0	72	Clarinet
XG PIPE				
474	0	0	73	Piccolo
475	0	0	74	Flute
476	0	0	75	Recorder
477	0	0	76	Pan Flute
478	0	0	77	Blown Bottle
479	0	0	79	Whistle
480	0	0	80	Ocarina
XG SYNTH LEAD				
481	0	0	81	Square Lead 1
482	0	6	81	Square Lead 2
483	0	8	81	LM Square
484	0	18	81	Hollow
485	0	19	81	Shroud
486	0	64	81	Mellow
487	0	65	81	Solo Sine
488	0	66	81	Sine Lead
489	0	0	82	Sawtooth Lead 1
490	0	6	82	Sawtooth Lead 2
491	0	8	82	Thick Sawtooth
492	0	18	82	Dynamic Sawtooth
493	0	19	82	Digital Sawtooth
494	0	20	82	Big Lead
495	0	24	82	Heavy Synth
496	0	96	82	Sequenced Analog
497	0	0	83	Calliope Lead
498	0	65	83	Pure Lead
499	0	0	84	Chiff Lead
500	0	0	85	Charang Lead
501	0	64	85	Distorted Lead
502	0	0	86	Voice Lead
503	0	0	87	Fifths Lead
504	0	35	87	Big Five
505	0	0	88	Bass & Lead
506	0	16	88	Big & Low
507	0	64	88	Fat & Perky
508	0	65	88	Soft Whirl
XG SYNTH PAD				
509	0	0	89	New Age Pad
510	0	64	89	Fantasy
511	0	0	90	Warm Pad
512	0	0	91	Poly Synth Pad
513	0	0	92	Choir Pad
514	0	66	92	Itopia
515	0	0	93	Bowed Pad
516	0	0	94	Metallic Pad
517	0	0	95	Halo Pad










Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
518	0	0	96	Sweep Pad
XG SYNTH EFFECTS				
519	0	0	97	Rain
520	0	64	97	Harmo Rain
521	0	65	97	African Wind
522	0	66	97	Carib
523	0	0	98	Sound Track
524	0	27	98	Prologue
525	0	0	99	Crystal
526	0	12	99	Synth Drum Comp
527	0	14	99	Popcorn
528	0	18	99	Tiny Bells
529	0	35	99	Round Glockenspiel
530	0	40	99	Glockenspiel Chimes
531	0	41	99	Clear Bells
532	0	42	99	Chorus Bells
533	0	65	99	Soft Crystal
534	0	70	99	Air Bells
535	0	71	99	Bell Harp
536	0	72	99	Gamelimba
537	0	0	100	Atmosphere
538	0	18	100	Warm Atmosphere
539	0	19	100	Hollow Release
540	0	40	100	Nylon Electric Piano
541	0	64	100	Nylon Harp
542	0	65	100	Harp Vox
543	0	66	100	Atmosphere Pad
544	0	0	101	Brightness
545	0	0	102	Goblins
546	0	64	102	Goblins Synth
547	0	65	102	Creepier
548	0	67	102	Ritual
549	0	68	102	To Heaven
550	0	70	102	Night
551	0	71	102	Glisten
552	0	96	102	Bell Choir
553	0	0	103	Echoes
554	0	65	103	Big Pan
555	0	0	104	Sci-Fi
XG WORLD				
556	0	0	78	Shakuhachi
557	0	97	105	Tamboura
558	0	0	106	Banjo
559	0	28	106	Muted Banjo
XG PERCUSSIVE				
560	0	0	113	Tinkle Bell
561	0	96	113	Bonang
562	0	97	113	Altair
563	0	98	113	Gamelan Gongs
564	0	99	113	Stereo Gamelan Gongs
565	0	100	113	Rama Cymbal
566	0	0	114	Agogo
567	0	0	115	Steel Drums
568	0	97	115	Glass Percussion
569	0	98	115	Thai Bells
570	0	0	116	Woodblock
571	0	96	116	Castanets
572	0	0	117	Taiko Drum
573	0	96	117	Gran Cassa
574	0	0	118	Melodic Tom 1
575	0	64	118	Melodic Tom 2
576	0	65	118	Real Tom

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
577	0	66	118	Rock Tom
578	0	0	119	Synth Drum
579	0	64	119	Analog Tom
580	0	65	119	Electronic Percussion
581	0	0	120	Reverse Cymbal
XG SOUND EFFECTS				
582	64	0	1	Cutting Noise 1
583	64	0	2	Cutting Noise 2
584	64	0	4	String Slap
585	64	0	17	Flute Key Click
586	64	0	33	Shower
587	64	0	34	Thunder
588	64	0	35	Wind
589	64	0	36	Stream
590	64	0	37	Bubble
591	64	0	38	Feed
592	64	0	49	Dog
593	64	0	50	Horse
594	64	0	51	Bird Tweet 2
595	64	0	56	Maou
596	64	0	65	Phone Call
597	64	0	66	Door Squeak
598	64	0	67	Door Slam
599	64	0	68	Scratch Cut
600	64	0	69	Scratch Split
601	64	0	70	Wind Chime
602	64	0	71	Telephone Ring 2
603	64	0	81	Car Engine Ignition
604	64	0	82	Car Tires Squeal
605	64	0	83	Car Passing
606	64	0	84	Car Crash
607	64	0	85	Siren
608	64	0	86	Train
609	64	0	87	Jet Plane
610	64	0	88	Starship
611	64	0	89	Burst
612	64	0	90	Roller Coaster
613	64	0	91	Submarine
614	64	0	97	Laugh
615	64	0	98	Scream
616	64	0	99	Punch
617	64	0	100	Heartbeat
618	64	0	101	Footsteps
619	64	0	113	Machine Gun
620	64	0	114	Laser Gun
621	64	0	115	Explosion
622	64	0	116	Firework

Standard Kit 1 List

• For drum kits other than Standard Kit 1, refer to “Drum Kit List” on the website (page 8).

The lowest key		Voice No. 243 Standard Kit 1	
C1	C#1	C 1	 Seq Click H
		C# 1	 Brush Tap
D1	D#1	D 1	 Brush Swirl
		D# 1	 Brush Slap
E1		E 1	 Brush Tap Swirl
F1	F#1	F 1	 Snare Roll
		F# 1	 Castanet
G1	G#1	G 1	 Snare Soft
		G# 1	 Sticks
A1	A#1	A 1	 Bass Drum Soft
		A# 1	 Open Rim Shot
B1		B 1	 Bass Drum Hard
C2	C#2	C 2	 Bass Drum
		C# 2	 Side Stick
D2	D#2	D 2	 Snare
		D# 2	 Hand Clap
E2		E 2	 Snare Tight
F2	F#2	F 2	 Floor Tom L
		F# 2	 Hi-Hat Closed
G2	G#2	G 2	 Floor Tom H
		G# 2	 Hi-Hat Pedal
A2	A#2	A 2	 Low Tom
		A# 2	 Hi-Hat Open
B2		B 2	 Mid Tom L
C3	C#3	C 3	 Mid Tom H
		C# 3	 Crash Cymbal 1
D3	D#3	D 3	 High Tom
		D# 3	 Ride Cymbal 1
E3		E 3	 Chinese Cymbal

		Voice No. 243 Standard Kit 1	
F3	F#3	F 3	 Ride Cymbal Cup
		F# 3	 Tambourine
G3	G#3	G 3	 Splash Cymbal
		G# 3	 Cowbell
A3	A#3	A 3	 Crash Cymbal 2
		A# 3	 Vibraslap
B3		B 3	 Ride Cymbal 2
C4	C#4	C 4	 Bongo H
		C# 4	 Bongo L
D4	D#4	D 4	 Conga H Mute
		D# 4	 Conga H Open
E4		E 4	 Conga L
F4	F#4	F 4	 Timbale H
		F# 4	 Timbale L
G4	G#4	G 4	 Agogo H
		G# 4	 Agogo L
A4	A#4	A 4	 Cabasa
		A# 4	 Maracas
B4		B 4	 Samba Whistle H
C5	C#5	C 5	 Samba Whistle L
		C# 5	 Guiro Short
D5	D#5	D 5	 Guiro Long
		D# 5	 Claves
E5		E 5	 Wood Block H
F5	F#5	F 5	 Wood Block L
		F# 5	 Cuica Mute
G5	G#5	G 5	 Cuica Open
		G# 5	 Triangle Mute
A5	A#5	A 5	 Triangle Open
		A# 5	 Shaker
B5		B 5	 Jingle Bells
C6		C 6	 Bell Tree

Song List

Song No.	Song Name
TOP PICK	
001	Demo 1 (Yamaha Original)
002	Demo 2 (Yamaha Original)
003	Demo 3 (Yamaha Original)
LEARN TO PLAY	
004	Für Elise (Basic) (L. v. Beethoven)
005	Für Elise (Advanced) (L. v. Beethoven)
006	Twinkle Twinkle Little Star (Basic) (Traditional)
007	Twinkle Twinkle Little Star (Advanced) (Traditional)
008	Turkish March (Basic) (W.A. Mozart)
009	Turkish March (Advanced) (W.A. Mozart)
010	Ode to Joy (Basic) (L. v. Beethoven)
011	Ode to Joy (Advanced) (L. v. Beethoven)
012	The Entertainer (Basic) (S. Joplin)
013	The Entertainer (Advanced) (S. Joplin)
014	Londonderry Air (Basic) (Traditional)
015	Londonderry Air (Advanced) (Traditional)
016	The Last Rose of Summer (Basic) (Traditional)
017	The Last Rose of Summer (Advanced) (Traditional)
018	Amazing Grace (Basic) (Traditional)
019	Amazing Grace (Advanced) (Traditional)
FAVORITE	
020	Frère Jacques (Traditional)
021	Der Froschgesang (Traditional)
022	Aura Lee (Traditional)
023	London Bridge (Traditional)
024	Sur le pont d'Avignon (Traditional)
025	Nedelka (Traditional)
026	Aloha Oe (Q. Liliuokalani)
027	Sippin' Cider Through a Straw (Traditional)
028	Old Folks at Home (S. C. Foster)
029	Bury Me Not on the Lone Prairie (Traditional)
030	Old MacDonald Had A Farm (Traditional)
031	Santa Lucia (A. Longo)
032	If You're Happy and You Know It (Traditional)
033	Beautiful Dreamer (S. C. Foster)
034	Greensleeves (Traditional)
035	Kalinka (Traditional)
036	Holdilia Cook (Traditional)
037	Ring de Banjo (S. C. Foster)
038	La Cucaracha (Traditional)
039	Funiculi Funicula (L. Denza)
040	Largo (from the New World) (A. Dvořák)
041	Brahms' Lullaby (J. Brahms)
042	Liebesträume Nr.3 (F. Liszt)
043	Pomp and Circumstance (E. Elgar)
044	Chanson du Toreador (G. Bizet)
045	Jupiter, the Bringer of Jollity (G. Holst)
046	The Polovetsian Dances (A. Borodin)
047	Die Moldau (B. Smetana)
048	Salut d'Amour op.12 (E. Elgar)
049	Humoresques (A. Dvořák)
050	Symphony No.9 (from the New World - 4th movement) (A. Dvořák)
FAVORITE WITH STYLE	
051	O du lieber Augustin (Traditional)
052	Mary Had a Little Lamb (Traditional)
053	When Irish Eyes Are Smiling (E. R. Ball)
054	Little Brown Jug (Traditional)
055	Ten Little Indians (Traditional)
056	On Top of Old Smoky (Traditional)
057	My Darling Clementine (Traditional)
058	Oh! Susanna (S. C. Foster)
059	Red River Valley (Traditional)
060	Turkey in the Straw (Traditional)

Song No.	Song Name
061	Muffin Man (R. A. King)
062	Pop Goes the Weasel (Traditional)
063	Grandfather's Clock (H. C. Work)
064	Camptown Races (S. C. Foster)
065	When the Saints Go Marching In (Traditional)
066	Yankee Doodle (Traditional)
067	Battle Hymn of the Republic (Traditional)
068	I've Been Working on the Railroad (Traditional)
069	American Patrol (F. W. Meacham)
070	Down by the Riverside (Traditional)
INSTRUMENT MASTER	
071	Sicilienne/Fauré (G. Fauré)
072	Swan Lake (P. I. Tchaikovsky)
073	Grand March (Aida) (G. Verdi)
074	Serenade for Strings in C major, op.48 (P. I. Tchaikovsky)
075	Pizzicato Polka (J. Strauss II)
076	Romance de Amor (Traditional)
077	Menuett BWV Anh.114 (J. S. Bach)
078	Ave Verum Corpus (W. A. Mozart)
079	Radetzky Marsch (J. Strauss I)
PIANO REPERTOIRE	
080	Wenn ich ein Vöglein wär (Traditional)
081	Die Lorelei (F. Silcher)
082	Home Sweet Home (H. R. Bishop)
083	Scarborough Fair (Traditional)
084	My Old Kentucky Home (Traditional)
085	Loch Lomond (Traditional)
086	Silent Night (F. Gruber)
087	Deck the Halls (Traditional)
088	O Christmas Tree (Traditional)
089	Sonata Pathétique 2nd Adagio Cantabile (L. v. Beethoven)
090	Ave Maria/J. S. Bach - Gounod (J. S. Bach / C. F. Gounod)
091	Jesus bleibet meine Freude (J. S. Bach)
092	Prelude op.28-15 "Raindrop" (F. Chopin)
093	Nocturne op.9-2 (F. Chopin)
094	Etude op.10-3 "Chanson de L'adieu" (F. Chopin)
095	Romanze (Serenade K.525) (W. A. Mozart)
096	Arabesque (J. F. Burgmüller)
097	La Chevaleresque (J. F. Burgmüller)
098	Für Elise (L. v. Beethoven)
099	Turkish March (W.A. Mozart)
100	24 Preludes op.28-7 (F. Chopin)
101	Annie Laurie (Traditional)
102	Jeanie with the Light Brown Hair (S. C. Foster)

Song No.	Special Appendix
TOUCH TUTOR	
103–112	T Tutor01–T Tutor10
CHORD STUDY	
113–124	ChdStd01–ChdStd12
CHORD PROGRESSION	
125–154	Maj1234–min1476

- Some songs have been edited for length or for ease in learning, and may not be exactly the same as the original.
- A song book (free downloadable scores) is available that includes scores for all internal songs (excepting Songs 1–3). To obtain this SONG BOOK, access the Yamaha website and download it from the product web page.
<https://www.yamaha.com>

Style List

Style No.	Style Name
8BEAT	
1	BritPopRock
2	8BeatModern
3	Cool8Beat
4	Happy8Beat
5	Shake8Beat
6	BoyBandPop
7	SweetPop
8	ContemporaryRock
9	StadiumRock
10	70sRock
11	HardRock 1
12	60sGuitarPop
13	8BeatAdria
14	60s8Beat
15	8Beat
16	OffBeat
17	Folkrock
18	60sRock
19	HardRock 2
20	RockShuffle
21	8BeatRock
16BEAT	
22	16Beat
23	DancehallPop
24	CinematicPop
25	PopShuffle
26	GuitarPop
27	16BeatUptempo
28	KoolShuffle
29	HipHopLight
BALLAD	
30	70sGlamPiano
31	EpicDivaBallad
32	OrchestraRockBallad
33	PianoBallad
34	LoveSong
35	6/8ModernEP
36	6/8SlowRock
37	OrganBallad
38	PopBallad
39	16BeatBallad
DANCE	
40	ClubBeat
41	SkyPop
42	AgagBeat
43	Electronica
44	FunkyHouse
45	RetroClub
46	USHipHop
47	MellowHipHop
48	Chillout

Style No.	Style Name
49	EuroTrance
50	Ibiza
51	SwingHouse
52	Clubdance
53	ClubLatin
54	Garage 1
55	Garage 2
56	TechnoParty
57	UKPop
58	HipHopGroove
59	HipShuffle
60	HipHopPop
DISCO	
61	ModernDisco
62	70sDisco
63	LatinDisco
64	SaturdayNight
65	DiscoHands
SWING&JAZZ	
66	BigBandFast
67	BigBandBallad
68	AcousticJazz
69	AcidJazz
70	JazzClub
71	Swing 1
72	Swing 2
73	Five/Four
74	Dixieland
75	Ragtime
R&B	
76	BluesRock
77	UK Soul
78	JustR&B
79	WorshipAcoustic1
80	WorshipAcoustic2
81	WorshipRockBallad
82	Soul
83	DetroitPop
84	60sRock&Roll
85	6/8Soul
86	CrocoTwist
87	Rock&Roll
88	ComboBoogie
89	6/8Blues
COUNTRY	
90	CountryPop
91	CountrySwing
92	Country2/4
93	Bluegrass
LATIN	
94	BrazilianSamba
95	BrazilianBossa

Style No.	Style Name
96	Bachata
97	CubanSon
98	Guajira
99	BossaNova
100	Forro
101	Sertanejo 1
102	Sertanejo 2
103	Baião
104	TangoArgentino
105	CumbiaPeruana
106	CumbiaColombiana
107	Vallenato
108	Joropo
109	Parranda
110	Merengue
111	ReggaetonPop
112	Reggaeton
113	Tijuana
114	PasoDuranguense
115	CumbiaGrupera
116	BaladaBanda
117	MexicanMambo
118	Mambo
119	Salsa
120	Beguine
121	Reggae
WORLD	
122	Hawaiian
123	CelticDance
124	ScottishReel
125	4/4Standart
126	Rumba2/4
127	Saeidy
128	WehdaSaghira
129	IranianElec
130	Emarati
131	AfricanGospelReggae
132	HighLife1
133	AfricanGospel
134	Makossa
135	ModernAfrobeat
136	HighLife2
137	OrganHighLife
138	IgboHighLife
139	SocaCalypso
140	Azonto
141	IndianPop
142	Bhangra
143	Bhajan
144	BollyMix
145	Tamil
146	Kerala

Style No.	Style Name
147	GoanPop
148	Rajasthan
149	Dandiya
150	Qawwali
151	FolkHills
152	ModernDangdut1
153	Keroncong
154	ModernDangdut2
155	DangdutUmum
156	DangdutSlowLegend
157	Dangdut3/4
158	KoploRampak
159	LanggamModern
160	DangdutJawa
161	Congdut
162	VietnamesePopBallad
163	Vietnamese6/8Ballad
164	XiQingLuoGu
165	YiZuMinGe
166	JingJuJieZou
BALLROOM	
167	VienneseWaltz
168	EnglishWaltz
169	Slowfox
170	Foxtrot
171	Quickstep
172	Tango
173	Pasodoble
174	Samba
175	ChaChaCha
176	Rumba
177	Jive
TRADITIONAL	
178	US March
179	6/8March
180	GermanMarch
181	PolkaPop
182	OberkrainerPolka
183	Tarantella
184	Showtune
185	ChristmasSwing
186	ChristmasWaltz
WALTZ	
187	ItalianWaltz
188	SwingWaltz
189	JazzWaltz
190	ValsMexicano
191	CountryWaltz
192	OberkrainerWalzer
193	Musette
CHILDREN	
194	Learning2/4

Style No.	Style Name
195	Learning4/4
196	Learning6/8
PIANIST	
197	Stride
198	PianoSwing
199	PianoBoogie
200	Arpeggio
201	Habanera
202	SlowRock
203	8BeatPianoBallad
204	6/8PianoMarch
205	PianoWaltz

Music Database List

MDB No.	MDB Name
ALL TIME HITS	
1	Jude Hey
2	Jumping
3	WrldRock
4	All OK
5	YourTune
6	USA Surf
7	JustCall
8	Get Home
9	GrWheel
10	lWasBorn
11	Sailing
12	BluJeans
13	Holiday
14	Imagine
15	Marriage
16	WiteShde
17	NowNever
18	Hard Day
19	USA Pie
20	Norway
21	YesterBd
22	A Magic
POP & ROCK	
23	UR Shape
24	Love Me
25	Ideal
26	SweetPop
27	Just Way
28	Speed
29	Cheerful
30	SwftShke
31	Watches
32	PrtTmLvr
33	S Party
34	MoonShdw
35	NikitSng
36	GirlsMne
37	Radio
38	Attempt
39	OnAStrng
40	WhatWant
41	ThankFor
42	Tmbourin
43	RubyGirl
44	TopWorld
45	TeachSng
46	Each Min
47	ShakenUp
48	CrocRock
49	HurryLov
50	Champion
51	Jailhouus


 
 
 

 


 

 









 
MDB No.	MDB Name
52	Rock&Rll
53	HonkyTrnk
54	JustU&Me
55	LveSmile
56	Wish I
BALLAD	
57	StayWith
58	DontMiss
59	HiBallad
60	Red Lady
61	IvoryAnd
62	TheWorld
63	Paradise
64	Whisper
65	Woman
66	CndleWnd
67	Fly Away
68	Love You
69	SavingAl
70	InTheDrk
71	Say You
72	Way Were
73	Inspiring
OLDIES	
74	Diana's
75	Tonight
76	SandLter
77	No Rain
78	Ghetto
79	PrettyWm
80	Sherry
81	Sally's
DANCE & DISCO	
82	SkyStars
83	Bad Love
84	PokerPop
85	FevrNite
86	StyAlive
87	Westerly
88	Run Free
89	DISCO
90	JoelLife
91	Coupled
92	SingBack
93	Janeiro
94	BoomRoom
95	DontHide
96	RewCraig
97	LondonRU
98	WerUBeen
99	MkeMusic
100	10,2 Sun
101	Trust

MDB No.	MDB Name
102	MarieCib
SWING & JAZZ	
103	Moon Of
104	Patrol
105	Rhythm
106	CatSwing
107	Misbehav
108	Safari
109	SoWhats
110	TimeGone
111	TasteHny
112	Two Foot
113	Blk&Whte
114	EnterRag
115	TakeFour
116	Birdland
117	MistyFln
COUNTRY	
118	OnTheRd
119	BlueSong
120	InMyMind
121	RoadHome
122	GreenGrS
123	EverNeed
124	Lucille
125	Tennessee
LATIN	
126	LoveAmor
127	Brasil
128	ChryPink
129	MyShadow
130	BosaWave
131	DntWorry
132	I'm Pola
133	Mambo Jm
134	One Note
135	PasoCani
136	Beguine
137	Tijuana
138	Puntuali
139	Cielito
140	The Liar
141	Unfrgivr
ENTERTAINMENT	
142	Raindrop
143	Califrag
144	CatMemry
145	MyPrince
146	Showbiz
147	JinglBel
148	SilentNt
149	Christms
150	Favorite

MDB No.	MDB Name
151	RedRdolf
152	Moon Wlz
153	AroundWd
WALTZ & TRAD	
154	DadClock
155	RockBaby
156	SomeLara
157	Doodah!
158	Dreamer
159	Birthday
160	Sunshine
161	Tex Rose
162	ThePolka
163	Yankee's
164	DanubeWz
165	D'amor
166	Reine de
167	MnchHaus
168	Comrades
169	Van Maas
170	ClariPka

Effect Type List

Harmony Types

No.	Harmony Type	Description	
001	Duet	<p>If you want to sound one of the harmony types 01–05, play keys to the right side of the Split Point while playing chords in the left side of the keyboard after turning Auto Accompaniment on. One, two or three notes of harmony are automatically added to the note you play. When playing back a Song that includes chord data, harmony is applied whichever keys are played.</p>	
002	Trio		
003	Block		
004	Country		
005	Octave		
006	Trill 1/4 note		<p>If you keep holding down two different notes, the notes alternate (in a trill) continuously. (The trill speed differs depending on the selected type.)</p>
007	Trill 1/6 note		
008	Trill 1/8 note		
009	Trill 1/12 note		
010	Trill 1/16 note		
011	Trill 1/24 note		
012	Trill 1/32 note		<p>If you keep holding down a note, the note is repeated continuously. (The repeat speed differs depending on the selected type.)</p>
013	Tremolo 1/4 note		
014	Tremolo 1/6 note		
015	Tremolo 1/8 note		
016	Tremolo 1/12 note		
017	Tremolo 1/16 note		
018	Tremolo 1/24 note		
019	Tremolo 1/32 note		<p>If you play a note, echo is applied to the note played. (The echo speed differs depending on the selected type.)</p>
020	Echo 1/4 note		
021	Echo 1/6 note		
022	Echo 1/8 note		
023	Echo 1/12 note		
024	Echo 1/16 note		
025	Echo 1/24 note		
026	Echo 1/32 note		

Arpeggio Types

Arpeggio No.	Arpeggio Name
027	UpOct
028	DownOct
029	UpDwnOct
030	SynArp1
031	SynArp2
032	SynArp3
033	SynArp4
034	SyncEcho
035	PulsLine
036	StepLine
037	Random
038	Down&Up
039	SuperArp
040	AcidLine
041	TekEcho
042	VelGruv
043	Planet
044	Trance1
045	Trance2
046	Trance3
047	ChordAlt
048	SynChrd1
049	SynChrd2
050	Syncopa
051	Hybrid1
052	Hybrid2
053	Hybrid3
054	Hybrid4
055	Hybrid5
056	PfArp1
057	PfArp2
058	PfArp3
059	PfArp4
060	PfClub1
061	PfClub2
062	PfBallad
063	PfChd8th
064	EPArp
065	PfShuffle
066	PfRock
067	Clavi1
068	Clavi2
069	RocknPf
070	70RockPf
071	SlowflPf
072	SoulPf
073	ChordUp
074	ChdDance
075	LatinRck
076	Salsa1
077	Salsa2
078	Reggae1
079	Reggae2
080	Reggae3
081	6/8R&B
082	Gospel
083	BalladEP
084	Strum1
085	Strum2
086	Strum3
087	Strum4
088	Pickin1
089	Pickin2
090	Funky

Arpeggio No.	Arpeggio Name
091	GtrChrd1
092	GtrChrd2
093	GtrChrd3
094	GtrArp
095	FngrPck1
096	FngrPck2
097	CleanGtr
098	Slowfl
099	Samba1
100	Samba2
101	Spanish1
102	Spanish2
103	Harp1
104	Harp2
105	FngrBas1
106	FngrBas2
107	FngrBas3
108	CoolFunk
109	SlapBass
110	AcidBas1
111	AcidBas2
112	FunkyBas
113	CmbJazB1
114	CmbJazB2
115	CmbJazB3
116	NewR&BBs
117	HipHopBs
118	SmoothBs
119	DreamBas
120	TranceBs
121	LatinBas
122	Strings1
123	Strings2
124	Strings3
125	Strings4
126	StrngDwn
127	StrngUp
128	OrcheStr
129	Jupiter
130	Pizz1
131	Pizz2
132	BrasSec1
133	BrasSec2
134	BrasSec3
135	FunkBras
136	SoulReed
137	DiscoLd
138	SmoothPd
139	PercArp
140	Ethnic
141	Cresendo
142	DiscoCP
143	Perc1
144	Perc2
145	R&B
146	Funk1
147	Funk2
148	Funk3
149	Soul
150	CiscHip
151	Smooth
152	NewGospl
153	CmbJazz1
154	CmbJazz2

Arpeggio No.	Arpeggio Name
155	Bebop
156	JazzHop
157	FolkRock
158	Unpluggd
159	HipHop
160	Trance
161	Dream
162	2 Step
163	ClubHs1
164	ClubHs2
165	EuroTek
166	House
167	Ibiza1
168	Ibiza2
169	Ibiza3
170	Garage
171	Samba
172	African
173	Latin
174	China
175	Indian
176	Arabic

• When playing one of the Arpeggio Types 143 to 176, select the corresponding Voice below as the Main Voice.

143–173: Select a Drum Kit (Voice No.242–252).

174 (China): Select "StdKit1 + Chinese Perc." (Voice No.253).

175 (Indian): Select "Indian Kit 1" (Voice No.254) or "Indian Kit 2" (Voice No.255).

176 (Arabic): Select "Arabic Kit" (Voice No.259).

Reverb Types

No.	Reverb Type	Description
01–04	Hall 1–4	Concert hall reverb.
05	Cathedral	Rich reverb simulating the acoustics of a cathedral. Good for pipe organ sounds.
06–08	Room 1–3	Small room reverb.
09–10	Stage 1–2	Reverb for solo instruments.
11–12	Plate 1–2	Simulated steel plate reverb.
13	Off	No effect.

Chorus Types

No.	Chorus Type	Description
1–3	Chorus 1–3	Conventional chorus program with rich, warm chorusing.
4–5	Flanger 1–2	This produces a rich, animated wavering effect in the sound.
6	Off	No effect.

NOTE

- Some Styles/Songs may have types that are not listed above.
- The Reverb/Chorus Type is reset when you select another Style/Song.

DSP Types

No.	DSP Type	Description
01	Dual Rotary Speaker Bright Slow	Simulates a rotary speaker.
02	Dual Rotary Speaker Bright Fast	
03	Rotary Speaker Slow	
04	Rotary Speaker Fast	
05	Small Stereo Distortion	Stereo distortion for guitar. Setting for distortion sound.
06	Small Stereo Overdrive	Stereo distortion for guitar. Setting for overdrive sound.
07	Small Stereo Vintage Amp	Stereo distortion for guitar. Setting for vintage sound.
08	British Combo Classic	British combo amp simulator. Setting for classic sound.
09	British Combo Top Boost	British combo amp simulator. Setting for "TOP BOOST" sound.
10	British Combo Heavy	British combo amp simulator. Setting for heavy sound.
11	British Legend Blues	British stack amp simulator. Setting for blues sound.
12	British Legend Heavy	British stack amp simulator. Setting for heavy sound.
13	British Legend Clean	British stack amp simulator. Setting for clean sound.
14	Stereo Amp Sim Crunch	Stereo amp simulator.
15	Stereo Amp Sim Blues	
16	Chorus 1	Conventional chorus program with rich, warm chorusing.
17	Chorus 3	
18	Chorus 4	
19	Chorus 5	
20	Celeste 2	
21	Symphonic	Adds more stages to the modulation of Celeste.
22	Flanger1	Creates a sound similar to that of a jet airplane.
23	Vintage Phaser Stereo	This simulates an analog phaser, giving a strong vintage flavor to the sound. It is effective in stereo.
24	Phaser	Cyclically modulates the phase to add modulation to the sound.
25	E-Piano Phaser	Cyclically modulates the phase to add modulation to the sound. For electric piano.
26	Auto Wah	Cyclically modulates the center frequency of a wah filter.
27	Auto Wah + Distortion	Distortion can be applied to the output of Auto Wah.
28	Clavi Touch Wah	Clavinet Touch Wah
29	Tremolo	Rich Tremolo effect with both volume and pitch modulation.
30	E-Piano Tremolo	
31	Guitar Tremolo	
32	Ensemble Detune	Chorus effect without modulation, created by adding a slightly pitch-shifted sound.

No.	DSP Type	Description
33	Tempo Auto Pan	Tempo-synchronized auto pan.
34	Echo	Two delayed sounds (L and R), and independent feedback delays for L and R.
35	Cross Delay	The feedback of the two delayed sounds is crossed.
36	Compressor Medium	Compressor with medium setting.
37	3Band EQ	A mono EQ with adjustable LOW, MID, and HIGH equalization.
38	Harmonic Enhancer	Adds new harmonics to the input signal to make the sound stand out.

Specifications

Product Name			PSR-E373, YPT-370	PSR-EW310	
Size/Weight	Dimensions (W x D x H)		945 mm x 369 mm x 118 mm (37-3/16" x 14-1/2" x 4-5/8")	1151 mm x 369 mm x 118 mm (45-5/16" x 14-1/2" x 4-5/8")	
	Weight		4.6 kg (10 lb 2 oz) (not including batteries)	5.4 kg (11 lb 14 oz) (not including batteries)	
Control Interface	Keyboard	Number of Keys	61	76	
		Touch Response	Soft, Medium, Hard, Fixed		
	Display	Type	LCD		
		Backlight	Yes		
	Panel	Language	English		
Language		English			
Voices	Tone Generation	Tone Generation Technology	AWM Stereo Sampling		
	Polyphony (max.)		48		
	Preset	Number of Voices	622 (241 Panel Voices + 22 Drum/SFX kits + 20 Arpeggio + 339 XGlite Voices)		
	Compatibility		GM/XGlite		
Effects	Types	DSP	38 types		
		Reverb	12 types		
		Chorus	5 types		
		Master EQ	6 types		
	Functions	Dual	Yes		
		Split	Yes		
		Sustain	Yes		
		Harmony	26 types		
		Arpeggio	150 types		
		Melody Suppressor	Yes		
Articulation		Yes (11 Super Articulation Lite Voices)			
Accompaniment Styles	Preset	Number of Styles	205		
		Fingering	Smart Chord, Multi finger		
		Style Control	ACMP ON/OFF, SYNC START, START/STOP, INTRO/ENDING/rit., MAIN/AUTO FILL		
	External Styles		10		
	Other Features	Music Database	170		
		One Touch Setting (OTS)	Yes		
Compatibility		Style File Format (SFF)			
Songs (MIDI)	Preset	Number of Preset Songs	154 (including Touch Tutor: 10, Chord Study: 12, Chord Progression: 30)		
	Recording	Number of Songs	5		
		Number of Tracks	2		
		Data Capacity	Approx. 10,000 notes		
	Format	Playback	SMF Formats 0 & 1		
		Recording	Original File Format		
Functions	Lesson		KEYS TO SUCCESS, Lesson 1–3 (Listening, Timing, Waiting), Phrase Repeat, A-B Repeat, Chord Dictionary, Touch Tutor, Chord Study, Chord Progression		
	USB Audio (USB TO HOST)		44.1 kHz, 16 bit, stereo		
	Registration Memory	Number of Buttons		9	
		Overall Controls	Metronome	Yes	
	Tempo Range		11–280		
	Transpose		-12 to 0, 0 to +12		
	Tuning		427.0–440.0–453.0 Hz (approx. 0.2 Hz increments)		
	Miscellaneous	Duo	Yes		
PIANO Button		Yes (Portable Grand Button)			
Storage and Connectivity	Storage		Internal Memory Approx. 1.4 MB		
	Connectivity	DC IN		12 V	
		Headphones/Output		Standard stereo phone jack (PHONES/OUTPUT)	
		Sustain Pedal		Yes	
		AUX IN		Yes (Stereo mini jack)	
		USB TO HOST		Yes	
Sound System	Amplifiers		2.5 W + 2.5 W		
	Speakers		12 cm x 2		

Power Supply	Power Supply	AC Adaptor	Users within U.S or Europe: PA-130 or an equivalent recommended by Yamaha Others: PA-3C, PA-130 or an equivalent recommended by Yamaha
		Batteries	Six 1.5 V "AA" size alkaline (LR6), manganese (R6) or six 1.2 V "AA" size Ni-MH rechargeable batteries (HR6)
	Power Consumption		5 W (When using PA-130 AC adaptor)
	Auto Power Off		Yes (Time can be set)
Included Accessories			<ul style="list-style-type: none"> • Music rest • Owner's Manual • AC adaptor *1 (PA-130 or an equivalent recommended by Yamaha) • Online Member Product Registration <p>*1: May not be included depending on your particular area. Please check with your Yamaha dealer.</p>
Separately Sold Accessories (May not be available depending on your area.)			<ul style="list-style-type: none"> • AC adaptor: Users within U.S or Europe: PA-130 or an equivalent recommended by Yamaha Others: PA-3C, PA-130 or an equivalent recommended by Yamaha • Keyboard stand: L-2C • Headphones: HPH-50/HPH-100/HPH-150 • Footswitch: FC4A/FC5

* The contents of this manual apply to the latest specifications as of the publishing date. To obtain the latest manual, access the Yamaha website then download the manual file. Since specifications, equipment or separately sold accessories may not be the same in every locale, please check with your Yamaha dealer.

A		F	
A-B Repeat.....	33	Fast Forward.....	32
AC Adaptor.....	12	Fast Reverse.....	32
Accessories.....	85	Fingering Type.....	23
ACMP.....	24	Flash Clear.....	51
Arpeggio.....	20	Footswitch.....	14, 21
Arpeggio Type.....	81	Function List.....	52
Arpeggio Velocity.....	53	Functions.....	52
Articulation.....	19		
audio.....	48	G	
Audio data communication		GM System Level 1.....	8
by USB.....	50	Grade.....	38
Audio Device.....	48	Guide Note.....	39
Auto Accompaniment.....	23		
Auto Accompaniment range.....	24	H	
AUTO FILL.....	25	Harmony.....	20
Auto Power Off.....	13, 55	Harmony Type.....	21, 80
AUX IN.....	48	Headphones.....	14
B		I	
Backup Clear.....	51	Initial Send.....	54
Backup Parameters.....	51	Initialization.....	51
Batteries.....	12	INTRO.....	25
Battery Type.....	13, 55	iPad.....	50
Beat.....	15	iPhone.....	50
BGM.....	32		
		K	
C		Key → Transpose.....	52
Chord.....	15, 26	Keyboard Display.....	15
Chord Dictionary.....	28	Keys To Success.....	35
Chord Progressions.....	42		
Chord Study.....	41	L	
Chorus.....	19	Lesson.....	34
Chorus Type.....	53, 82	Listening.....	38
Clear (Backup parameters).....	51	Local Control.....	54
Clear (User Song).....	44		
computer.....	50	M	
Computer-related Operations.....	8	MAIN.....	25
		Main Voice.....	16
D		Master EQ.....	47
Demo.....	31, 55	Measure.....	15
Display.....	15	Melody Suppressor.....	49
Drum Kit List.....	8	Metronome.....	16
DSP.....	18	MIDI Basics.....	8
DSP Type.....	82	MIDI Reference.....	8
Dual Voice.....	17, 53	Multi.....	23
Duo.....	22	Music Database.....	29
		Music Database List.....	78
E		music rest.....	14
Effect Type List.....	80		
Effects.....	18	O	
ENDING.....	25	One Touch Setting.....	16
External Clock.....	54		
		P	
		Part.....	33
		Passing Status.....	36
		Pause.....	32
		Pedal.....	14
		Phrase Repeat.....	37
		Pitch → Transpose.....	52
		Pitch → Tuning.....	52
		Playback.....	32
		Portable Grand.....	16
		Power Requirements.....	12
		R	
		Random playback.....	32
		Recording.....	43
		Recording (track).....	44
		Registration Memory.....	46
		Reverb.....	19
		Reverb Level.....	53
		Reverb Type.....	53, 82
		rhythm.....	24
		rit.....	25
		S	
		Sections.....	25
		Smart Device.....	50
		Smart Device Connection	
		Manual.....	8
		SmartChord.....	23
		Song.....	31
		Song Book.....	8
		Song Book Sample.....	58
		Song Category.....	31
		Song List.....	75
		Specifications.....	84
		Split Point.....	17, 24, 52
		Split Voice.....	17, 53
		Standard Kit 1 List.....	74
		Storage Mode.....	55
		Strength meter.....	18
		Style.....	23
		Style File.....	8, 29
		Style List.....	76
		Sustain.....	14, 19
		Syncho Start.....	24
		T	
		Tap function.....	30
		Tempo.....	16, 30, 31
		Time Signature.....	16
		Timing.....	38
		Touch Response.....	18
		Touch Tutor.....	40
		Track.....	43
		Transpose.....	52
		Troubleshooting.....	56
		Tuning.....	52

U

USB TO HOST	50
User Songs.....	43

V

Voice.....	16
Voice List	68
Volume.....	14
Volume (Dual Voice)	53
Volume (Harmony).....	53
Volume (Main Voice).....	52
Volume (Metronome).....	54
Volume (Split Voice)	53

W

Waiting.....	38
--------------	----

X

XGlite.....	8
-------------	---

Y

Your Tempo.....	54
-----------------	----

Information for users on collection and disposal of old equipment and used batteries:



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.



For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

For business users in the European Union:

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.



Information on Disposal in other Countries outside the European Union:

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the EU Battery Directive for the chemical involved.

Cd



LIMITED 1-YEAR WARRANTY ON PORTABLE KEYBOARDS

**(NP, PSRE, PSREW, PSRF, PSRI, PSS, SHS, EZ, DGX230, DGX530,
YPG AND YPT SERIES)**

Thank you for selecting a Yamaha product. Yamaha products are designed and manufactured to provide a high level of defect-free performance. Yamaha Corporation of America ("Yamaha") is proud of the experience and craftsmanship that goes into each and every Yamaha product. Yamaha sells its products through a network of reputable, specially authorized dealers and is pleased to offer you, the Original Owner, the following Limited Warranty, which applies only to products that have been (1) directly purchased from Yamaha's authorized dealers in the fifty states of the USA and District of Columbia (the "Warranted Area") and (2) used exclusively in the Warranted Area. Yamaha suggests that you read the Limited Warranty thoroughly and invites you to contact your authorized Yamaha dealer or Yamaha Customer Service if you have any questions.

Coverage: Yamaha will, at its option, repair or replace the product covered by this warranty if it becomes defective, malfunctions or otherwise fails to conform with this warranty under normal use and service during the term of this warranty, without charge for labor or materials. Repairs may be performed using new or refurbished parts that meet or exceed Yamaha specifications for new parts. If Yamaha elects to replace the product, the replacement may be a reconditioned unit. You will be responsible for any installation or removal charges and for any initial shipping charges if the product(s) must be shipped for warranty service. However, Yamaha will pay the return shipping charges to any destination within the USA if the repairs are covered by the warranty. This warranty does not cover (a) damage, deterioration or malfunction resulting from accident, negligence, misuse, abuse, improper installation or operation or failure to follow instructions according to the Owner's Manual for this product; any shipment of the product (claims must be presented to the carrier); repair or attempted repair by anyone other than Yamaha or an authorized Yamaha Service Center; (b) any unit which has been altered or on which the serial number has been defaced, modified or removed; (c) normal wear and any periodic maintenance; (d) deterioration due to perspiration, corrosive atmosphere or other external causes such as extremes in temperature or humidity; (e) damages attributable to power line surge or related electrical abnormalities, lightning damage or acts of God; or (f) RFI/EMI (Interference/noise) caused by improper grounding or the improper use of either certified or uncertified equipment, if applicable. Any evidence of alteration, erasing or forgery of proof-of-purchase documents will cause this warranty to be void. This warranty covers only the Original Owner and is not transferable.

In Order to Obtain Warranty Service: Warranty service will only be provided for defective products within the Warranted Area. Contact your local authorized Yamaha dealer who will advise you of the procedures to be followed. If this is not successful, contact Yamaha at the address, telephone number or website shown below. Yamaha may request that you send the defective product to a local authorized Yamaha Servicer or authorize return of the defective product to Yamaha for repair. If you are uncertain as to whether a dealer has been authorized by Yamaha, please contact Yamaha's Service Department at the number shown below, or check Yamaha's website at www.Yamaha.com. Product(s) shipped for service should be packed securely and must be accompanied by a detailed explanation of the problem(s) requiring service, together with the original or a machine reproduction of the bill of sale or other dated, proof-of-purchase document describing the product, as evidence of warranty coverage. Should any product submitted for warranty service be found ineligible therefore, an estimate of repair cost will be furnished and the repair will be accomplished only if requested by you and upon receipt of payment or acceptable arrangement for payment.

Limitation of Implied Warranties and Exclusion of Damages: ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED IN DURATION TO THE APPLICABLE PERIOD OF TIME SET FORTH ABOVE. YAMAHA SHALL NOT BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE, DAMAGE TO ANY OTHER EQUIPMENT OR OTHER ITEMS AT THE SITE OF USE OR INTERRUPTION OF PERFORMANCES OR ANY CONSEQUENCES. YAMAHA'S LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT, AT YAMAHA'S OPTION. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is the only express warranty applicable to the product specified herein; Yamaha neither assumes nor authorizes anyone to assume for it any other express warranty.

If you have any questions about service received or if you need assistance in locating an authorized Yamaha Servicer, please contact:



CUSTOMER SERVICE

Yamaha Corporation of America

6600 Orangethorpe Avenue, Buena Park, California 90620-1373

Telephone: 800-854-1569

www.yamaha.com

Do not return any product to the above address without a written Return Authorization issued by YAMAHA.

Important Notice: Guarantee Informatic Area (EEA) and Switzerland

<p>Important Notice: Guarantee Information for customers in EEA* and Switzerland For detailed guarantee information about this Yamaha product, and Pan-EEA* and Switzerland warranty service, please either visit the website address below (Printable file is available at our website) or contact the Yamaha representative office for your country. * EEA: European Economic Area</p>	<p>English For detailed guarantee information about this Yamaha product, and Pan-EEA* and Switzerland warranty service, please either visit the website address below (Printable file is available at our website) or contact the Yamaha representative office for your country. * EEA: European Economic Area</p>
<p>Wichtiger Hinweis: Garantie-Information für Kunden in der EWR* und der Schweiz Für nähere Garantie-Information über dieses Produkt (von Yamaha, sowie über den Pan-EEA* und Schweizer Garantieservice, besuchen Sie bitte entweder die folgende angegebene Internetadresse (eine druckfähige Version befindet sich auch auf unserer Website), oder wenden Sie sich an den für Ihr Land zuständigen Yamaha-Vertrieb. *EWR: Europäischer Wirtschaftsraum</p>	<p>Deutsch Für nähere Garantie-Information über dieses Produkt (von Yamaha, sowie über den Pan-EEA* und Schweizer Garantieservice, besuchen Sie bitte entweder die folgende angegebene Internetadresse (eine druckfähige Version befindet sich auch auf unserer Website), oder wenden Sie sich an den für Ihr Land zuständigen Yamaha-Vertrieb. *EWR: Europäischer Wirtschaftsraum</p>
<p>Remarque importante: Informations de garantie pour les clients de l'EEE* et la Suisse Pour des informations plus détaillées sur la garantie de ce produit Yamaha et sur le service de garantie applicable dans l'ensemble de l'EEE* ainsi qu'en Suisse, consultez notre site Web à l'adresse ci-dessous (le fichier imprimable est disponible sur notre site Web) ou contactez directement l'adresse ci-dessous de votre pays. *EEE: Espace Economique Européen</p>	<p>Français Pour des informations plus détaillées sur la garantie de ce produit Yamaha et sur le service de garantie applicable dans l'ensemble de l'EEE* ainsi qu'en Suisse, consultez notre site Web à l'adresse ci-dessous (le fichier imprimable est disponible sur notre site Web) ou contactez directement l'adresse ci-dessous de votre pays. *EEE: Espace Economique Européen</p>
<p>Belangrijke mededeling: Garantie-informatie voor klanten in de EER* en Zwitserland Voor gedetailleerde garantie-informatie over dit Yamaha-product en de garantieservice in heel de EER* en Zwitserland, gaat u naar de onderstaande website (u vindt een afdrukbare versie op onze website) of neemt u contact op met de vertegenwoordiging van Yamaha in uw land. * EER: Europees Economisch Ruimte</p>	<p>Nederlands Voor gedetailleerde garantie-informatie over dit Yamaha-product en de garantieservice in heel de EER* en Zwitserland, gaat u naar de onderstaande website (u vindt een afdrukbare versie op onze website) of neemt u contact op met de vertegenwoordiging van Yamaha in uw land. * EER: Europees Economisch Ruimte</p>
<p>Aviso importante: información sobre la garantía para los clientes del EEE* y Suiza Para una información detallada sobre este producto Yamaha y sobre el soporte de garantía en la zona EEE* y Suiza, visite la dirección web que se incluye más abajo (la versión del archivo para imprimir está disponible en nuestro sitio web) o póngase en contacto con el representante de Yamaha en su país. * EEE: Espacio Económico Europeo</p>	<p>Español Para una información detallada sobre este producto Yamaha y sobre el soporte de garantía en la zona EEE* y Suiza, visite la dirección web que se incluye más abajo (la versión del archivo para imprimir está disponible en nuestro sitio web) o póngase en contacto con el representante de Yamaha en su país. * EEE: Espacio Económico Europeo</p>
<p>Aviso importante: informazioni sulla garanzia per i clienti residenti nell'EEA* e in Svizzera Sui informazioni dettagliate sulle garanzie relative a questo prodotto Yamaha e l'assistenza in garanzia nel paese EEA*, le in Svizzera, visitate il sito Web che è incluso di seguito (la versione del file in formato stampabile) oppure contattate l'ufficio di rappresentanza locale della Yamaha. * EEA: Area Economica Europea</p>	<p>Italiano Sui informazioni dettagliate sulle garanzie relative a questo prodotto Yamaha e l'assistenza in garanzia nel paese EEA*, le in Svizzera, visitate il sito Web che è incluso di seguito (la versione del file in formato stampabile) oppure contattate l'ufficio di rappresentanza locale della Yamaha. * EEA: Area Economica Europea</p>
<p>Aviso importante: informações sobre as garantias para clientes da AEE* e da Suíça Para obter uma informação pormenorizada sobre este produto da Yamaha e sobre o serviço de garantia na AEE* e na Suíça, visite o site a seguir (o arquivo para impressão está disponível no nosso site) ou entre em contato com o escritório de representação da Yamaha no seu país. * AEE: Área Económica Europeia</p>	<p>Português Para obter uma informação pormenorizada sobre este produto da Yamaha e sobre o serviço de garantia na AEE* e na Suíça, visite o site a seguir (o arquivo para impressão está disponível no nosso site) ou entre em contato com o escritório de representação da Yamaha no seu país. * AEE: Área Económica Europeia</p>
<p>Σημαντική σημείωση: Πληροφορίες εγγύησης για τους πελάτες στον ΕΟΧ* και Ελβετία Για λεπτομέρειες πληροφοριών εγγύησης σχετικά με το προϊόν Yamaha και την κάλυψη εγγύησης σε όλες τις χώρες του ΕΟΧ* και την Ελβετία, επισκεφτείτε την τοποθεσία ιστοσελίδας (Εκτυπωτικό αρχείο είναι διαθέσιμο στην ιστοσελίδα μας) ή επικοινωνήστε στην αντιπροσωπεία της Yamaha στη χώρα σας. * ΕΟΧ: Ευρωπαϊκό Οικονομικό Χώρος</p>	<p>Ελληνικά Για λεπτομέρειες πληροφοριών εγγύησης σχετικά με το προϊόν Yamaha και την κάλυψη εγγύησης σε όλες τις χώρες του ΕΟΧ* και την Ελβετία, επισκεφτείτε την τοποθεσία ιστοσελίδας (Εκτυπωτικό αρχείο είναι διαθέσιμο στην ιστοσελίδα μας) ή επικοινωνήστε στην αντιπροσωπεία της Yamaha στη χώρα σας. * ΕΟΧ: Ευρωπαϊκό Οικονομικό Χώρος</p>
<p>Viktig: Garantiinformasjon for kunder i EES-området* och Sveits För detaljerad garantiinformation om detta Yamaha-produktet, garanti-tjänsten i hela EES-området* och Sveits, kan du antingen besöka nedanstående webbplats (en utskriftsfärdig fil finns på webbplatsen) eller kontakta Yamahas officiella representant i ditt land. * EES: Europeiska Ekonomiska Samarbetsområdet</p>	<p>Svenska För detaljerad garantiinformation om detta Yamaha-produktet, garanti-tjänsten i hela EES-området* och Sveits, kan du antingen besöka nedanstående webbplats (en utskriftsfärdig fil finns på webbplatsen) eller kontakta Yamahas officiella representant i ditt land. * EES: Europeiska Ekonomiska Samarbetsområdet</p>
<p>Viktig merknad: Garantinformasjon for kunder i EØS* og Sveits Detaljeret garantiinformasjon om dette Yamaha-produktet og garantitjeneste for hele EØS-området* og Sveits kan fås enten ved å besøke nettstedene nedenfor (utskriftsferdig fil finnes på våre nettsider) eller kontakte kontakta Yamaha-kontoret i landet der du bor. *EØS: Det europeiske økonomiske samarbeidsområdet</p>	<p>Norsk Detaljeret garantiinformasjon om dette Yamaha-produktet og garantitjeneste for hele EØS-området* og Sveits kan fås enten ved å besøke nettstedene nedenfor (utskriftsferdig fil finnes på våre nettsider) eller kontakte kontakta Yamaha-kontoret i landet der du bor. *EØS: Det europeiske økonomiske samarbeidsområdet</p>
<p>Viktig oplysning: Garantiplysninger til kunder i EØO* og Schweiz De kan finde detaljerede garantioplysninger om dette Yamaha-produkt og den tilfældige garantitjenesteydning for EØO* (og Schweiz) ved at besøge det website, der er angivet nedenfor (der findes en fil, som kan udskrives, på vores website), eller ved at kontakte Yamahas nationale repræsentationskontor i det land, hvor De bor. * EØO: Det Europæiske Økonomiske Område</p>	<p>Dansk De kan finde detaljerede garantioplysninger om dette Yamaha-produkt og den tilfældige garantitjenesteydning for EØO* (og Schweiz) ved at besøge det website, der er angivet nedenfor (der findes en fil, som kan udskrives, på vores website), eller ved at kontakte Yamahas nationale repræsentationskontor i det land, hvor De bor. * EØO: Det Europæiske Økonomiske Område</p>

<p>Tärkeä ilmoitus: Takuutiedot Euroopan talousalueen (ETA*) ja Sveitsin asiakkaille Tämän Yamaha-tuotteen osalta ETA-talouden ja Sveitsin takuuta koskevat yksityiskohtaiset tiedot saatte alla olevasta nettiosoitteesta. (Uusittuversio tiedostona sivustollamme.) Voitte myös ottaa yhteyttä paikalliseen Yamaha-edustajaan. ETA: Euroopan talousalue</p>	<p>Suomi Tärkeä ilmoitus: Takuutiedot Euroopan talousalueen (ETA*) ja Sveitsin asiakkaille Tämän Yamaha-tuotteen osalta ETA-talouden ja Sveitsin takuuta koskevat yksityiskohtaiset tiedot saatte alla olevasta nettiosoitteesta. (Uusittuversio tiedostona sivustollamme.) Voitte myös ottaa yhteyttä paikalliseen Yamaha-edustajaan. ETA: Euroopan talousalue</p>
<p>Ważne wiadomości: Informacje o gwarancjach i obsłudze klienta Aby dowiedzieć się więcej na temat warunków gwarancji, tego produktu, firmy Yamaha i serwisu gwarancyjnego w całym EOG* i Szwajcarii, należy odwiedzić wskazaną poniżej stronę internetową (plik gotowy do wydruku znajduje się na naszej stronie internetowej) lub skontaktować się z przedstawicielstwem firmy Yamaha w swoim kraju. * EOG — Europejski Obszar Gospodarczy</p>	<p>Polski Ważne wiadomości: Informacje o gwarancjach i obsłudze klienta Aby dowiedzieć się więcej na temat warunków gwarancji, tego produktu, firmy Yamaha i serwisu gwarancyjnego w całym EOG* i Szwajcarii, należy odwiedzić wskazaną poniżej stronę internetową (plik gotowy do wydruku znajduje się na naszej stronie internetowej) lub skontaktować się z przedstawicielstwem firmy Yamaha w swoim kraju. * EOG — Europejski Obszar Gospodarczy</p>
<p>Důležité oznámení: Zprávi o informacích pro zákazníky v EHS* a ve Švýcarsku Podrobné zprávi o informacích o tomto produktu Yamaha a zručném servisu v celém EHS* a ve Švýcarsku naleznete na níže uvedené webové adrese (souhrn k tisku je dostupný na našich webových stránkách) nebo se můžete obrátit na zastoupení firmy Yamaha ve své zemi. * EHS: Evropský hospodářský prostor</p>	<p>Česky Důležité oznámení: Zprávi o informacích pro zákazníky v EHS* a ve Švýcarsku Podrobné zprávi o informacích o tomto produktu Yamaha a zručném servisu v celém EHS* a ve Švýcarsku naleznete na níže uvedené webové adrese (souhrn k tisku je dostupný na našich webových stránkách) nebo se můžete obrátit na zastoupení firmy Yamaha ve své zemi. * EHS: Evropský hospodářský prostor</p>
<p>Fotos fogylmeltetés: Garancia-információk az EGT* területén és Svájcban élő vásárlók számára A jelen Yamaha termékre vonatkozó részletes garancia-információk, valamint az EGT*-re és Svájcra kiterjedő garanciaért szolgáló részletes leírés megtekinthető az alábbi címeken (a weboldalon nyomtatott írást is talál), vagy pedig feljebb részletesen az országában működő Yamaha képviselői oldalán. * EGT: Európai Gazdasági Terület</p>	<p>Magyar Fotos fogylmeltetés: Garancia-információk az EGT* területén és Svájcban élő vásárlók számára A jelen Yamaha termékre vonatkozó részletes garancia-információk, valamint az EGT*-re és Svájcra kiterjedő garanciaért szolgáló részletes leírés megtekinthető az alábbi címeken (a weboldalon nyomtatott írást is talál), vagy pedig feljebb részletesen az országában működő Yamaha képviselői oldalán. * EGT: Európai Gazdasági Terület</p>
<p>Öluline märkuse: Garantiteave Euroopa Majanduspiirkonna (EMP) ja Šveitsi Klientidele Täpsemat teavet saameks saate Yamaha toote garantii ning kogu Euroopa Majanduspiirkonna ja Šveitsi garantiteavest kohta küsida meie veebisaiti alljärgnevat aadressi (meie saidil on saadaval printida fail) või pöörduda Teie regiooni Yamaha esinduse poole. * EMP: Euroopa Majanduspiirkond</p>	<p>Eesti keel Täpsemat teavet saameks saate Yamaha toote garantii ning kogu Euroopa Majanduspiirkonna ja Šveitsi garantiteavest kohta küsida meie veebisaiti alljärgnevat aadressi (meie saidil on saadaval printida fail) või pöörduda Teie regiooni Yamaha esinduse poole. * EMP: Euroopa Majanduspiirkond</p>
<p>Svarige paziņojums: garantijas informācija klientiem EEZ* un Šveicā Lai saņemtu detaļāku garantijas informāciju par šo Yamaha produktu, ka arī garantijas aplikāšanu EEZ* un Šveicā, lūdzim, apmeklējot, zvanīt, norādīto tīmekļa vietnes adresi (tīmekļa vietnē ir pieejams drukājams fails) vai sazināties ar Jūsu valsti aplikāšanu Yamaha pārstāvēniecību. * EEZ: Eiropas Ekonomikas zona</p>	<p>Latviešu Lai saņemtu detaļāku garantijas informāciju par šo Yamaha produktu, ka arī garantijas aplikāšanu EEZ* un Šveicā, lūdzim, apmeklējot, zvanīt, norādīto tīmekļa vietnes adresi (tīmekļa vietnē ir pieejams drukājams fails) vai sazināties ar Jūsu valsti aplikāšanu Yamaha pārstāvēniecību. * EEZ: Eiropas Ekonomikas zona</p>
<p>Dinamo: informacija o garantiji prikljams EEE* i Šveicarijai Jei reikia išsames informacijos apie šį „Yamaha“ produktą ir jo techninę priežiūrą visoje EEE* ir Šveicarijose, apsilankykite mūsų svetainėje (tąsai nuorodą adresu: (vaizduojame jį sąsuosintais failais) arba kreipkitės į „Yamaha“ atstovų sąjūdį savo šalyje. * EEE – Europos ekonomikos zona</p>	<p>Lietuvių kalba Jei reikia išsames informacijos apie šį „Yamaha“ produktą ir jo techninę priežiūrą visoje EEE* ir Šveicarijose, apsilankykite mūsų svetainėje (tąsai nuorodą adresu: (vaizduojame jį sąsuosintais failais) arba kreipkitės į „Yamaha“ atstovų sąjūdį savo šalyje. * EEE – Europos ekonomikos zona</p>
<p>Dôležité upozomenie: Informácie o záruke pre zákazníkov v EHP* a Švajčiarsku Podrobné informácie o záruke týkajúcej sa tohto produktu od spoločnosti Yamaha a garancijnom servise v EHP* a Švajčiarsku nájdete na webovej stránke uvedenej nižšie (na našej webovej stránke je k dispozícii súbór na tlač) alebo sa obráťte na zástupcu spoločnosti Yamaha vo svojej krajine. * EHP: Európsky hospodársky priestor</p>	<p>Slovenčina Podrobné informácie o záruke týkajúcej sa tohto produktu od spoločnosti Yamaha a garancijnom servise v EHP* a Švajčiarsku nájdete na webovej stránke uvedenej nižšie (na našej webovej stránke je k dispozícii súbór na tlač) alebo sa obráťte na zástupcu spoločnosti Yamaha vo svojej krajine. * EHP: Európsky hospodársky priestor</p>
<p>Pomembno obvestilo: Informacije o garanciji za kupce v EGP* in Švici Za podrobne informacije o temi Yamahinemu izdelku ter garancijskem servisu v celitem EGP* in Švici, obiščite spletno mesto, ki je navedeno spodaj (natisljiva datoteka je na voljo na našem spletnem mestu), ali se obrnite na Yamahinega predstavnika v svoji državi. * EGP: Evropski gospodarski prostor</p>	<p>Slovensčina Za podrobne informacije o temi Yamahinemu izdelku ter garancijskem servisu v celitem EGP* in Švici, obiščite spletno mesto, ki je navedeno spodaj (natisljiva datoteka je na voljo na našem spletnem mestu), ali se obrnite na Yamahinega predstavnika v svoji državi. * EGP: Evropski gospodarski prostor</p>
<p>Важно съобщение: Информация за гаранцията за купувачи в ЕИП* и Швейцария За подробни информации за това Yamaha изделие и гаранционния му сервиз в целия ЕИП* и Швейцария, посетете интернет адреса, посочената по-долу (нашата уеб-страница съдържа файл за изтегляне) или се свържете с местния представител на Yamaha в своята държава. * ЕИП: Европейското икономическо пространство</p>	<p>Български език За подробни информации за това Yamaha изделие и гаранционния му сервиз в целия ЕИП* и Швейцария, посетете интернет адреса, посочената по-долу (нашата уеб-страница съдържа файл за изтегляне) или се свържете с местния представител на Yamaha в своята държава. * ЕИП: Европейското икономическо пространство</p>
<p>Notificare importantă: Informații despre garanție pentru clienții din SEE* și Elveția Pentru informații detaliate privind acest produs Yamaha și serviciul de garanție Pan-SEE*, și Elveția, vizitați site-ul la adresa de mai jos (fișierul imprimabil este disponibil pe site-ul nostru) sau contactați biroul reprezentanților Yamaha din țara dumneavoastră. * SEE: Spațiul Economic European</p>	<p>Limba română Pentru informații detaliate privind acest produs Yamaha și serviciul de garanție Pan-SEE*, și Elveția, vizitați site-ul la adresa de mai jos (fișierul imprimabil este disponibil pe site-ul nostru) sau contactați biroul reprezentanților Yamaha din țara dumneavoastră. * SEE: Spațiul Economic European</p>
<p>Vážna obavěstie: Informácie o jarnosti za države EGP-a i Švicarske Za podrobné informácie o jarnosti za ovaj Yamahin proizvod te jarnostijem servisu za cijeli EGP i Švicarsku, molimo Vas da posjetite web-stranicu navedenu u nastavku ili kontaktirate ovlaštenog Yamahinog dobavljača u svojoj zemlji. * EGP: Evropski gospodarski prostor</p>	<p>Hrvatski Za podrobné informácie o jarnosti za ovaj Yamahin proizvod te jarnostijem servisu za cijeli EGP i Švicarsku, molimo Vas da posjetite web-stranicu navedenu u nastavku ili kontaktirate ovlaštenog Yamahinog dobavljača u svojoj zemlji. * EGP: Evropski gospodarski prostor</p>

<https://europe.yamaha.com/warranty/>

For details of products, please contact your nearest Yamaha representative or the authorized distributor listed below.

NORTH AMERICA

CANADA

Yamaha Canada Music Ltd.
135 Milner Avenue, Toronto, Ontario M1S 3R1,
Canada
Tel: +1-416-298-1311

U.S.A.

Yamaha Corporation of America
6600 Orangethorpe Avenue, Buena Park, CA 90620,
U.S.A.
Tel: +1-714-522-9011

CENTRAL & SOUTH AMERICA

MEXICO

Yamaha de México, S.A. de C.V.
Av. Insurgentes Sur 1647 Piso 9, Col. San José
Insurgentes, Delegación Benito Juárez, México,
D.F., C.P. 03900, México
Tel: +52-55-5804-0600

BRAZIL

Yamaha Musical do Brasil Ltda.
Praça Professor José Lannes, 40, Cjs 21 e 22, Brooklin
Paulista Novo CEP 04571-100 - São Paulo - SP,
Brazil
Tel: +55-11-3704-1377

ARGENTINA

**Yamaha Music Latin America, S.A.,
Sucursal Argentina**
Olga Cossetini 1553, Piso 4 Norte,
Madero Este-C1107CEK,
Buenos Aires, Argentina
Tel: +54-11-4119-7000

PANAMA AND OTHER LATIN

AMERICAN REGIONS/ CARIBBEAN REGIONS

Yamaha Music Latin America, S.A.
Edificio Torre Davivienda, Piso: 20
Avenida Balboa, Marbella, Corregimiento de Bella
Vista, Ciudad de Panamá, Rep. de Panamá
Tel: +507-269-5311

EUROPE

THE UNITED KINGDOM/IRELAND

Yamaha Music Europe GmbH (UK)
Sherbourne Drive, Tilbrook, Milton Keynes,
MK7 8BL, U.K.
Tel: +44-1908-366700

GERMANY

Yamaha Music Europe GmbH
Siemensstrasse 22-34, 25462 Rellingen, Germany
Tel: +49-4101-303-0

SWITZERLAND/LIECHTENSTEIN

**Yamaha Music Europe GmbH, Branch
Switzerland in Thalwil**
Seestrasse 18a, 8800 Thalwil, Switzerland
Tel: +41-44-3878080

AUSTRIA/CROATIA/CZECH REPUBLIC/ HUNGARY/ROMANIA/SLOVAKIA/ SLOVENIA

Yamaha Music Europe GmbH, Branch Austria
Schleiergasse 20, 1100 Wien, Austria
Tel: +43-1-60203900

POLAND

Yamaha Music Europe
Sp.z o.o. Oddział w Polsce
ul. Wielicka 52, 02-657 Warszawa, Poland
Tel: +48-22-880-08-88

BULGARIA

Dinacord Bulgaria LTD.
Bul. Iskarsko Shose 7 Targovskii Zentar Evropa
1528 Sofia, Bulgaria
Tel: +359-2-978-20-25

MALTA

Olimpus Music Ltd.
Valletta Road, Mosta MST9010, Malta
Tel: +356-2133-2093

NETHERLANDS/BELGIUM/ LUXEMBOURG

Yamaha Music Europe, Branch Benelux
Clarissenhof 5b, 4133 AB Vianen, The Netherlands
Tel: +31-347-358040

FRANCE

Yamaha Music Europe
7 rue Ambroise Croizat, Zone d'activités de Pariest,
77183 Croissy-Beaubourg, France
Tel: +33-1-6461-4000

ITALY

Yamaha Music Europe GmbH, Branch Italy
Via Tinelli N.67/69 20855 Gerno di Lesmo (MB),
Italy
Tel: +39-039-9065-1

SPAIN/PORTUGAL

**Yamaha Music Europe GmbH Ibérica, Sucursal
en España**
Ctra. de la Coruña km. 17.200, 28231
Las Rozas de Madrid, Spain
Tel: +34-91-639-88-88

GREECE

Philippou Nakas S.A. The Music House
19th km. Leof. Lavriou 190 02 Peania - Attiki,
Greece
Tel: +30-210-6686260

SWEDEN

**Yamaha Music Europe GmbH Germany filial
Scandinavia**
JA Wettergrensgata 1, 400 43 Göteborg, Sweden
Tel: +46-31-89-34-00

DENMARK

**Yamaha Music Denmark,
Fillial of Yamaha Music Europe GmbH, Tyskland**
Generatorvej 8C, ST. TH., 2860 Soborg, Denmark
Tel: +45-44-92-49-00

FINLAND

F-Musiikki Oy
Antaksentie 4
FI-01510 Vantaa, Finland
Tel: +358 (0)96185111

NORWAY

**Yamaha Music Europe GmbH Germany -
Norwegian Branch**
Grini Næringspark 1, 1332 Østerås, Norway
Tel: +47-6716-7800

ICELAND

Hjodfarahusid Ehf.
Sidumula 20
IS-108 Reykjavik, Iceland
Tel: +354-525-5050

CYPRUS

Nakas Music Cyprus Ltd.
Nikis Ave 2k
1086 Nicosia
Tel: + 357-22-511080
Major Music Center
21 Ali Riziz Ave. Ortakoy
P.O.Box 475 LeFKosa, Cyprus
Tel: (392) 227 9213

RUSSIA

Yamaha Music (Russia) LLC.
Room 37, entrance 7, bld. 7, Kievskaya street,
Moscow, 121059, Russia
Tel: +7-495-626-5005

OTHER EUROPEAN REGIONS

Yamaha Music Europe GmbH
Siemensstrasse 22-34, 25462 Rellingen, Germany
Tel: +49-4101-303-0

AFRICA

Yamaha Music Gulf FZE
JAFZA-16, Office 512, P.O.Box 17328,
Jebel Ah FZE, Dubai, UAE
Tel: +971-4-801-1500

MIDDLE EAST

TURKEY

Yamaha Music Europe GmbH
Merkezi Almanya Türkiye Istanbul Şubesi
Mor Sumbul Sokak Varyap Meridian Business
1.Blok No:1 113-114-115
Bati Atasehir Istanbul, Turkey
Tel: +90-216-275-7960

ISRAEL

RBX International Co., Ltd.
P.O. Box 10245, Petach-Tikva, 49002
Tel: (972) 3-925-6900

OTHER REGIONS

Yamaha Music Gulf FZE
JAFZA-16, Office 512, P.O.Box 17328,
Jebel Ah FZE, Dubai, UAE
Tel: +971-4-801-1500

ASIA

THE PEOPLE'S REPUBLIC OF CHINA

Yamaha Music & Electronics (China) Co., Ltd.
2F, Yunhedasha, 1818 Xinzha-lu, Jingan-qu,
Shanghai, China
Tel: +86-400-051-7700

HONG KONG

Tom Lee Music Co., Ltd.
11/F, Silvercord Tower 1, 30 Canton Road,
Tsimshatsui, Kowloon, Hong Kong
Tel: +852-2737-7688

INDIA

Yamaha Music India Private Limited
P-401, JMD Megapolis, Sector-48, Sohna Road,
Gurugram-122018, Haryana, India
Tel: +91-124-485-3300

INDONESIA

PT. Yamaha Music Indonesia (Distributor)
Yamaha Music Center Bldg. Jalan Jend. Gatot
Subroto Kav. 4, Jakarta 12930, Indonesia
Tel: +62-21-520-2577

KOREA

Yamaha Music Korea Ltd.
11F, Prudential Tower, 298, Gangnam-daero,
Gangnam-gu, Seoul, 06253, Korea
Tel: +82-2-3467-3300

MALAYSIA

Yamaha Music (Malaysia) Sdn. Bhd.
No.8, Jalan Perbandaran, Kelana Jaya, 47301
Petaling Jaya, Selangor, Malaysia
Tel: +60-3-78030900

SINGAPORE

Yamaha Music (Asia) Private Limited
Block 202 Hougang Street 21, #02-00,
Singapore 530202, Singapore
Tel: +65-6740-9200

TAIWAN

Yamaha Music & Electronics Taiwan Co., Ltd.
2F, No.1, Yuanfong Rd., Banqiao Dist.,
New Taipei City 22063, Taiwan (R.O.C.)
Tel: +886-2-7741-8888

THAILAND

Siam Music Yamaha Co., Ltd.
3, 4, 15, 16th Fl., Siam Motors Building,
891/1 Rama 1 Road, Wangmai,
Pathumwan, Bangkok 10330, Thailand
Tel: +66-2215-2622

VIETNAM

Yamaha Music Vietnam Company Limited
15th Floor, Nam A Bank Tower, 201-203 Cach
Mang Thang Tam St., Ward 4, Dist.3,
Ho Chi Minh City, Vietnam
Tel: +84-28-3818-1122

OTHER ASIAN REGIONS

[https://asia-latinamerica-mea.yamaha.com/
index.html](https://asia-latinamerica-mea.yamaha.com/index.html)

OCEANIA

AUSTRALIA

Yamaha Music Australia Pty. Ltd.
Level 1, 80 Market Street, South Melbourne,
VIC 3205 Australia
Tel: +61-3-9693-5111

NEW ZEALAND

Music Works LTD
P.O.BOX 6246 Wellesley, Auckland 4680,
New Zealand
Tel: +64-9-634-0099

REGIONS AND TRUST

TERRITORIES IN PACIFIC OCEAN

[https://asia-latinamerica-mea.yamaha.com/
index.html](https://asia-latinamerica-mea.yamaha.com/index.html)

Yamaha Global Site
<https://www.yamaha.com/>
Yamaha Downloads
<https://download.yamaha.com/>

Manual Development Group
© 2020 Yamaha Corporation

Published 10/2020 POTY*. *-**B0

VDH1500