 
 


PROFESSIONAL MIXER

 
Instruction Manual

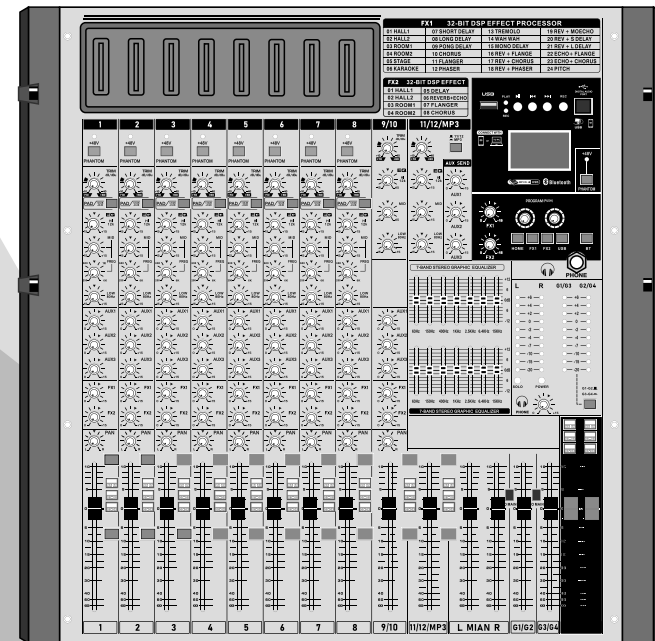

CONNECTION INSTRUCTIONS

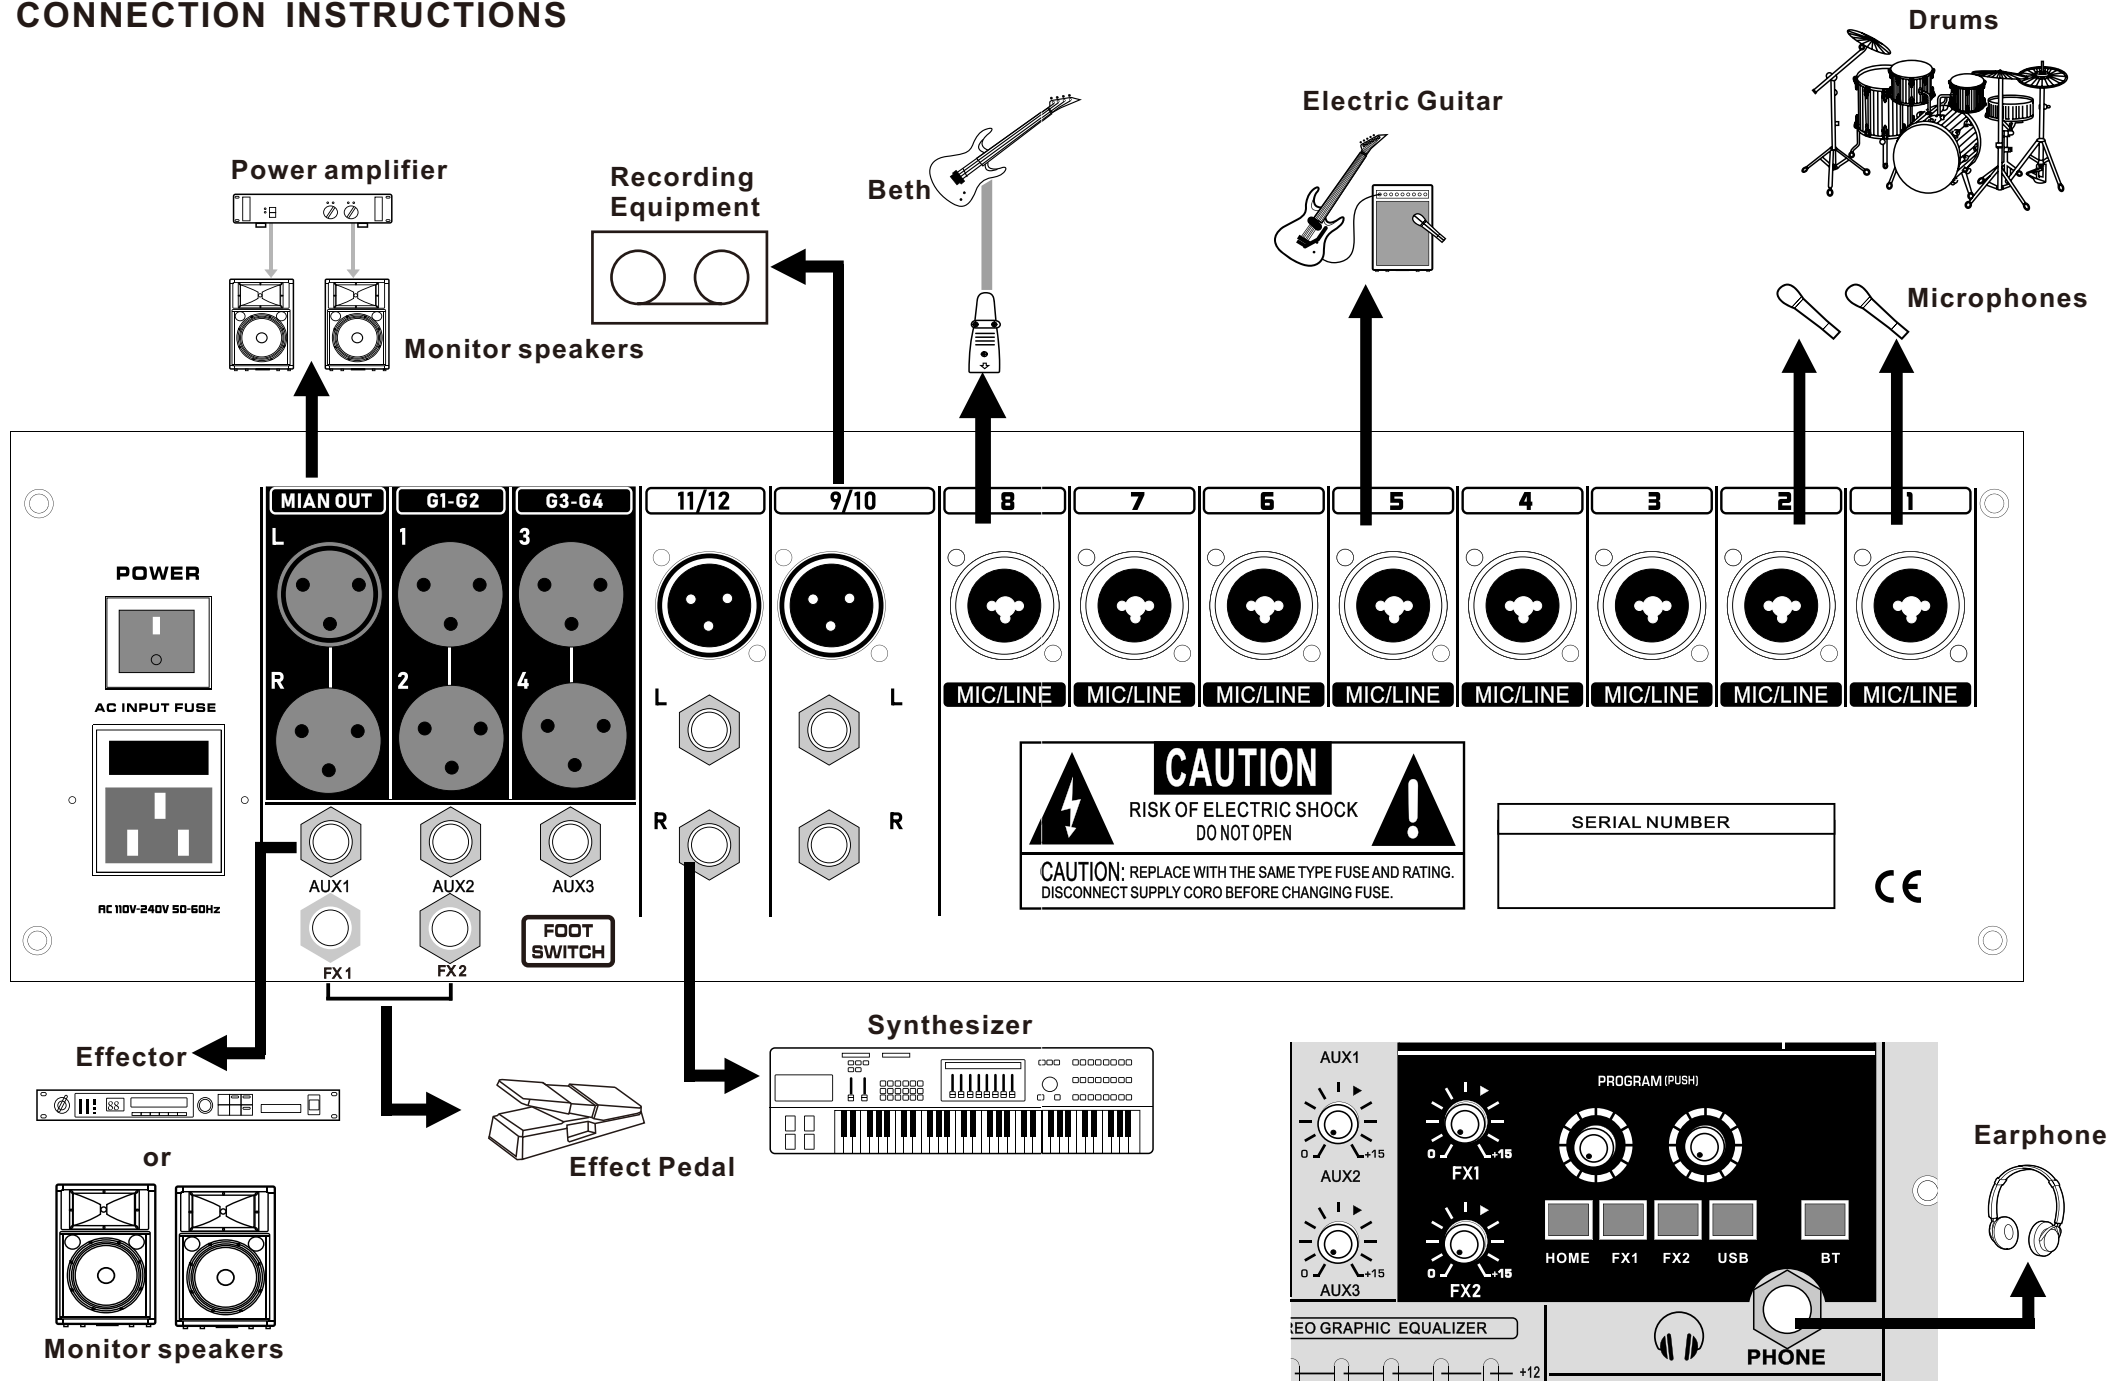

BACK PANEL SECTION

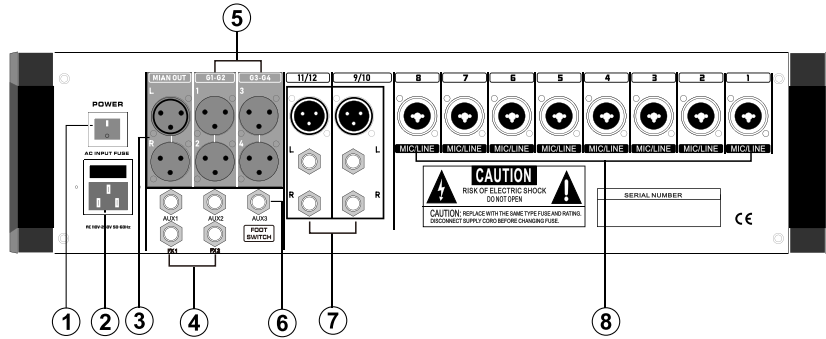

1. POWER SWITCH

Use the POWER switch to turn on the mixing console. The POWER switch always be in the "off" position when you are about to connect your unit to the mains. To disconnect the unit from the mains, pull out the main cord plug. When installing the product, ensure that the plug is easily accessible.

2. FUSE HOLDER/IEC MAINS RECEPTACLE

The console is connected to the mains via the cable supplied, which meets the required safety standards. Blown fuses must only be replaced by fuses of the same type and rating. The mains connection is made via a cable with IEC mains connector. An appropriate mains cable is supplied with the equipment.

3. MAIN OUT(L,R) JACKS

These jacks deliver the mixer's stereo output. You use these jacks, for example, to connect to the power amplifier driving your main speakers.

4. FOOTSWITCH

Connecting with effect pedal.

5. GROUP OUT(1-2) JACKS

It can connect with others amplifiers, which can be controlled by GROUP 1-2.

GROUP OUT(3-4) JACKS

It can connect with others amplifiers, which can be controlled by GROUP 3-4.

6. AUX1-2-3 OUT

The AUX SEND jack should be used when hooking up a monitor power amplifier or active monitor speaker system. The relevant AUX path should be set pre-fader.

7. STEREO INPUT JACKS

You can connect with cassette deck.

 
8. MIC INPUT JACKS

These are balanced XLR -type microphone input jacks. (1:Ground;2:Hot;3:Cold) LINE Input jacks(monaural channels)

These are balanced TRS phone-jack line inputs. (T:Hot;R:Cold;S:Ground).

You can connect either balanced or unbalanced phone plugs to these jacks

INPUT CHANNELS SECTION

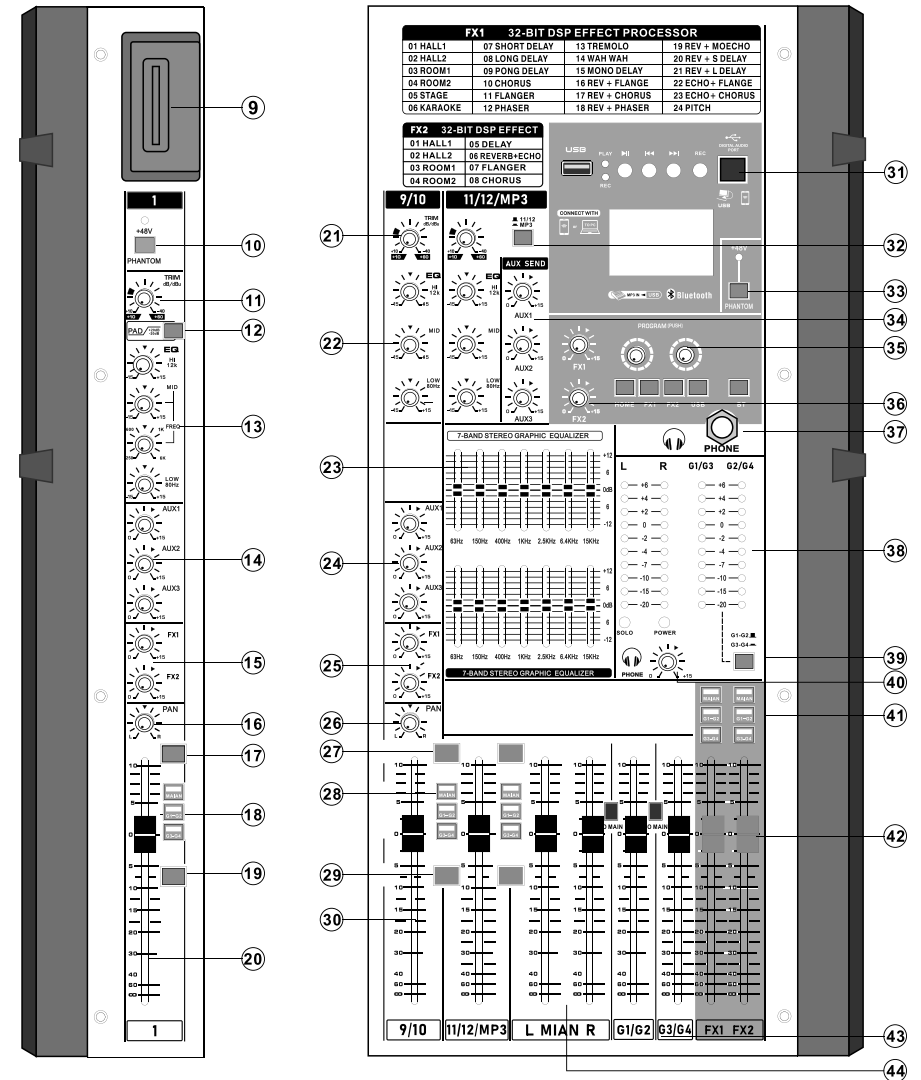

9.INPUT LED DISPLAY

Input signal strength indicator for each mono channel with LED display. Users can observe the input signal strength from here.

10.PHANTOM +48V SWITCH

This is switch toggles phantom power.Press this key to turn on / off phantom power.

11.TRIM CONTROL

Adjusts the input signal level. To get the best balance between the S/N ratio and the dynamic range, adjust the gain so that the PEAK indicator lights only occasionally and briefly on the highest input transients. The 60 to+10 scale is the MIC input adjustment range. The -40 to +10 scale is the Line input adjustments range. The -40 to +10 scale is the LINE input adjustment range.

12.PAD SWITCH

Cut down the signal sensitivity of each channel 20dB

13.Equalizier (HIGH. MID. LOW)

This the four-band equalizer adjusts the channels high. mid and low frequency bands. Setting the knob to the "0"position produces a flat response in the corresponding frequency band, while turning to the left attenuates the band.

14.AUX1,AUX2,AUX3 CONTROL

Controlling the level of the auxiliary output channel without affecting the mixed amplifier signal. Adjusts the level of input channel to AUX.

15.FX1&FX2 CONTROL

The aux send marked FX offers a direct route to the built-in effects processor. Controlling the EFF volume of mono channel.

16.PAN Control

The PAN control determines the position of the channel signal within the stereo image. When working with sub groups, you can use the PAN control to assign the signal to just one output, which gives you additional flexibility in recording situations.

17.MUTE SWITCH

The accordingly channel will be mute after pressing this key.

18.MAIN

You can use MAIN-L/R fader after pressing "MIX"switch.

G1-2;G3-4

You can use G1-2 fader after pressing the switch.

You can use G3-4 fader after pressing the switch.

19.SOLO/ PEAK SWITCH

SOLO: Folks use solo in live work preview channels before they are let into the mix,or to just check out what a particular channels is up to anytime during a session.You can solo as many channels at a time as you like. All in all, you can monitor according channel with earphone after pressing this key.

PEAK: When the input signal is too loud , the indicator will flash.

20.CHANNEL FADERS

Adjusts the level of the channel signal. Using these fader to adjust the output level amount the various channels.

21.TRIM CONTROL-9/10/11/12CH

Adjusts the input signal level. To get the best balance between the S/N ratio and the dynamic range, adjust the gain so that the PEAK indicator lights only occasionally and briefly on the highest input transients. The 60 to+10 scale is the MIC input adjustment range. The -40 to +10 scale is the Line input adjustments range. The -40 to +10 scale is the LINE input adjustment range.

22.EQUALIZER-9/10/11/12CH

This the three-band equalizer adjusts the channels high. mid and low frequency bands. Setting the knob to the "0"position produces a flat response in the corresponding frequency band, while turning to the left attenuates the band.

23.7-BAND STEREO GRAPHIC EQUALIZER

The graphic stereo equalizer allows you to tailor the sound to the room acoustics.

24.AUX1,AUX2,AUX3 CONTROL

Controlling the level of the auxiliary output channel without affecting the mixed amplifier signal. Adjusts the level of 9/10 channel to AUX.

25.FX1/2 CONTROL

The aux send marked FX offers a direct route to the built-in effects processor. Controlling the EFF volume of 9/10 channel.

26.PAN Control

The PAN control determines the position of the channel signal within the stereo image. When working with sub groups, you can use the PAN control to assign the signal to just one output,which gives you additional flexibility in recording situations.

27.MUTE SWITCH

The accordingly channel will be l mute after pressing this key.

28.MAIN

You can use MAIN-L/R fader after pressing "MAIN"switch.

G1-2;G3-4

You can use G1-2 fader after pressing the switch.

You can use G3-4 fader after pressing the switch.

29.SOLO/ PEAK SWITCH

 
SOLO: Folks use solo in live work preview channels before they are let into the main,or to just check out what a particular channels is up to anytime during a session.You can solo as many channels at a time as you like. All in all, you can monitor according channel with earphone after pressing this key.

PEAK: When the input signal is too loud , the indicator will flash.

30.CHANNEL FADERS

Adjusts the level of the channel signal . Using these fader to adjust the balance between the various channels.

31. MULTI-FUNCTIONAL KEY

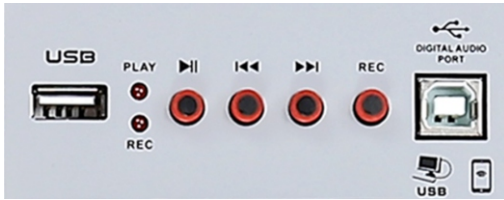

▶▶ PLAY/PAUSE CONTROL BUTTON

Short press to play or stop music. The PLAY indicator will flash during play music

◀◀ PREV Prev/Volume"- decrease control button

 
Short press the key to skip the previous song.
Hold the key for seconds to decrease the master volume.

▶▶ NEXT Next/Volume"+ increase control button

Short press the key to skip the next song.
Hold the key for seconds to increase the master volume.

REC Get into recording interface after pressing this key.

As followed Interface.

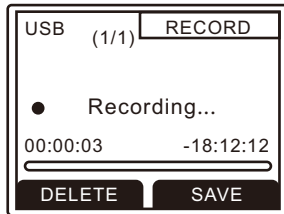

REC STEP:


Firstly, pressing the REC key to get into REC interface, we should use with multi-functional knob (Followed picture 1) accordingly. Pressing the right knob of picture 1, the interface will appear the content of picture 2. You should press the right knob of picture 1 again if you want to play or save the REC file. If you don't want to save the REC file, you would like to press the left knob of picture 1.

PIC1 Multi-functional knob



Left knob Right knob

 PIC2

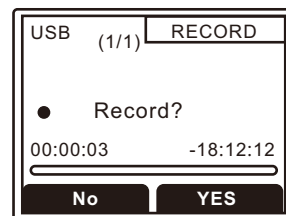


Recording interface

Checking REC:

Pressing the home key return to the home page, press the USB key get into USB interface (Followed picture 3), You should press the left knob of picture 1 if you want to play the REC.

 PIC3

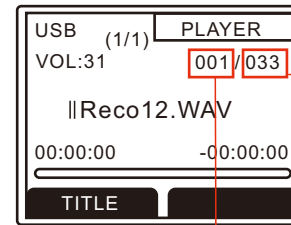

Total number of the REC

The sequence number of the current REC



USB INTERFACE : Inserting USB into this port.



PC/PHONE INTERFACE : Connecting with PC or PHONE.

32. TOGGLE KEY

When the key is released , the input signal for this channel is from 11/12th channel. When the key is pressed , the input signal for this channel is from MP3 channel.

33. Phantom +48V Switch

This switch toggles phantom power on and off. When the switch is on the mixer supplies +48V phantom power to all channels that have XLR MIC input jacks.

34. AUX1&AUX2&AUX3

Using these knob can control the AUX output jack. Users should turn these to right if you want to increase the volume of equipments, which connect with AUX1, AUX2, AUX3. If you want to use AUX, you should turn on this knob firstly.

35. Multi-functional knob





Left knob: select and confirm EFF type
 Right knob: adjust the EFF parameters, after clicking FX1/2 key, you would like to turn this knob to adjust the parameters

Remark:

1. Restore factory settings: you should press PROGRAM at the same time while opening the mixer.

 


2. Double row LED light of mixer will blink when signal over -20dB. Multifunctional knob

HOME KEY

Returning to the home page after pressing this key.

As followed interface:

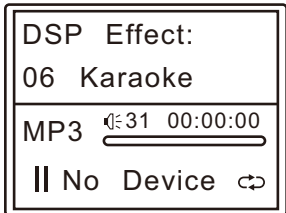


FX1&FX2 KEY-FX INTERFACE


Adjusting each FX from this key. There are two pages in this step. The interface will be changed after second press "FX1/FX2". For example, you can adjust EFF time after the first press "FX1/FX2". Adjusting another EFF parameters after second press "FX". But this step need to match with "PROGRAM(PUSH)" key.

As followed interface:

 The first page

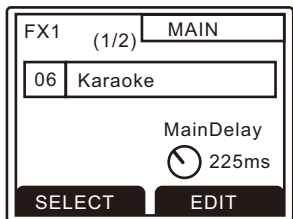


The second page

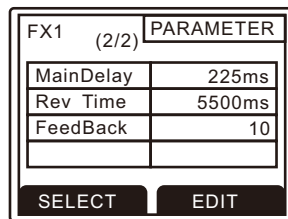 

USB KEY

Getting into USB interface after pressing this key.

 
As followed interface:

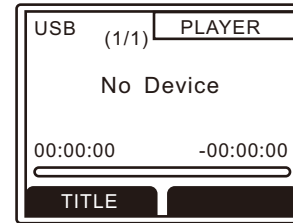

BT KEY

Long press this key for 3 sec to connect Bluetooth.

 As followed interface

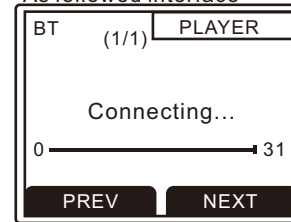

36. FX1&FX2 Control -SOUND

Adjusting the volume of effector. The volume will decrease when the knob turning left. The volume will increase when the knob turning right.

37. PHONES JACK

Connecting a pair of headphone to this TRS phone-type output jac

38. LEVEL METER

Show the level signal's strong.

39. TOGGLE KEY

1-2

3-4

When the key is released , users can monitor signal from 1st-2rd of GROUP. When the key is pressed , users can monitor signal from 3th-4th of GROUP.

40. PHONE

Controlling the output signal level to headphones.

41. EFF KEY "MAIN" KEY

Fx1 or FX2 will be sent to the main output through L & R bus after pressing this key.

“G1-G2” KEY

Fx1 or Fx2 will be sent to the group output through G1&G2 bus after pressing this key.

“G3-G4” KEY

Fx1 or Fx2 will be sent to the group output through G3&G4 bus after pressing this key.

42. FX LEVEL

Controlling the level of EFF output signal.

 
43. GROUP LEVEL

Controlling the level of GROUP output signal.

44. CHANNEL LEVEL KNOB- L&R

Adjusts the level of the main output signal.

BACK PANEL OF POWER MIXER SECTION:

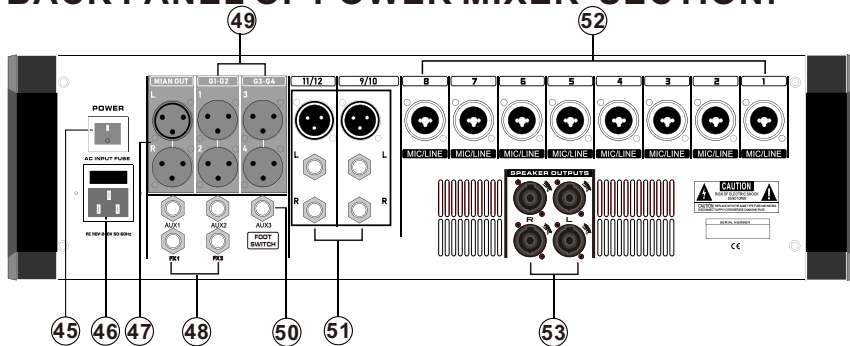

45. POWER SWITCH

Use the POWER switch to turn on the mixing console. The POWER switch always be in the “off” position when you are about to connect your unit to the mains. To disconnect the unit from the mains, pull out the main cord plug. When installing the product, ensure that the plug is easily accessible.

46. FUSE HOLDER/IEC MAINS RECEPTACLE

The console is connected to the mains via the cable supplied, which meets the required safety standards. Blown fuses must only be replaced by fuses of the same type and rating. The mains connection is made via a cable with IEC mains connector. An appropriate mains cable is supplied with the equipment.

47. MAIN OUT(L,R) JACKS

These jacks deliver the mixer’s stereo output. You use these jacks, for example, to connect to the power amplifier driving your main speakers.

48. FOOTSWITCH

Connecting with effect pedal.

49. GROUP OUT(1-2)JACKS

It can connect with others amplifiers, which can be controlled by GROUP 1-2.

GROUP OUT(3-4)JACKS

It can connect with others amplifiers, which can be controlled by GROUP 3-4.

50. AUX1-2-3 OUT

The AUX SEND jack should be used when hooking up a monitor power amplifier or active monitor speaker system. The relevant AUX path should be set pre-fader.

51. STEREO INPUT JACKS

You can connect with cassette deck.

52. MIC INPUT JACKS

These are balanced XLR -type microphone input jacks. (1:Ground;2:Hot;3:Cold) LINE Input jacks(monaural channels)

These are balanced TRS phone-jack line inputs. (T:Hot;R:Cold;S:Ground).

You can connect either balanced or unbalanced phone plugs to these jacks

53. L&R MAIN OUTPUT

 
Can be connected with speaker to here

NOTE WARNING


Minimum impedance 4 ohm per channel. Connecting two 4 ohm speakers per channel will overload the amp and void the warranty. Always use 8 ohm speakers or higher if connecting two speakers per channel.

EXAMPLES OF USE:


1. Use the amplifier

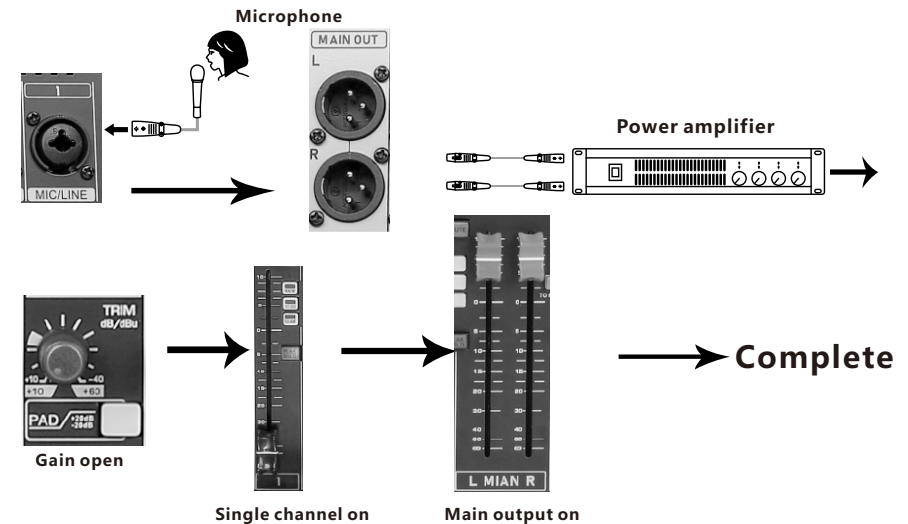

 
2. Use of built-in effects

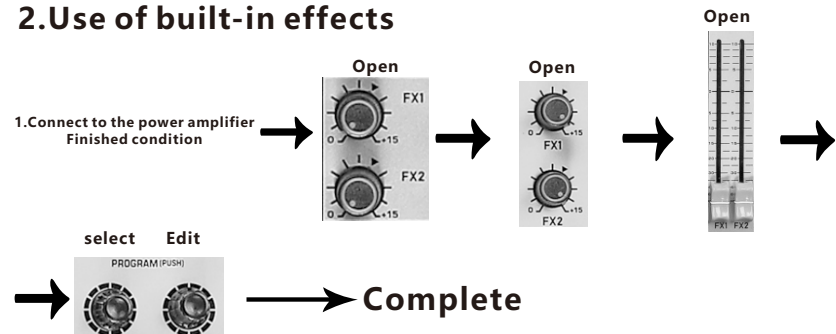

 
3. Use of AUX

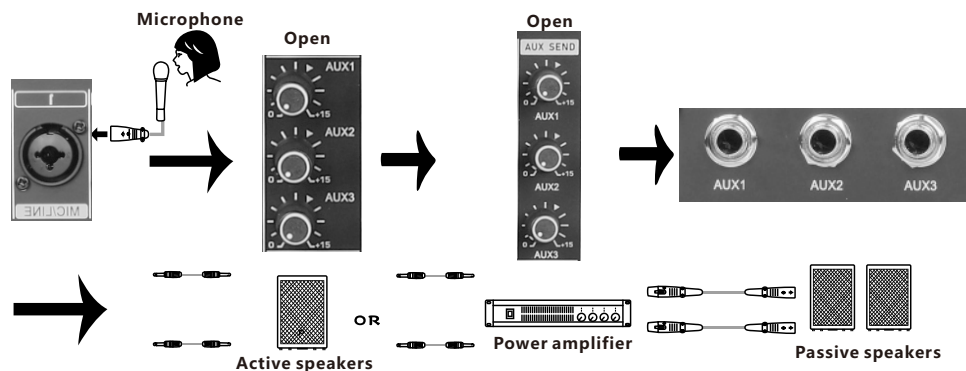

 4. Use of USB

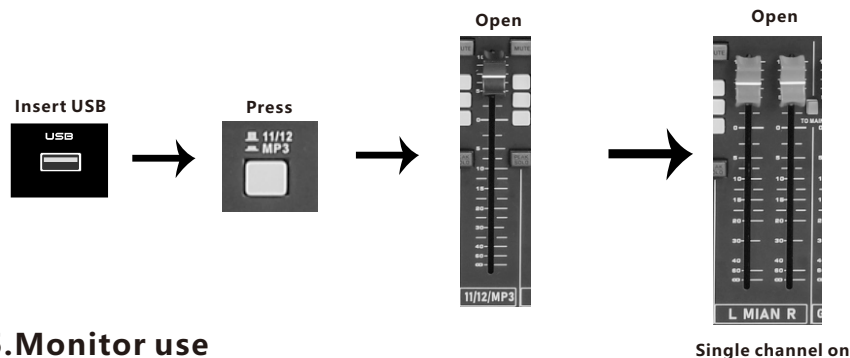

 5. Monitor use

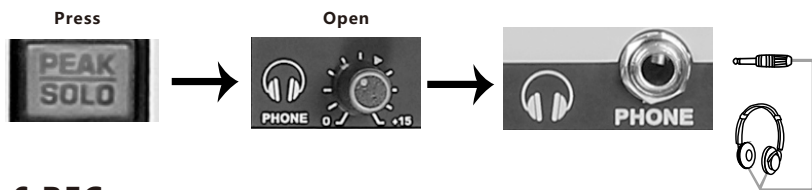

6. REC use

REC is the micro-signal output port of the mixer, which can be connected to a professional recorder or a computer equipped with recording software.

7. USING VOLTAGE

Please note that the mains voltage is 110V--- 240V, If it is lower than 220V, please use a voltage regulator, otherwise the insufficient power supply will cause current noise.

8. Warnings:

To select a mixer equipped with a wireless microphone, please use the penultimate channel control. For example, the third channel of the 4-channel mixer controls the microphone, for example, the seventh channel of the 8-channel mixer.

Restore factory settings: You should press PROGRAM at the same time while opening the mixer.



Factory accessories: one host, one power supply, one manual, one warranty card

WARNING:

To prevent fire or shock hazard, do not expose the unite to rain or moisture.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that maybe of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point, within a equilateral tr-iangle is intended to alert the user to the presence of important operating and maintenance(servicing) instructions in the literature ac-companying the appliance