


Mikado MK-1250

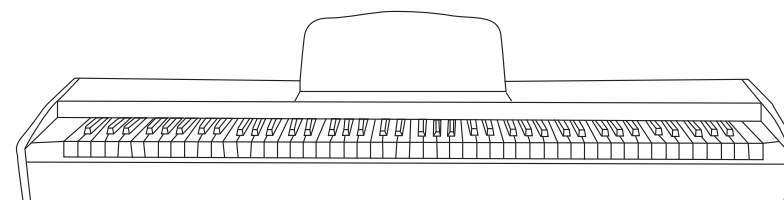

Содержание


1. Введение	1
2. Панель управления	2
3. Описание частей	3
4. Источник питания	4
5. Подключение	5-6
6. Авто аккомпанемент	7-8
7. Настройки	9-10
8. Тон	11-16
9. Ритм	17-20
10. Демо песни	21
11. Расписание аккордов	22
12. Приложение 1	23-24
13. Приложение 2	25



Введение

Клавиатура: 88 стандартных клавиш (включая черные клавиши). Диапазон: A1~C9.

- Тембр: 880 тембров (1-880).
- Ритм: 600 ритмов (1-600).
- Демо: 80 треков (1-80)
- Функция записи и воспроизведения, функция ритма, функция демонстрации, функция метронома, функция барабана клавиатуры.
- Выходная функция: трехразрядный цифровой дисплей.
- Демпферная педаль, демпферная педаль, педаль задержки Регулятор тембра: сила, шифт+, шифт - Педальное управление: 3 педали

Воспроизведение аудиофайлов MP3 с USB-накопителя
Отверстие для подключения USB делает подключение более простым и удобным
Функция записи: запись, воспроизведение, можно удобно записать в трек аккомпанемент- трек мелодии.
Встроенные стереодинамики обеспечивают высокое качество звуковых эффектов.
Аудиовход/аудиовыход Наушники: внешний двойной разъем для наушников. Другие функции: USB-воспроизведение, пауза, последняя песня

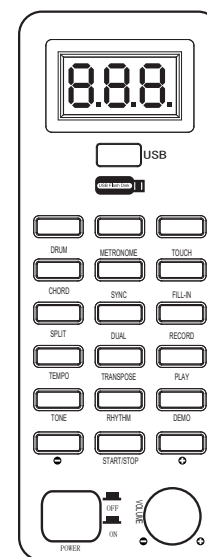


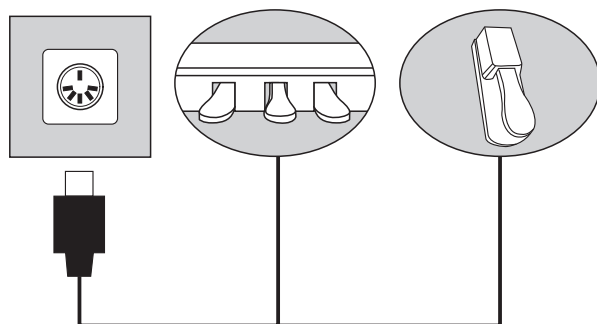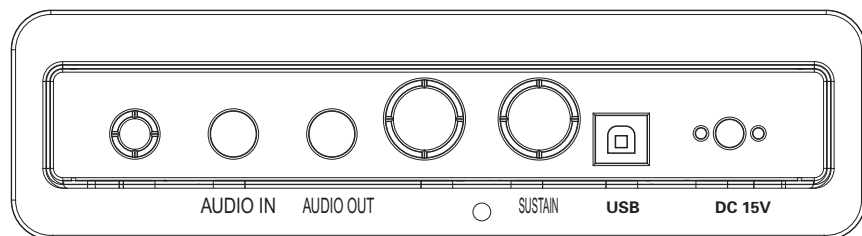

Питание

Этот продукт может питаться от стандартной внутренней настенной розетки, обязательно выключайте питание, когда оно не используется.

Используйте трансформатор переменного тока. Пожалуйста, используйте только трансформаторы переменного тока, указанные в этом издании.

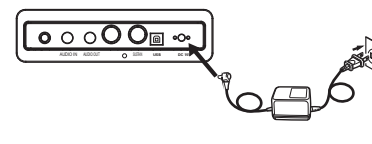

ПРЕДУПРЕЖДЕНИЕ Розетка переменного тока. Неправильное использование трансформатора переменного тока может привести к возгоранию. Опасность и риск поражения электрическим током. Необходимо учитывать следующие соображения: специальная поставка, указанная для этого продукта, должен использоваться трансформатор тока. выходное напряжение должно использоваться в маркировке асВ пределах номинального диапазона напряжения на электрическом трансформаторном блоке питания переменного тока. может перегрузить розетку и удлинитель питания. не кладите тяжелые предметы на шнур питания и не нагревайте его. не пытайтесь модифицировать шнур питания или переусердствовать. Изгиб. не скручивайте и не тяните шнур питания. если шнур питания или вилка повреждены, замените их.

Шнур питания и вилка одного и того же типа. не прикасайтесь к трансформатору переменного тока мокрыми руками. В противном случае существует риск поражения электрическим током. пожалуйста, используйте связь в месте, которое не будет разб



! WARNING

Использование поврежденного блока питания вызывает опасность пожара и риск поражения электрическим током. Необходимо соблюдать следующие примечания: не кладите шнур питания рядом с плитой или любым другим источником тепла рядом.


Подклчение

Аудиовходы

Перед подключением внешнего устройства к продукту обязательно сначала уменьшите громкость источника звука. После завершения подключения громкость можно сбросить обратно до уровня удовлетворения.

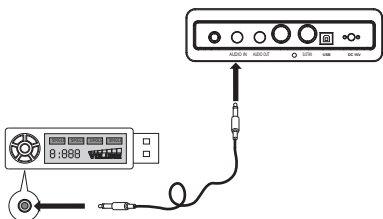

⚠ При подключении внешних звуковых устройств используйте низкие настройки выходных сигналов

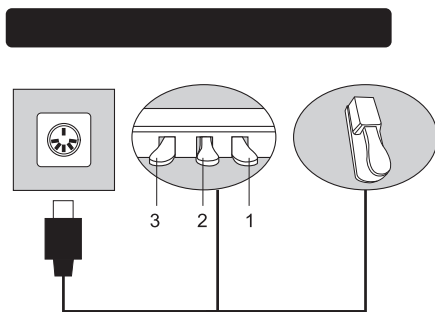


1. Демпферная педаль: после нажатия на демпферную педаль нажатие клавиш производит эффект удлинения. Педаль тона с задержкой: нажмите педаль тона с задержкой. После этого будет только сустейн воспроизводимой ноты. Мягкая педаль: после нажатия педали отключения звука можно уменьшить текущую громкость воспроизведения, вернуться к нормальному состоянию после отпущания.

5

The connection

USB-интерфейс


С помощью USB-порта этого цифрового пианино можно подключить к музыкальному устройству с USB-подключением к компьютеру. Предварительно установив музыкальное программное обеспечение на свой компьютер, чтобы играть, сочинять, редактировать, хранить и выполнять другие функциональные операции. Редактировать музыку и озвучивать музыку Встроенное программное обеспечение аккомпанемент, может быть подключен через программное обеспечение к цифровому фортепиано для игры, или в зависимости от звука аккомпанемента музыка воспроизводится.

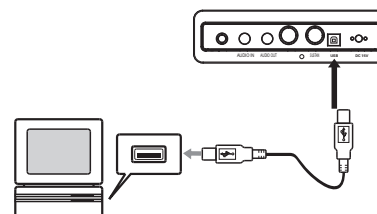

Используйте универсальные USB-кабели, подключите цифровое пианино к компьютеру и включите его. оборудование для цифрового пианино, пожалуйста, установите его в качестве устройства по умолчанию.

Разъем наушников

Этот продукт имеет два выходных порта для наушников, подключенных. Обязательно выключите цифровую сталь, прежде чем подключать наушники. Громкость пианино. Громкость можно изменить после завершения подключения. Верните свой уровень удовлетворения.

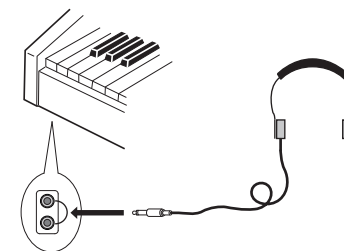

Подключение наушниковПодключение наушников автоматически отключит цифровое пианино.Встроенный выход для динамика позволяет играть поздно ночью, не мешая другим.

6

Основные функции

Подготовка

Этот раздел знакомит вас с основными функциями цифрового пианино.

Переключите переключатель «питание» в начальное состояние, экран дисплея загорится и перейдет в нормальный игровой режим.

Отрегулируйте ручку громкости, чтобы правильно отрегулировать громкость, когда положение Воспроизведение музыки на клавиатуре

Выбор тембра

Этот продукт имеет 800 видов встроенного тембра (сканируйте только два кода), Пожалуйста, следуйте инструкциям ниже, чтобы выбрать нужный тон.

Найдите нужный вам тембр в тембрелисте и запишите его тембровый номер. Нажмите клавишу тембра, чтобы войти в режим тембра. Выберите то, что вы хотите, нажав клавишу «+», «-». Тембр по тону, номер тембра (0-799)

Автоматический аккомпанемент

Выбор ритма.

В этот продукт встроено 600 ритмов (см. список ритмов), следуйте приведенным ниже шагам, чтобы выбрать нужный ритм.

Нажмите клавишу ритма, чтобы войти в режим ритма.

Выберите нужную клавишу, выбрав клавишу «+» «_». Ритм, номер стиля (0-599)

Нажмите «старт/стоп», чтобы запустить ритм воспроизведения.

Чтобы остановить ритм, снова нажмите кнопку «старт/». Подойдет кнопка «стоп».

Регулировка скорости

270 секций управления скоростью (30-300) предустановленное значение включения питания находится в пункте 90

Нажмите клавишу скорости, чтобы войти в режим регулировки скорости. Выберите нужную скорость, нажав кнопку «+» «-»

Автоматический аккомпанемент

Использование аккордового аккомпанемента

Как вы используете эту функцию. Прежде чем начать, вы должны сначала выбрать темп для использования и установить значение скорости.

Нажмите кнопку «старт/стоп», чтобы начать. Установите ритм.

Нажмите кнопку «комплексный аккорд», чтобы войти в состояние аккорда. использование простых аккордовых паттернов, где проигрывается сложный аккорд, а затем этот инструмент реагирует на аккорды.

Играя аккорды нажмите на аккомпанементной клавиатуре(клавиши 1-22 слева) разные аппликатуры играют по-разному. Нажмите кнопку «автоаккорд» еще раз, чтобы выключить функцию



Одновременное начало

Вы можете настроить этот продукт так, чтобы когда вы находитесь на клавиатуре, воспроизведение ритма начиналось в то же время, что и аккомпанемент. Следующие шаги описывают, как использовать функцию синхронного запуска. значение и выберите

Аккорды для аккомпанемента

1. В состоянии аккорда нажмите кнопку «синхронизация», чтобы он перешел в состояние ожидания синхронного запуска.
2. Сыграйте аккорды, и аккомпанемент начнет играть автоматически.
3. Чтобы отменить синхронизацию, нажмите кнопку «Пуск/Стоп».

Использование музыкальной библиотеки

Встроенная музыкальная библиотека этого продукта содержит 80 музыкальных композиций (см. список демо-песен) с музыкой. Музыка предназначена для воспроизведения и наслаждения.

1. Найдите музыку для воспроизведения в списке библиотеки. Запишите номер.
2. Нажмите кнопку «Demo Song», чтобы ввести тип демонстрационной песни.
3. Выберите песню, выбрав клавишу «+» «-» Серийный номер (0-79)
4. Нажмите еще раз кнопку демонстрации или кнопку start/stop, чтобы остановить воспроизведение и выйти из режима. Музыка будет продолжать воспроизводиться последовательно, пока вы ее не остановите.

Настройка

Клавиатура этого инструмента является динамической и тактильной клавиатурой с функцией чувствительности к силе нажатия. Громкость звуков зависит от силы вашего нажатия, что позволяет расставлять акценты в произведениях во время игры.

Нажмите кнопку «Force», чтобы запустить функцию Force Touch.

Нажмите «force» еще раз, чтобы отключить функцию.

Использование перкуSSIONных функций клавиатуры
Нажмите кнопку «перкуссия», чтобы переключить клавиатуру цифрового фортепиано на клавиатуру ударных, повторное нажатие отключит функцию.

Использование функции двойного тембра
При использовании функции двойного тембра для игры на клавиатуре можно одновременно использовать два разных тембра, представленных двумя инструментами.

1. Сначала войдите в режим тона и выберите музыкальный инструмент. В качестве основного цвета тона используется инструмент.
2. Нажмите кнопку «двойной тон», чтобы ввести второй тон, чтобы выбрать режим.
3. Используйте кнопку «Колесо данных», чтобы выбрать второй тембр инструмента.

Использование функции сегментации клавиатуры
С помощью функции сегментации можно разделить клавиатуру на два различных по тембру (основной и разделенный тембр) части, таким образом вы можете играть левой рукой один тон, а правой рукой играть дополнительный тон.

1. Сначала войдите в режим тона и выберите музыкальный инструмент, который будет использоваться в качестве основного тона.
2. Нажмите кнопку «сегментация клавиатуры» еще раз, чтобы войти в режим выбора добавочного тона.
3. Используйте кнопку выбора номера или колесо данных, чтобы выбрать инструмент, используемый в качестве дополнительного тона
4. Попробуйте сыграть ноты на клавиатуре.
5. Нажмите кнопку «Сегментация клавиатуры» еще раз, чтобы отменить разделение клавиатуры и вернуться в нормальное состояние клавиатуры.



Важно!

Клавиатуру можно разделить с помощью меню «Functions». Выберите параметр «Keyboardsegmentation point», а затем выберите «Колесоданных» или кнопку «+» в цифровой области. Выберите точку раздела.

Использование функций метронома

Нажмите кнопку «метроном», функция метронома включите, и вы можете играть со звуком ритма. Нажмите «бит», функция метронома отключена. Пожалуйста, используйте кнопку «Скорость ритма», чтобы установить скорость.

Настройка

Запись

1. Нажмите кнопку «record», чтобы войти в режим записи.
2. Максимальное количество записей - 250.
3. Если память заполнена самая старая запись удаляется при начале новой записи.

Воспроизведение

Нажмите кнопку «play», чтобы воспроизвести записанное ранее произведение.

Управление тоном

1. Нажмите клавишу «Shift», чтобы войти в режим управления сдвигом.
2. Нажмите клавишу «+» «-» еще раз, чтобы установить диапазон смещения. Есть 13 разделов (-6+6) для управления передачей, а значение по умолчанию для включения указано в пункте 7.
3. Удерживайте нажатой клавишу «+» «-» в течение одной секунды

Функция MP3

1. Прямой вход в режим mp3 после подключения к usbFlash диску.
2. Нажмите кнопку включения mp3, чтобы включить или выключить проигрыватель MP3.
3. Выбрать файл mp3: нажмите «+» и «-», чтобы выбрать песню.
4. Нажмите кнопку запуска/остановки, чтобы начать или приостановить воспроизведение.

Bluetooth :

Воспроизводите звук инструмента через Bluetooth устройства с помощью встроенного модуля Bluetooth. Используйте мобильное устройство для беспроводного подключения к инструменту MK-1250. Для подключения не требуются дополнительные адаптеры

СПИСОК ТОНОВ:

T001 Acoustic Grand Piano	T053 Choir Aahs	T105 Sitar
T002 Bright Acoustic Piano	T054 Voice Oohs	T106 Banjo
T003 Electric Grand Piano	T055 Synth Voice	T107 Shamisen
T004 Honky-tonk Piano	T056 Orchestra Hit	T108 Koto
T005 Rhodes Piano	T057 Trumpet	T109 Kalimba
T006 Chorused Piano	T058 Trombone	T110 Bagpipe
T007 Harpsichord	T059 Tuba	T111 Fiddle
T008 Clavichord	T060 Muted Trumpet	T112 Shanai
T009 Celesta	T061 French Horn	T113 Tinkle Bell
T010 Glockenspiel	T062 Brass Section	T114 Agogo
T011 Music box	T063 Synth Brass 1	T115 Steel Drums
T012 Vibraphone	T064 Synth Brass 2	T116 Woodblock
T013 Marimba	T065 Soprano Sax	T117 Taiko Drum
T014 Xylophone	T066 Alto Sax	T118 Melodic Tom
T015 Tubular Bell	T067 Tenor Sax	T119 Synth Drum
T016 Dulcimer	T068 Baritone Sax	T120 Reverse Cymbal
T017 Drawbar Organ	T069 Oboe	T121 Guitar Fret Noise
T018 Percussive Organ	T070 English Horn	T122 Breath Noise
T019 Rock Organ	T071 Bassoon	T123 Seashore
T020 Church Organ	T072 Clarinet	T124 Bird Tweet
T021 Reed Organ	T073 Piccolo	T125 Telephone Ring
T022 Accordion	T074 Flute	T126 Helicopter
T023 Harmonica	T075 Recorder	T127 Applause
T024 Tango Accordion	T076 Pan Flute	T128 Gunshot
T025 Acoustic Guitar (nylon)	T077 Bottle Blow	T129 Yong Gin
T026 Acoustic Guitar (steel)	T078 Shakuhachi	T130 Zheng
T027 Electric Guitar (jazz)	T079 Whistle	T131 Zhong Ruan
T028 Electric Guitar (clean)	T080 Ocarina	T132 Pi Pa
T029 Electric Guitar (muted)	T081 Lead 1 (square)	T133 Big Souna
T030 Overdriven Guitar	T082 Lead 2 (sawtooth)	T134 Souna
T031 Distortion Guitar	T083 Lead 3 (calliope lead)	T135 Er Hu
T032 Guitar Harmonics	T084 Lead 4 (chiff lead)	T136 Yue Hu
T033 Acoustic Bass	T085 Lead 5 (charang)	T137 Di Zi
T034 Electric Bass(finger)	T086 Lead 6 (voice)	T138 Bong Di
T035 Electric Bass (pick)	T087 Lead 7 (fifths)	T139 Koto
T036 Fretless Bass	T088 Lead 8 (bass+lead)	T140 Qu Di
T037 Slap Bass 1	T089 Pad 1 (new age)	T141 Jungle Bass
T038 Slap Bass 2	T090 Pad 2 (warm)	T142 Koto 2
T039 Synth Bass 1	T091 Pad 3 (polysynth)	T143 Marimba 3
T040 Synth Bass 2	T092 Pad 4 (choir)	T144 Tsugaru
T041 Violin	T093 Pad 5 (bowed)	T145 Kawala 1
T042 Viola	T094 Pad 6 (metallic)	T146 Attack Clav. 1
T043 Cello	T095 Pad 7 (halo)	T147 Crystal
T044 Contrabass	T096 Pad 8 (sweep)	T148 Bright String
T045 Tremolo Strings	T097 FX 1 (rain)	T149 Clavi 2
T046 Pizzicato Strings	T098 FX 2 (soundtrack)	T150 Chorus Guitar.
T047 Orchestral Harp	T099 FX 3 (crystal)	T151 Barafon
T048 Timpani	T100 FX 4 (atmosphere)	T152 Jazz Organ
T049 String Ensemble 1	T101 FX 5 (brightness)	T153 Indian Flute
T050 String Ensemble 2	T102 FX 6 (goblins)	T154 Mute Barafon 1
T051 Synth Strings 1	T103 FX 7 (echoes)	T155 Dual Horns 1
T052 Synth Strings 2	T104 FX 8 (sci-fi)	T156 Electoric Giutar (Clean) 2

T157 Clavi 3	T209 Mute Barafon 3	T261 Soft Guitar 5
T158 Soft Sax 1	T210 Dual Horns 2	T262 Nay 3
T159 Electric Vibraphone	T211 Xylophone 2	T263 Synth Harpsi. 3
T160 Didgeridoo 1	T212 Didgeridoo 3	T264 Wind Organ 3
T161 Barafon 2	T213 Wind Organ 2	T265 Shanai 2
T162 Tubular Bells 2	T214 Church Bells	T266 Woodblock 6
T163 Soft Accord	T215 Tsugaru 3	T267 Electric Vibraphone 4
T164 Barafon 3	T216 Nay	T268 Kawala 5
T165 Clavi 4	T217 Guitar Pinch 2	T269 Grow Guitar 2
T166 Nay	T218 Grow Guitar	T270 Grow Guitar 3
T167 Oct Harp	T219 Indian Flute 3	T271 Steel Bell 6
T168 Attack Barafon	T220 Synth Harpsi. 2	T272 Wind Organ 4
T169 Clavi 5	T221 Soft Sax 2	T273 Soft Accord 2
T170 Kalimba 2	T222 Xylophone 3	T274 Kalimba 3
T171 Tsugaru 2	T223 English Horn 2	T275 Twin Bones 3
T172 Shamisen 2	T224 Soft Guitar 3	T276 Church Bells 2
T173 Woodblock 2	T225 Castanets 2	T277 Koto 5
T174 Crystal 2	T226 Soft Guitar 4	T278 Attack Barafon 2
T175 Shamisen 3	T227 Hard Vibe 2	T279 Mute Barafon 5
T176 Synth Harpsi. 1	T228 Reed Horn	T280 Nay 4
T177 Jazz Organ 1	T229 Nay 2	T281 Jungle Bass 2
T178 Viola Attack	T230 Bari & Tenor	T282 Soft Accord 3
T179 Viola Attack 2	T231 Kawala 3	T283 Hard Vibe 3
T180 Hard Barsoon 1	T232 Indian Flute 4	T284 Soft Clav.
T181 Mute Barafon 2	T233 Didgeridoo 4	T285 Bag Pipe 2
T182 Bodhran	T234 Attack Clav. 2	T286 Oct Harp 2
T183 Kawala 2	T235 Marimba 4	T287 Woodblock 7
T184 Didgeridoo 2	T236 Bari & Tenor 2	T288 Mute Barafon 6
T185 Soft Guitar 1	T237 Slow Violin	T289 Guitar Pinch 4
T186 Suona	T238 Organ Flute	T290 Dulcimer 3
T187 Twin Bones	T239 Jazz Organ 4	T291 Soft Sax 4
T188 Jazz Organ 2	T240 Electric Vibraphone 3	T292 Electric Vibraphone 5
T189 Woodblock 3	T241 Dual Horns 3	T293 Tsugaru 6
T190 Soft Santur	T242 Indian Flute 5	T294 Reed Horn 2
T191 Koto 3	T243 English Horn 3	T295 Castanets 3
T192 Castanets 1	T244 Dulcimer 2	T296 Tron Flute 2
T193 Viola Attack 3	T245 Koto 4	T297 Attack Clav. 3
T194 Woodblock 4	T246 Tubular Bells 3	T298 Bari & Tenor 3
T195 Bright String 2	T247 Tsugaru 4	T299 Indian Flute 6
T196 Twin Bones 2	T248 Tsugaru 5	T300 Soft Guitar 6
T197 Tenor Sax 2	T249 Mute Barafon 4	T301 Nay 5
T198 Wind Organ	T250 Dual Horns 4	T302 Didgeridoo 5
T199 Tron Flute	T251 Soft Sax 3	T303 Marimba 5
T200 Bodhran 2	T252 Bodhran 3	T304 Attack Clav. 4
T201 Tron Flute	T253 Guitar Pinch 3	T305 Jungle Bass 3
T202 Jazz Organ 3	T254 Crystal 3	T306 Hard Barsoon 2
T203 Soft Santur 2	T255 Grow Guitar	T307 Suona 2
T204 Woodblock 5	T256 Jazz Organ 5	T308 Hard Vibe 4
T205 Shamisen 4	T257 Attack Barafon	T309 Bag Pipe 3
T206 Indian Flute 2	T258 Xylophone 4	T310 Soft Accord 4
T207 Electric Vibraphone 2	T259 Soft Santur 3	T311 Attack Barafon 3
T208 Soft Guitar 2	T260 Kawala 4	T312 Hard Barsoon 3

T313 Dulcimer 4	T365 Wind Organ 6	T417 Hard Barsoon 5
T314 Twin Bones 4	T366 Tron Flute 3	T418 Dulcimer 7
T315 Soft Sax 5	T367 Soft Sax 6	T419 Soft Accord 6
T316 Shamisen 5	T368 Suona 4	T420 Church Bells 4
T317 Suona 3	T369 Soft Guitar 7	T421 Shamisen 7
T318 Bodhran 4	T370 Hard Vibe 6	T422 Synth Harpsi. 4
T319 Shamisen 6	T371 Jazz Organ 7	T423 Crystal 5
T320 Electric Vraphone 6	T372 Grow Guitar 5	T424 Kawala 9
T321 Tsugaru 7	T373 Xylophone 5	T425 Dual Horns 8
T322 Oct Harp 3	T374 Bag Pipe 5	T426 Clavi 8
T323 Kalimba 4	T375 Bag Pipe 6	T427 Electric Vraphone 7
T324 Soft Clav. 2	T376 Clavi 7	T428 Castanets 5
T325 English Horn 3	T377 Hard Vibe 7	T429 Tenor Sax 5
T326 Didgeridoo 6	T378 Kawala 7	T430 Tenor Sax 6
T327 Barafon 4	T379 Shanai 3	T431 Didgeridoo 10
T328 Indian Flute 7	T380 Suona 5	T432 Kalimba 7
T329 Organ Flute 2	T381 Jungle Bass 4	T433 English Horn 8
T330 Soft Santur 4	T382 Grow Guitar 6	T434 Guitar Pinch 6
T331 Mute Barafon 7	T383 Bag Pipe 7	T435 Hard Vibe 8
T332 Nay 6	T384 Crystal 4	T436 Mute Barafon 13
T333 Hard Vibe 5	T385 Guitar Pinch 5	T437 Tenor Sax 7
T334 Bari & Tenor 4	T386 Woodblock 8	T438 Bag Pipe 8
T335 Bag Pipe 4	T387 Soft Sax 7	T439 Shanai 5
T336 Tenor Sax 3	T388 Attack Barafon 4	T440 English Horn 9
T337 Organ Flute 3	T389 Barafon 6	T441 Didgeridoo 11
T338 Dulcimer 5	T390 Organ Flute 4	T442 Organ Flute 5
T339 Twin Bones 5	T391 Mute Barafon 9	T443 Attack Barafon 5
T340 Grow Guitar 4	T392 Shanai 4	T444 Jungle Bass 5
T341 Kalimba 5	T393 Soft Clav. 3	T445 Barafon 7
T342 Oct Harp 4	T394 Oct Harp 5	T446 Soft Santur 6
T343 Nay 7	T395 Tron Flute 4	T447 Slow Violin 3
T344 Dual Horns 5	T396 Bright String 3	T448 Hard Barsoon 6
T345 Didgeridoo 7	T397 Jazz Organ 8	T449 Didgeridoo 12
T346 English Horn 4	T398 Mute Barafon 10	T450 Kalimba 8
T347 Kawala 6	T399 Slow Violin 2	T451 Electoric Giutar (Clean) 3
T348 Marimba 6	T400 Soft Sax 8	T452 Dulcimer 8
T349 Barafon 5	T401 English Horn 5	T453 Reed Horn 5
T350 Soft Accord 5	T402 Reed Horn 4	T454 Bodhran 5
T351 Mute Barafon 8	T403 Indian Flute 8	T455 Soft Sax 9
T352 Dual Horns 6	T404 Castanets 4	T456 Mute Barafon 14
T353 Church Bells 3	T405 English Horn 6	T457 Guitar Pinch 7
T354 Wind Organ 5	T406 Tron Flute 5	T458 Wind Organ 7
T355 Attack Clav. 5	T407 English Horn 7	T459 Guitar Pinch 8
T356 Jazz Organ 6	T408 Hard Barsoon 4	T460 Indian Flute 9
T357 Reed Horn 3	T409 Dulcimer 6	T461 Bag Pipe 9
T358 Tenor Sax 4	T410 Xylophone 6	T462 Crystal 6
T359 Chorus Guitar. 2	T411 Mute Barafon 11	T463 Twin Bones 6
T360 Didgeridoo 8	T412 Nay 8	T464 Crystal 7
T361 Soft Santur 5	T413 Mute Barafon 12	T465 Soft Guitar 8
T362 Clavi 6	T414 Dual Horns 7	T466 Guitar Pinch 9
T363 Kalimba 6	T415 Kawala 8	T467 Attack Clav. 6
T364 Didgeridoo 9	T416 Soft Clav. 4	T468 Bodhran 6

T469 Suona 6	T521 Clavi 10	T573 Clavi 11
T470 Chorus Guitar. 3	T522 Wind Organ 8	T574 Viola Attack 6
T471 Slow Violin 4	T523 Synth Harpsi. 6	T575 Synth Harpsi. 7
T472 Clavi 9	T524 Bari & Tenor 5	T576 Jungle Bass 7
T473 Castanets 6	T525 Steel Bell 9	T577 Koto 8
T474 Slow Violin 5	T526 Soft Sax 14	T578 Church Bells 6
T475 Jazz Organ 9	T527 Castanets 8	T579 Soft Accord 9
T476 Jazz Organ 10	T528 Didgeridoo 15	T580 Tubular Bells 5
T477 Electric Vraphone 8	T529 Soft Sax 15	T581 Bag Pipe 12
T478 Bodhran 7	T530 Mute Barafon 16	T582 Grow Guitar 7
T479 Steel Bell 7	T531 Soft Guitar 10	T583 Mute Barafon 18
T480 Synth Harpsi. 5	T532 Soft Accord 8	T584 Soft Accord 10
T481 Marimba 7	T533 Wind Organ 9	T585 Electoric Giutar (Clean)6
T482 Marimba 8	T534 Didgeridoo 16	T586 Viola Attack 7
T483 Attack Barafon 6	T535 Electoric Giutar (Clean)5	T587 Kawala 11
T484 Castanets 7	T536 English Horn 10	T588 Soft Santur 7
T485 Hard Vibe 9	T537 Soft Sax 16	T589 Bright String 5
T486 Tron Flute 6	T538 Soft Guitar 11	T590 Electoric Giutar (Clean)7
T487 Soft Accord 7	T539 Hard Barsoon 8	T591 Attack Barafon 8
T488 Shanai 6	T540 Kalimba 9	T592 Electric Vraphone 9
T489 Woodblock 9	T541 Koto 7	T593 Steel Bell 10
T490 Soft Sax 10	T542 Soft Clav. 6	T594 Mute Barafon 19
T491 Slow Violin 6	T543 Xylophone 7	T595 Chorus Guitar. 7
T492 Soft Sax 11	T544 Soft Clav. 7	T596 Soft Clav. 10
T493 Chorus Guitar. 4	T545 Church Bells 5	T597 Viola Attack 8
T494 Attack Clav. 7	T546 Kawala 10	T598 Church Bells 7
T495 Reed Organ 2	T547 Didgeridoo 17	T599 Soft Santur 8
T496 Viola Attack 4	T548 Kalimba 10	T600 Wind Organ 10
T497 Koto 6	T549 Castanets 9	T601 Indian Flute 11
T498 Tsugaru 8	T550 Didgeridoo 18	T602 Tsugaru 10
T499 Bag Pipe 10	T551 Bodhran 8	T603 Dulcimer 10
T500 Attack Clav. 8	T552 English Horn 11	T604 Grow Guitar 8
T501 Tron Flute 7	T553 Hard Vibe 10	T605 Tubular Bells 6
T502 Marimba 9	T554 Bodhran 9	T606 Jungle Bass 8
T503 Bag Pipe 11	T555 Indian Flute 10	T607 Dulcimer 11
T504 Hard Barsoon 7	T556 Dulcimer 9	T608 Organ Flute 6
T505 Mute Barafon 15	T557 Soft Clav. 8	T609 Nay 10
T506 Soft Sax 12	T558 Viola Attack 5	T610 Attack Barafon 9
T507 Attack Clav. 9	T559 Attack Harp 1	T611 English Horn 12
T508 Jazz Organ 11	T560 Mute Barafon 17	T612 Suona 7
T509 Soft Guitar 9	T561 Tenor Sax 8	T613 Reed Organ 5
T510 Didgeridoo 13	T562 Twin Bones 7	T614 Shamisen 8
T511 Bright String 4	T563 Chorus Guitar. 6	T615 Koto 9
T512 Electoric Giutar (Clean)4	T564 Shanai 7	T616 Shamisen 9
T513 Tsugaru 9	T565 Kalimba 11	T617 Church Bells 8
T514 Nay 9	T566 Jungle Bass 6	T618 Nay 11
T515 Reed Horn 6	T567 Attack Barafon 7	T619 Hard Barsoon 9
T516 Didgeridoo 14	T568 Soft Clav. 9	T620 Slow Violin 7
T517 Soft Clav. 5	T569 Tubular Bells 4	T621 Soft Sax 17
T518 Soft Sax 13	T570 Reed Organ 4	T622 Grow Guitar 9
T519 Reed Organ 3	T571 Guitar Pinch 10	T623 Attack Harp 2
T520 Steel Bell 8	T572 Bodhran 10	T624 Suona 8

T625 Nay 12
 T626 Synth Harpsi. 8
 T627 Didgeridoo 19
 T628 Nay 13
 T629 Synth Harpsi. 9
 T630 Soft Sax 18
 T631 Koto 10
 T632 Kalimba 12
 T633 Suona 9
 T634 Oct Harp 6
 T635 Koto 11
 T636 Shanai 8
 T637 Electoric Giutar (Clean)8
 T638 Clavi 12
 T639 Attack Harp 3
 T640 Attack Clav. 10
 T641 Bright String 6
 T642 Organ Flute 7
 T643 Electoric Giutar (Clean)9
 T644 Kawala 12
 T645 Bodhran 11
 T646 Shanai 9
 T647 Suona 10
 T648 Synth Harpsi. 10
 T649 Bari & Tenor 6
 T650 Kawala 13
 T651 Bari & Tenor 7
 T652 Reed Horn 7
 T653 Shamisen 10
 T654 Soft Clav. 11
 T655 Bari & Tenor 8
 T656 Soft Santur 9
 T657 Attack Harp 4
 T658 Bright String 7
 T659 Guitar Pinch 11
 T660 Wind Organ 11
 T661 Soft Guitar 12
 T662 English Horn 13
 T663 Kawala 14
 T664 Grow Guitar 10
 T665 Attack Harp 5
 T666 Bari & Tenor 9
 T667 Organ Flute 8
 T668 Woodblock 10
 T669 Hard Vibe 11
 T670 Mute Barafon 20
 T671 Tubular Bells 7
 T672 Suona 11
 T673 Bright String 8
 T674 Hard Vibe 12
 T675 Slow Violin 8
 T676 Shamisen 11

T677 Tron Flute 8
 T678 Attack Clav. 11
 T679 Dual Horns 9
 T680 Wind Organ 12
 T681 Twin Bones 8
 T682 Reed Organ 6
 T683 Organ Flute 9
 T684 Slow Violin 9
 T685 Dulcimer 12
 T686 Tsugaru 11
 T687 Wind Organ 13
 T688 Soft Santur 10
 T689 Suona 12
 T690 Soft Guitar 13
 T691 Xylophone 8
 T692 Dulcimer 13
 T693 Marimba 10
 T694 Soft Guitar 14
 T695 Viola Attack 9
 T696 Hard Vibe 13
 T697 Koto 12
 T698 Tenor Sax 9
 T699 Kawala 15
 T700 Steel Bell 11
 T701 Soft Accord 11
 T702 Organ Flute 10
 T703 Organ Flute 11
 T704 Bright String 9
 T705 Soft Santur 11
 T706 Hard Barsoon 10
 T707 Wind Organ 14
 T708 Synth Harpsi. 11
 T709 Soft Sax 19
 T710 Bright String 10
 T711 Bright String 11
 T712 Jungle Bass 9
 T713 Soft Accord 12
 T714 Reed Horn 8
 T715 Slow Violin 10
 T716 Synth Harpsi. 12
 T717 Attack Harp 6
 T718 Soft Santur 12
 T719 Hard Barsoon 11
 T720 English Horn 14
 T721 Crystal 8
 T722 Bari & Tenor 10
 T723 Koto 13
 T724 Didgeridoo 20
 T725 Tenor Sax 10
 T726 Bright String 12
 T727 Hard Vibe 14
 T728 Dual Horns 10

T729 Kawala 16
 T730 Kawala 17
 T731 Bag Pipe 13
 T732 Electoric Giutar (Clean) 10
 T733 Tron Flute 9
 T734 Kawala 18
 T735 Tron Flute 10
 T736 Tubular Bells 8
 T737 Synth Harpsi. 13
 T738 Soft Santur 13
 T739 Tubular Bells 9
 T740 Attack Barafon 10
 T741 Attack Barafon 11
 T742 Electric Vraphone 10
 T743 Dual Horns 11
 T744 Shanai 10
 T745 Bright String 13
 T746 Crystal 9
 T747 Clavi 13
 T748 Soft Sax 20
 T749 Tron Flute 11
 T750 Dulcimer 14
 T751 Slow Violin 11
 T752 Tenor Sax 11
 T753 Nay 14
 T754 Soft Guitar 15
 T755 Shanai 11
 T756 Hard Barsoon 12
 T757 Synth Harpsi. 14
 T758 Soft Sax 21
 T759 Suona 13
 T760 Kalimba 13
 T761 Suona 14
 T762 Slow Violin 12
 T763 Reed Organ 7
 T764 Kawala 19
 T765 Reed Horn 9
 T766 Attack Harp 7
 T767 Oct Harp 7
 T768 Kalimba 14
 T769 Twin Bones 9
 T770 Attack Clav. 12
 T771 Bari & Tenor 11
 T772 Attack Harp 8
 T773 English Horn 15
 T774 Twin Bones 10
 T775 Soft Clav. 12
 T776 Tubular Bells 10
 T777 Slow Violin 13
 T778 Synth Harpsi. 15
 T779 Guitar Pinch 12
 T780 Church Bells 9

T781 Castanets 10
 T782 Twin Bones 11
 T783 Indian Flute 12
 T784 Woodblock 11
 T785 Attack Harp 9
 T786 Crystal 10
 T787 Mute Barafon 21
 T788 Synth Harpsi. 16
 T789 Reed Organ 8
 T790 Steel Bell 12
 T791 Chorus Guitar. 8
 T792 Reed Organ 9
 T793 Marimba 11
 T794 Electric Vraphone 11
 T795 Soft Guitar 16
 T796 Viola Attack 10
 T797 Reed Organ 10
 T798 Bari & Tenor 12
 T799 Soft Sax 22
 T800 Jazz Organ 12
 T801 Soft Guitar 17
 T802 Xylophone 9
 T803 Xylophone 10
 T804 Church Bells 10
 T805 Suona 15
 T806 Crystal 11
 T807 Chorus Guitar. 9
 T808 Crystal 12
 T809 Hard Barsoon 13
 T810 Castanets 11
 T811 Kawala 20
 T812 Nay 15
 T813 Tubular Bells 11
 T814 Hard Barsoon 14
 T815 Barafon 8
 T816 Marimba 12
 T817 Soft Sax 23
 T818 Attack Barafon 12
 T819 Electric Vraphone 12
 T820 Wind Organ 15
 T821 Attack Barafon 13
 T822 Electric Vraphone 13
 T823 Soft Guitar 18
 T824 Xylophone 11
 T825 Tenor Sax 12
 T826 Oct Harp 8
 T827 Shamisen 12
 T828 Reed Horn 10
 T829 Marimba 13
 T830 Reed Organ 11
 T831 Attack Clav. 13
 T832 Hard Barsoon 15

T833 Dual Horns 12
 T834 Soft Clav. 13
 T835 Church Bells 11
 T836 Oct Harp 9
 T837 Oct Harp 10
 T838 Indian Flute 13
 T839 Viola Attack 11
 T840 Clavi 14
 T841 Koto 14
 T842 Soft Guitar 19
 T843 Castanets 12
 T844 Jazz Organ 13
 T845 Bag Pipe 14
 T846 Steel Bell 13
 T847 Church Bells 12
 T848 Guitar Pinch 13
 T849 Soft Clav. 14
 T850 Tubular Bells 12
 T851 Grow Guitar 11
 T852 Steel Bell 14
 T853 Chorus Guitar. 10
 T854 Crystal 13
 T855 Reed Horn 11
 T856 Steel Bell 15
 T857 Kawala 21
 T858 Attack Harp 10
 T859 Oct Harp 11
 T860 Kalimba 15
 T861 Tubular Bells 13
 T862 Electoric Giutar (Clean)11
 T863 Jazz Organ 14
 T864 Attack Barafon 14
 T865 Soft Guitar 20
 T866 Soft Accord 13
 T867 Synth Harpsi. 17
 T868 Bodhran 12
 T869 Woodblock 12
 T870 Attack Harp 11
 T871 Organ Flute 12
 T872 Jazz Organ 15
 T873 Didgeridoo 21
 T874 Church Bells 13
 T875 Synth Harpsi. 18
 T876 Chorus Guitar. 11
 T877 Organ Flute 13
 T878 Shamisen 13
 T879 Jungle Bass 10
 T880 Shamisen 14

Список Ритмов

R001 50's Pop
R002 Cool Pop
R003 Groovy Pop
R004 60's Vintage Pop
R005 80's Pop
R006 Rap Pop
R007 Pop Rock
R008 60' s Soul
R009 70' s Soul
R010 Funk
R011 16 Beat Shuffle
R012 Twist
R013 British Pop
R014 Hard Rock
R015 Fusion
R016 FunkShuffl
R017 FusionShuffl
R018 60's Rock
R019 Standard Rock
R020 Brit Rock Pop
R021 60's Vintage Rock
R022 Chart Rock Shfl
R023 60's Pop Rock
R024 RockBilly
R025 RockBoogie
R026 RockChaCha1
R027 RockClassical
R028 RockShuffle
R029 RockPop
R030 Pop Mambo
R031 Latin Party Pop
R032 Cumbia
R033 Parranda
R034 Carnival
R035 Bossanova
R036 Mambo 1
R037 Mambo 2
R038 Bolero
R039 Cumbia
R040 Latin Rock
R041 Disco Latin
R042 Tijuana
R043 Reggae
R044 70's Chart Ballad
R045 Romantic Ballad
R046 90's Cool Ballad
R047 Alp Ballad1
R048 Alp Ballad2
R049 Slow Rock
R050 Unplugged
R051 Pop Ballad
R052 Pop New Age

R053 8 Beat Modern
R054 Country Ballad
R055 Love Song
R056 Modern Country Pop
R057 Electro Pop
R058 Acoustic Ballad
R059 Piano Ballad
R060 R&B Ballad
R061 Rock Ballad
R062 Slow & Easy
R063 Analog Ballad
R064 E_Ballad
R065 70's Disco1
R066 70's Disco2
R067 Funky Disco
R068 Saturday Night
R069 Club Latin
R070 Disco Chocolate
R071 Disco Fox
R072 Disco Funk
R073 Disco Hands
R074 Disco Party
R075 Disco Samba
R076 UK Pop
R077 Club Dance
R078 Modern R&B
R079 Hip Shuffle
R080 Charleston
R081 DiscoPop
R082 DiscoSoul
R083 DiscoTrot
R084 EuroBeat
R085 Rap
R086 Rave
R087 Swing Fox1
R088 Slow Fox1
R089 Organ Cha Cha1
R090 Organ Quick Step1
R091 Fast Band 1
R092 Cat Groove1
R093 Dixie Jazz1
R094 Medium Jazz1
R095 Jazz Big Band1
R096 Jazz Club1
R097 Ragtime1
R098 Country Ballad1
R099 Country Two Step1
R100 Schlager Polka1
R101 Polka Pop1
R102 Blue Grass 1
R103 Blue Grass 2
R104 Blue Grass 3

R105 Pop Waltz1
R106 USA March1
R107 Hully Gully1
R108 Tarantella1
R109 Limbo Rock1
R110 Swing Waltz1
R111 Pub Piano1
R112 Jazz Waltz 1
R113 Jazz Waltz 2
R114 Show Tune1
R115 Polka1
R116 Waltz1
R117 Cha Cha1
R118 Rumba1
R119 Jive1
R120 Pasodoble1
R121 Samba 1
R122 Samba 2
R123 Schlager Rock 1
R124 Schlager Rock 2
R125 FoxTrot1
R126 Viennese Waltz1
R127 Tango1
R128 Tango2
R129 70's Disco Funk
R130 Disco Philly1
R131 Disco House1
R132 80's Disco
R133 Swing Fox2
R134 Slow Fox2
R135 Organ Cha Cha2
R136 Organ Quick Step2
R137 Cat Groove2
R138 Dixie Jazz2
R139 Medium Jazz2
R140 Jazz Big Band2
R141 Jazz Club2
R142 Ragtime2
R143 Big Band Shuffle 1
R144 Big Band Shuffle 2
R145 Big Band Shuffle 3
R146 Fast Band 2
R147 Fast Band 3
R148 Frankly Soul
R149 Jazz Funk
R150 Classic Big Band
R151 French Jazz1
R152 Jump Jive
R153 Country Ballad2
R154 Country Two Step2
R155 Country 1
R156 Country 2

R157 Finger Pickin1
R158 Country Brothers1
R159 New Country
R160 Easy Country1
R161 70's Chart Cntry1
R162 Hoedown
R163 Country Shuffle
R164 Schlager Polka2
R165 Polka Pop2
R166 Blue Grass 4
R167 Blue Grass 5
R168 Blue Grass 6
R169 Pop Waltz2
R170 USA March2
R171 Hully Gully2
R172 Tarantella2
R173 Limbo Rock2
R174 Swing Waltz2
R175 Pub Piano2
R176 Jazz Waltz 1
R177 Jazz Waltz 2
R178 Show Tune2
R179 Polka2
R180 Ober Polka1
R181 Party Polka
R182 Waltz2
R183 Cha Cha2
R184 Rumba2
R185 Jive2
R186 Pasodoble2
R187 Samba3
R188 Samba4
R189 Schlager Rock 3
R190 Schlager Rock 4
R191 Fox Trot2
R192 Viennese Waltz2
R193 Tango3
R194 Tango4
R195 German Waltz
R196 Carnival
R197 Organ Samba1
R198 Reel1
R199 Gay Gordons1
R200 Scand Waltz
R201 Pop Classics
R202 Live 8 Beat
R203 Power Rock
R204 Acoustic Rock
R205 Cool 8 Beat
R206 Uptempo 8Beat
R207 90's Rock Ballad
R208 Chart Rock Shfl

R209 Brit Pop
R210 Brazilian Samba
R211 Brit Pop Swing
R212 60's 8 Beat
R213 Fast Bossa
R214 60's Guitar Pop
R215 70's 8 Beat
R216 90's Guitar Pop
R217 Soft Rock
R218 Chart Guita rPop
R219 Gujira
R220 Modern Pop Bld
R221 Soul R&B
R222 R&B Soul Ballad
R223 Euro Hip Hop
R224 Trip Hop
R225 Ibiza 2004
R226 Mod Big Band Shfl
R227 Modern Big Band
R228 Pop Gtr Ballad
R229 Ibiza 2002
R230 Euro Trance
R231 6-8 Trance
R232 Latin DJ's
R233 Bomba
R234 Chillout Cafe
R235 70's Glam Piano
R236 French House
R237 English Waltz
R238 8 Beat Ballad1
R239 Club House
R240 House
R241 Jazz Gtr Club
R242 Modern Jazz
R243 Acoustic Jazz
R244 Cool Jazz Ballad
R245 Modern Jazz Bld
R246 Easy Listening
R247 Bebop
R248 Orch Big Band1
R249 Big Band Fast1
R250 Orchestra Swing1
R251 Orchestra Swing2
R252 Rock Cha Cha2
R253 Organ Swing
R254 Secret Service
R255 Animation Bld
R256 Christmas Waltz
R257 Movie Swing
R258 Movie Ballad
R259 Bubblegum Pop
R260 Rock Shuffle

R261 West Coast Pop
R262 Classic 16 Beat
R263 Jazz Pop
R264 Kool Shuffle
R265 8 Beat Ballad2
R266 Chillout
R267 16 Beat Ballad1
R268 Epic Ballad
R269 Easy Ballad
R270 Cuban Son
R271 Bachata
R272 Forro
R273 J-Pop Hit
R274 16 Beat Ballad2
R275 70's Pop Ballad
R276 EP Ballad
R277 Power Ballad
R278 Guitar Ballad
R279 New R&B Ballad
R280 Guitar Serenade
R281 Organ Ballad
R282 Joropo
R283 Reggaeton
R284 French Waltz
R285 Merengue
R286 12-8 Ballad
R287 Norteno
R288 Jig
R289 Hawaiian
R290 Electronica
R291 Funky House
R292 Club Beat
R293 Retro Club
R294 Mod Chart Pop
R295 MOR Swing
R296 Retro Pop
R297 Rumba Flamenco
R298 Trance Pop
R299 Orch Big Band2
R300 Big Band Fast2
R301 Midnight Swing
R302 70's Chart Cntry
R303 Jazz Waltz Med
R304 Mariachi Waltz
R305 US March
R306 Guitar Rumba
R307 Slow Blues
R308 Jazz Waltz Fast
R309 70's Country Pop
R310 Dixieland
R311 40's Big Band
R312 Easy Country2

R313 Country Hits
 R314 Country 8 Beat
 R315 Sci-fi March
 R316 Tap Dance Swing
 R317 Orchestral Bolero
 R318 Gospel Sisters
 R319 Italian Waltz
 R320 6-8 March
 R321 Bluegrass
 R322 Mod Cntry Bld1
 R323 Scand Country1
 R324 Scand Country2
 R325 Scand Shuffle
 R326 Worship Slow
 R327 Disco Teens
 R328 Scand Bugg
 R329 Schlager Samba1
 R330 Schlager Samba2
 R331 Scand Slow Rock
 R332 Schlager 6-8
 R333 Schlager Fox
 R334 Highland Waltz
 R335 Italian Polka
 R336 Gruper
 R337 Danzon
 R338 Schlager Alp
 R339 Saeidy
 R340 Bhajan
 R341 Hip Hop Groove
 R342 Chart Pop1
 R343 Organ Groove
 R344 Chart Pop2
 R345 New R&B
 R346 Pop R&B
 R347 Chart R&B
 R348 Modern Shuffle
 R349 Blues Rock
 R350 Dream Dance
 R351 US Chart Hit
 R352 German Rock
 R353 Schlager Beat
 R354 Mellow Hip Hop
 R355 Classic Hip Hop
 R356 New Hip Hop
 R357 Duranguense
 R358 Laff
 R359 Ober Walzer
 R360 Bhangra
 R361 Zouk
 R362 German March
 R363 Enka
 R364 Bolero Lento

R365 Sherif fReggae
 R366 Beguine
 R367 Latin Disco
 R368 Tango5
 R369 Tango6
 R370 Rock &Roll
 R371 Rock & Roll Shfl
 R372 Oldies R & R
 R373 Detroit Pop1
 R374 Detroit Pop2
 R375 Worship Med
 R376 Worship Fast
 R377 Piano Boogie
 R378 Lovely Shuffle
 R379 60's Rock & Roll
 R380 Kool Funk
 R381 Blueberry Blues
 R382 Shuffle Blues
 R383 Mambo 3
 R384 Mambo 4
 R385 Soul
 R386 Skiffle
 R387 6-8Soul
 R388 Soul Brothers
 R389 Happy Reggae
 R390 Pop Latin
 R391 6-8Slow Rock
 R392 6-8 Modern
 R393 6-8 Orchestral
 R394 Schlager Shuffle
 R395 Schlager Pop
 R396 Schlager Rumba
 R397 Euro Pop Organ
 R398 70's French Hit
 R399 Italian Mazurka
 R400 Bohemian Waltz
 R401 Club Pop3
 R402 Schlager Italia2
 R403 Power Rock2
 R404 Rock'n Roll 3
 R405 Cool8 Beat2
 R406 British Pop3
 R407 British Pop4
 R408 8 Beat Soul3
 R409 Brit Pop2
 R410 Disco Latin2
 R411 Brit Pop Swing2
 R412 Fast Gospel2
 R413 Fast Bossa2
 R414 60's Guitar Pop2
 R415 90's Soul
 R416 Funk Shuffl 3

R417 8 Beat Rock3
 R418 Rock Cha Cha3
 R419 Gujira2
 R420 Rock Ballad2
 R421 Alp Ballad3
 R422 8 Beat Modern2
 R423 Euro Hip Hop2
 R424 Disco Pop2
 R425 Disco Philly2
 R426 Mod Big BandShfl2
 R427 Modern Big Band2
 R428 8 Beat Adria2
 R429 Disco Chocolate2
 R430 Euro Trance2
 R431 Euro Beat2
 R432 Techno3
 R433 Reggae2
 R434 Chillout Cafe2
 R435 Love Song2
 R436 French House2
 R437 Jazz Waltz3
 R438 Classic Piano2
 R439 Disco Party2
 R440 Club Dance2
 R441 Jazz Gtr Club2
 R442 Modern Jazz2
 R443 Polka Pop3
 R444 USA March3
 R445 Ober Polka2
 R446 Easy Listening2
 R447 Fast Band4
 R448 Fast Band5
 R449 Big Band Fast3
 R450 Orchestra Swing3
 R451 Orchestra Swing4
 R452 Rock Cha Cha4
 R453 Schlager Rock5
 R454 Organ Samba2
 R455 Gay Gordons2
 R456 Swing Waltz3
 R457 Reel2
 R458 Movie Ballad2
 R459 Cool Pop2
 R460 Rock Shuffle2
 R461 Hard Rock3
 R462 Hard Rock4
 R463 Club Pop4
 R464 8 Beat Pop3
 R465 8 Beat Pop4
 R466 60's RockN2
 R467 16 Beat Ballad3
 R468 Straight Rock2

R469 Easy Ballad2
 R470 Pop Mambo2
 R471 Bossanova2
 R472 Forro2
 R473 Standard Rock2
 R474 16 Beat Ballad3
 R475 Contemp Rock2
 R476 EP Ballad2
 R477 Fusion3
 R478 Fusion4
 R479 Funk2
 R480 Guitar Serenade2
 R481 Organ Ballad2
 R482 Joropo2
 R483 Reggaeton2
 R484 French Waltz2
 R485 Merengue2
 R486 Pop Ballad2
 R487 Norteno2
 R488 Jig2
 R489 Hawaiian2
 R490 70's Disco3
 R491 70's Disco4
 R492 Club Beat2
 R493 Rap2
 R494 Disco House2
 R495 MOR Swing2
 R496 Retro Pop2
 R497 Calypso2
 R498 Trance Pop2
 R499 Big Band Shuffle4
 R500 Big Band Shuffle5
 R501 Big Band Shuffle6
 R502 Finger Pickin2
 R503 Hully Gully3
 R504 Viennese Waltz3
 R505 Show Tune3
 R506 Rumba3
 R507 Schlager Rock4
 R508 Jazz Waltz Fast2
 R509 Country Ballad3
 R510 Dixieland2
 R511 French Jazz2
 R512 Easy Country3
 R513 Country Hits2
 R514 Country 8 Beat2
 R515 Blue Grass7
 R516 Blue Grass8
 R517 Blue Grass9
 R518 Gospel Sisters2
 R519 Italian Waltz2
 R520 Limbo Rock3

R521 Bluegrass2
 R522 Country Brothers2
 R523 Scand Country3
 R524 Scand Country4
 R525 Scand Shuffle2
 R526 70's Chart Cntry2
 R527 Pub Piano3
 R528 Polka3
 R529 Samba5
 R530 Samba6
 R531 Jive3
 R532 Fox Trot3
 R533 Pasodoble3
 R534 Highland Waltz2
 R535 Schlager Polka3
 R536 Gruper
 R537 Danzon2
 R538 Schlager Alp2
 R539 Saeidy2
 R540 Bhajan2
 R541 Hip Hop Groove2
 R542 Hip Shuffle2
 R543 Organ Groove2
 R544 Chart Pop3
 R545 Country Ballad2
 R546 Romantic Ballad2
 R547 Analog Ballad2
 R548 Electro Pop2
 R549 Blues Rock2
 R550 Rave2
 R551 US Chart Hit2
 R552 German Rock2
 R553 Schlager Beat2
 R554 Disco Funk2
 R555 Disco Samba2
 R556 New Hip Hop2
 R557 Cat Groove3
 R558 Laff2
 R559 Pop Waltz3
 R560 Bhangra2
 R561 Twist2
 R562 German March2
 R563 Enka2
 R564 Bolero Lento2
 R565 Midnight Swing2
 R566 French Jazz3
 R567 Latin Party Pop2
 R568 Tango7
 R569 Tango8
 R570 Parranda2
 R571 Latin Rock2
 R572 Acoustic Rock2

R573 80's Pop2
 R574 60's Soul2
 R575 Fusion Shuffl3
 R576 Fusion Shuffl4
 R577 16 Beat Pop3
 R578 16 Beat Pop4
 R579 60's Rock & Roll2
 R580 Brit Rock Pop2
 R581 Blueberry Blues2
 R582 Skiffle2
 R583 Mambo5
 R584 Mambo6
 R585 Soul2
 R586 Classic 8Beat2
 R587 Bolero2
 R588 Soul Brothers2
 R589 Happy Reggae2
 R590 Pop Latin2
 R591 6-8Slow Rock2
 R592 6-8 Modern2
 R593 6-8 Orchestral2
 R594 Slow Soul2
 R595 Piano Ballad2
 R596 Disco Trot2
 R597 Disco Hands2
 R598 UK Pop2
 R599 Italian Mazurka2
 R600 Bohemian Waltz2

Демо песни

D01 Jockey Club
 D02 Yang On A Horse To Transport Grain
 D03 Steping Higher And Higher
 D04 US Taihu Lake
 D05 Osmanthus everywhere open in August
 D06 Central government
 D07 Tathagata
 D08 Aobaoshan
 D09 Yangming Chunxiao
 D10 Jasmine
 D11 Jaunty
 D12 Good Day
 D13 Childhood
 D14 Zi ZhuTiao
 D15 Auspicious TREBLE
 D16 Trials of a long journey always intelligence
 D17 In that faraway place
 D18 Prairie Song
 D19 Look at home
 D20 On affordable
 D21 You set off to the chapeau
 D22 The Qinghai-Tibet Plateau
 D23 Same Song
 D24 Hill Road Bending 18
 D25 Farewell
 D26 Happy home
 D27 Place peach bloom
 D28 New Century
 D29 Gave me a Red Rose
 D30 Kangding Love Song
 D31 Dansolde
 D32 Beijing Tune
 D33 Yi Jian Mei
 D34 Rumanxilou
 D35 Goodbye Dabieshan
 D36 Happy Chinese New Year
 D37 Dreams Of Riverboat
 D38 The Penghu bending Grandmother
 D39 Heart-Throb
 D40 Shepherd Front
 D41 Hotel Pacific
 D42 1900's Madness
 D43 Family Restaurant
 D44 To Flush Waves Johnny
 D45 Zimbada? hand?
 D46 Paradise
 D47 Birthday
 D48 Carmen
 D49 Cavatina
 D50 Jingle Bells
 D51 Silent Night
 D52 O Christmas Santa Claus

D53 When The Saints Go Marchin In
 D54 Oh Susanna
 D55 Moon River
 D56 ABC Word
 D57 We Wish You A Merry Christmas
 D58 Six Little Ducks
 D59 Mary Had A Little Lamb
 D60 Moonlight Bay
 D61 American Beauty Rag
 D62 Crazy Arms
 D63 Before the Next TearDrop Falls
 D64 Waltz Op64 No.1 By Chopin
 D65 Piano Sonata
 D66 The Beautiful Blue Danube
 D67 The Crave
 D68 Tea for Two
 D69 Sleigh Ride
 D70 Rudolph The Red Nosed Reindeer
 D71 Santa Claus Is Coming To Town
 D72 Traumerei
 D73 Clock
 D74 Humoresque
 D75 Frohlicher Landmann
 D76 Canon
 D77 Waltz
 D78 Greensleeves
 D79 Polka
 D80 Arabesque

15: Аппликатура простых аккордов

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

16. Приложение 1

Chord Type Root	M	m	7	m7	dim7	M7	m7-5	dim
C								
C#(D#)								
D								
(D#)/E								
E								
F								
F#(G#)								
G								
(G#)/A								
A								
(A#)/B								
B								

Chord Type Root	aug	sus4	7sus4	m add9	mM7	7-5	add9
C							
C#(D#)							
D							
(D#)/E							
E							
F							
F#(G#)							
G							
(G#)/A							
A							
(A#)/B							
B							

17. Приложение 2

Соответствующая схема группы клавишных и ударных

							
A 1	A # 1	B 1	C 2	C # 2	D 2	D # 2	E 2
							
F 2	F # 2	G 2	G # 2	A 2	A # 2	B 2	C 3
							
C # 3	D 3	D # 3	E 3	F 3	F # 3	G 3	G # 3
							
A 3	A # 3	B 3	C 4	C # 4	D 4	D # 4	E 4
							
F 4	F # 4	G 4	G # 4	A 4	A # 4	B 4	C 5
							
C # 5	D 5	D # 5	E 5	F 5	F # 5	G 5	G # 5
							
A 5	A # 5	B 5	C 6	C # 6	D 6	D # 6	E 6
							
F 6	F # 6	G 6	G # 6	A 6	A # 6	B 6	C 7
							
C # 7	D 7	D # 7	E 7	F 7	F # 7	G 7	G # 7
							
A 7	A # 7	B 7	C 8	C # 8	D 8	D # 8	E 8
							
F 8	F # 8	G 8	G # 8	A 8	A # 8	B 8	C 9