

各部の名称

⚠ ご注意

- 正しくお使いいただくために、ご使用前に別紙「安全上のご注意」と「使用上のご注意」をよくお読みください。取扱説明書は必要なときにすぐに見ることができるよう、手元に置いてください。
- 組み立ての際は、指などをはさまないように、十分にご注意ください。
- キーボードを載せたままでスタンドの高さを調節しないでください。
- スタンドのパイプの中に指を入れないでください。けがをする恐れがあります。
- スタンドを使用するときは、締め付けネジやネジを確実に締めてください。特に演奏前には、確実に取り付けられているかどうか確認してください。確実に取り付けられていないと、キーボードが落下してけがをする恐れがあります。
- キーボードの中心がスタンドの中心になるように設置してください。
- キーボードに接続したケーブルは、付属のケーブル・クリップで固定してください。
- キーボードを載せたまま、スタンドを移動しないでください。転倒や落下の恐れがあります。

組み立て手順

1 支柱を希望の高さにセットします。

1) 付属のチューニング・キーを使用して、高さ調整ネジ (4 本) を全部取りはずします。

2) 支柱をスライドさせて、下図を参考にして希望の高さに調節します。

設定	高さ	備考
高さ 1	645mm	開梱時は、高さ 1 になっています。
高さ 2	730mm	穴が 4 つ見える位置で正確に穴をあわせませす。
高さ 3	815mm	穴が 8 つ見える位置で正確に穴をあわせませす。

3) 穴を正確にあわせてから、取りはずした 4 本の高さ調節ネジでしっかりと固定します。

2 レッグを仮固定します。

1) スタンドを図のように置き、付属の六角レンチで (1) のボルトを取りはずします。

2) 支柱を図のように起こし、支柱を支えながらはずしたボルトで支柱とレッグを仮固定します。
※ (1) のボルトは、図のように斜め下方向に少し傾けて取り付けるようにします。

3 アームを仮固定します。

1) 支柱の (2) のボルトを取りはずします。

2) アームを回転させて水平にしてから、取りはずしたボルトで仮固定します。
※ (2) のボルトは、図のように斜め上方向に少し傾けて取り付けるようにします。

4 サポート・バーの長さを調節します。

1) チューニング・キーを使って、サポート・バーに付いているサポート・バー固定ネジをはずしておきます。
※ はずしたネジは、あとで使います。

2) スタンドの高さを 2 または 3 で使用する場合は、連結バーをサポート・バーに取り付けます。
※ 高さ 1 で使用する場合は、連結バーは不要です。連結バー・ホルダーにつけておくこと紛失を防止できます。
※ 出荷時、連結バーは、連結バー・ホルダーに取り付けられています。
高さ 2 で使用する場合は、左右 1 本ずつ取り付けます。
高さ 3 で使用する場合は、左右 2 本ずつ取り付けます。
※ サポート・バーと連結バーは、確実に締めこんでください。

5 サポート・バーとメモリー・ロックをスタンドに固定します。

1) チューニング・キーでレッグに付いている左右のメモリー・ロックの固定ネジをゆるめます。

スタンドの高さを変える場合

1 メモリー・ロックとサポート・バーをスタンドから取りはずします。

1) チューニング・キーでメモリー・ロックのネジを取りはずし、メモリー・ロックをレッグから取りはずします。

2) サポート・バーを持ちながらチューニング・キーでサポート・バー固定ネジを取りはずし、サポート・バーを取りはずします。(左右)

3) 「組み立て手順」6 で固定した (1) (2) のボルトを、付属の六角レンチを使って 2 周分だけゆるめます。

4) 安全に高さを変更するために、スタンド寝かせます。

2 支柱を希望の高さにセットします。

「組み立て手順」1 と同じ方法で、高さを調節します。

3 使用する高さに応じて連結バーを着脱します。

「組み立て手順」4 の 2) と同じ方法で、高さを調節します。

4 スタンドを起こします。

支柱を両手で持って、ゆっくりとスタンドを起こします。

2) 使用する高さに合わせて、図のような位置で仮固定します。

3) サポート・バーを起こし、アームを軽く押し上げながら先端付近の大きい穴に挿入し、手順 4 で取りはずしておいた固定ネジでしっかりと固定します。

4) メモリー・ロックを固定します。

6 手順 2 ～ 3 で仮固定した (1) (2) のボルトを、付属の六角レンチでしっかりと固定します。

7 すべての固定ネジやボルトが緩んでいないか確認します。

がたつきがある場合は、アジャスターで調節します。


© 2008 ローランド株式会社 本書の一部、もしくは全部を無断で複写・転載することを禁じます。

Roland は、日本国およびその他の国におけるローランド株式会社の商標または登録商標です。

04788901

2KH

Names of Things

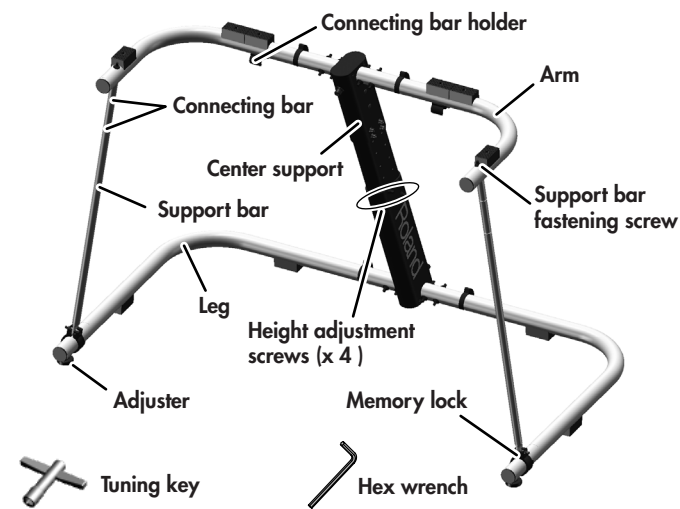

Caution

- Before using this stand, carefully read the sections entitled: "USING THE STAND SAFELY" and "IMPORTANT NOTES" (separate sheet). These sections provide important information concerning the proper operation of the stand. The manual should be saved and kept on hand as a convenient reference.
- Be careful not to pinch your fingers when setting up the stand.
- Do not adjust the height of the stand while the keyboard is resting on it.
- Do not put your fingers into the pipes of the stand. Doing so may cause injury.
- Firmly tighten the bolts and screws before using the stand. In particular, check that everything is secure before a performance. If any parts are loose, your keyboard may fall down, causing injury.
- Place your keyboard so that it is centered on the middle of the stand.
- Use the included cable clip to secure any cables connected to your keyboard.
- Do not move the stand with the keyboard resting on it. Doing so may cause the keyboard to overturn or fall.

Setting up the stand

1 Adjust the center support to the desired height.


- 1) Using the included tuning key, remove all four of the height adjustment screws.
- 2) Refer to the following illustration, and slide the center support to obtain the desired height.

Setting	Height	Remarks
Height 1	645 mm	When you unpack the carton, the height is in the 1 position.
Height 2	730 mm	Accurately align the holes so that four holes are visible.
Height 3	815 mm	Accurately align the holes so that eight holes are visible.

- 3) After you have aligned the holes accurately, firmly fasten the center support using the four height adjustment screws you removed.


2 Provisionally fasten the leg.

- 1) Place the stand as shown in the illustration, and use the included hex wrench to remove bolt (1).
 - 2) Raise the center support as shown in the illustration, and while holding the center support in place, use the bolt you removed to provisionally fasten the center support to the leg.
- * Tighten bolt (1) at a slightly downward angle as shown in the illustration.

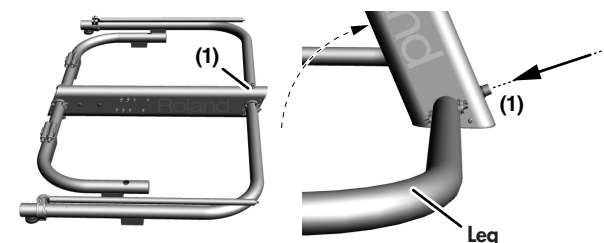

3 Provisionally fasten the arm.

- 1) Remove bolt (2) from the center support.
 - 2) Rotate the arm so that it is parallel with the leg, and provisionally fasten it using the bolt you removed.
- * Tighten bolt (2) at a slightly upward angle as shown in the illustration.

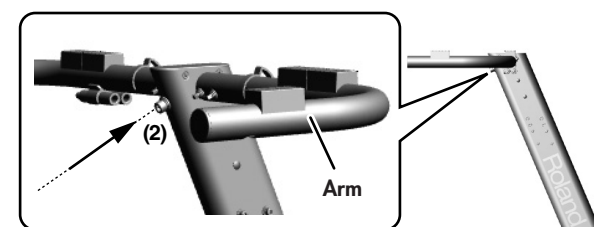

4 Adjust the length of the support bars.

- 1) Using the tuning key, remove the support bar fastening screws from the support bars.
- * The screws you removed will be used later.



- 2) If you're using the stand at height 2 or 3, attach the connecting bars included with the support bars.
- * If you're using the stand at height 1, the connecting bars are not needed. To avoid losing them, you can attach them to the connecting bar holder.
- * When the KS-G8 is shipped from the factory, the connecting bars are attached to the connecting bar holders.
- If you're using the stand at **height 2**, attach one connecting bar each to left and right support bars.
- If you're using the stand at **height 3**, attach two connecting bars each to left and right support bars.
- * The support bars and connecting bars must be tightly fastened.




5 Fasten the support bars and memory locks to the stand.

- 1) Using the tuning key, loosen the fastening screws from the left and right memory locks that are attached to the leg.

Changing the height of the stand

1 Remove the memory locks and support bars from the stand.

- 1) Using the tuning key, remove the memory lock screws, and remove the memory locks from the leg.
- 2) While you hold the support bar, use the tuning key to remove the fastening screws, and then remove the support bars (left and right).
- 3) Using the supplied hex wrench, loosen by two turns the bolts (1) and (2) that you fastened in step 6 of "Setting up the stand."
- 4) In order to change the height safely, lay the stand face down.

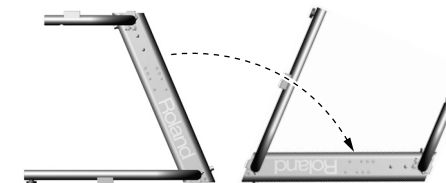

2 Adjust the center support to the desired height.

Adjust the height as described in step 1 of "Setting up the stand."


3 Attach or remove the connecting bars as appropriate for the desired height.

Adjust the height as described in 2) of step 4 of "Setting up the stand."

4 Place the stand upright.

Grasp the center support using both hands, and slowly raise the stand to its upright position.

- 2) According to the height at which you're using the stand, provisionally fasten the memory locks at the position shown in the illustration.

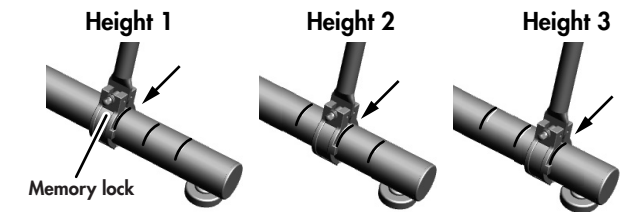

- 3) Raise the support bars, lightly lift up the arm, insert each support bar into the large hole near the end, and firmly fasten it using the fastening screw you removed in step 4.




- 4) Fasten the memory locks.

- 6) Using the supplied hex wrench, firmly tighten bolts (1) and (2), which were fastened provisionally in steps 2 and 3.

- 7) Make sure that none of the fastening screws or bolts are loose.

5 Fasten the support bars and memory locks to the stand.

- 1) Provisionally fasten the support bar to the memory lock as shown in the illustration below.
- 2) Position the memory locks so that the head of the screw is on the outside for both the left and right sides, and provisionally fasten them in the appropriate position for the height you're using, as shown in the illustration.

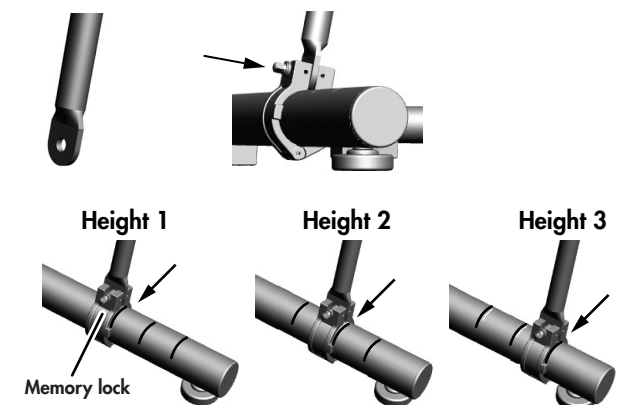

- 3) Raise the support bars, lightly lift up the arm, insert each support bar into the large hole near the end, and firmly fasten it using the fastening screw you removed in 2) of step 1.
- 4) Fasten the memory locks.

- 6) Using the supplied hex wrench, firmly tighten bolts (1) and (2), which were loosened in 3) of step 1.

- 7) Make sure that none of the fastening screws or bolts are loose.

If the stand rocks, adjust the height of the adjusters.